 


FORTINET

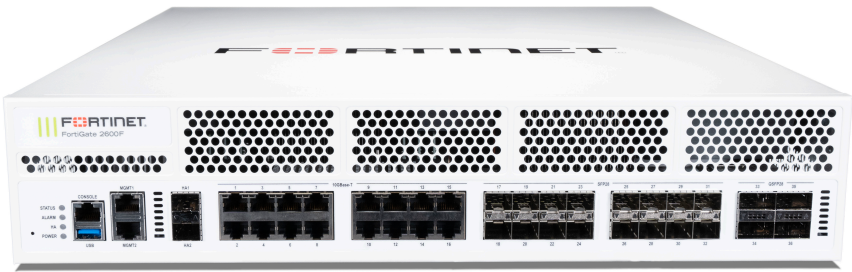

QuickStart Guide

FortiGate 2600F / 2601F -DC

Before you begin

Register your device to access FortiGuard updates, cloud management, firmware upgrades, technical support and warranty coverage.

<https://support.fortinet.com>

 


February 26, 2025


Copyright© 2021 Fortinet, Inc. All rights reserved. Fortinet®, FortiGate®, FortiCare® and FortiGuard®, and certain other marks are registered trademarks of Fortinet, Inc., in the U.S. and other jurisdictions, and other Fortinet names herein may also be registered and/or common law trademarks of Fortinet. All other product or company names may be trademarks of their respective owners. Performance and other metrics contained herein were attained in internal lab tests under ideal conditions, and actual performance and other results may vary. Network variables, different network environments and other conditions may affect performance results. Nothing herein represents any binding commitment by Fortinet, and Fortinet disclaims all warranties, whether express or implied, except to the extent Fortinet enters a binding written contract, signed by Fortinet's General Counsel, with a purchaser that expressly warrants that the identified product will perform according to certain expressly-identified performance metrics and, in such event, only the specific performance metrics expressly identified in such binding written contract shall be binding on Fortinet. For absolute clarity, any such warranty will be limited to performance in the same ideal conditions as in Fortinet's internal lab tests. In no event does Fortinet make any commitment related to future deliverables, features or development, and circumstances may change such that any forward-looking statements herein are not accurate. Fortinet disclaims in full any covenants, representations, and guarantees pursuant hereto, whether express or implied. Fortinet reserves the right to change, modify, transfer, or otherwise revise this publication without notice, and the most current version of the publication shall be applicable.

For Product License Agreement / EULA and Warranty Terms, visit <https://www.fortinet.com/content/dam/fortinet/assets/legal/EULA.pdf>


Box Includes

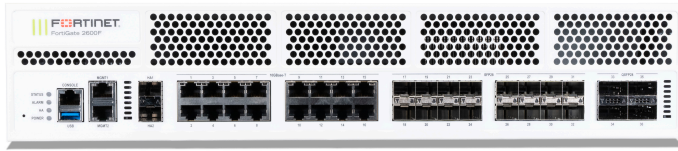

FortiGate 2600F/2601F -DC

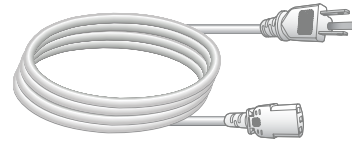 


2x AC Power Cables
(AC models only)

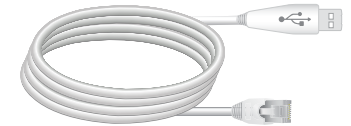 


1x Console Cable



 
QuickStart Guide

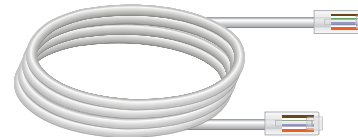

1x Ethernet Cable

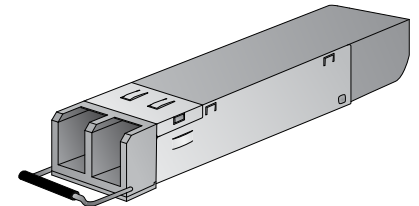 


2x SFP+ Transceivers

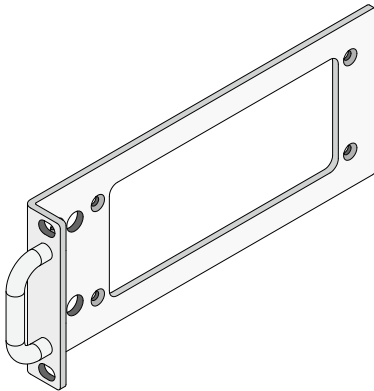 


2x Rack-Mount Brackets



 
12x Bracket Screws

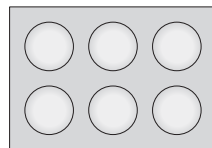

6x Rubber Feet

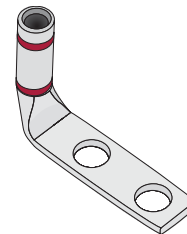 


2x Grounding Lugs
(DC models only)

 

6x DC Terminal Rings
(DC models only)

 Front Panel FG-2600F Series

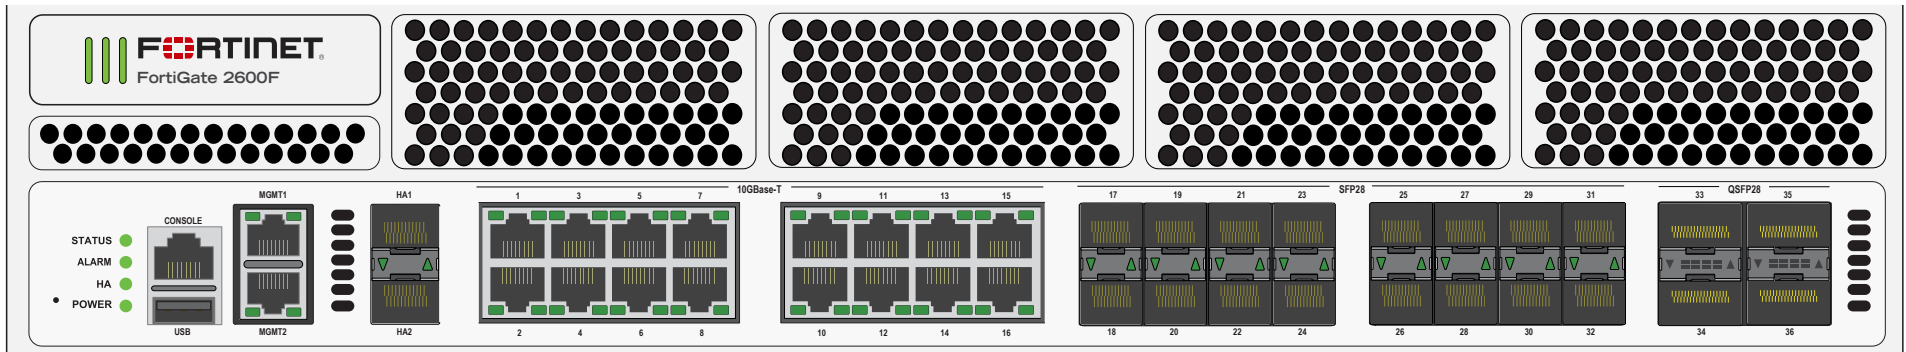

1 LED Indicators

STATUS

- **Green:** Operating normally
- **Flashing Green:** Booting up
- **Red:** Major alarm

HA

- **Green:** Operating in an HA cluster
- **Red:** HA failure
- **Off:** HA disabled

ALARM

- **Red:** Major alarm
- **Amber:** Minor alarm
- **Off:** No alarms

POWER

- **Green:** The unit is on
- **Off:** The unit is off

2 CONSOLE (RJ45) port for serial port management

USB (USB A) USB 3.0 server port

3 Management Ports (RJ45) 1GE for device management

 
MGMT1 default IP is 192.168.1.99

MGMT2 default IP is 192.168.2.99

4 HA1 & HA2 Ports (RJ45) high availability ports


5 Ports 1 to 16 (RJ45)

- **Green:** Connected at 10Gbps or 1Gbps
- **Flashing Green:** Transmitting data
- **Off:** No link established

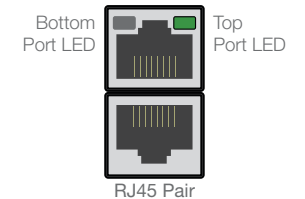


6 Ports 17 to 32 (SFP28)

 - ▼ **Green:** Link established at 25, 10 or 1 Gbps
- **Flashing Green:** Transmitting data
- ▼ **Off:** No link established


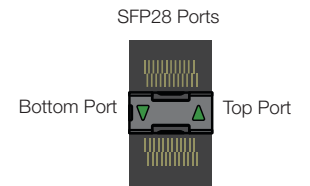


7 Ports 33 to 36 (QSFP28)

 - ▼ **Green:** Link established at 100 or 40 Gbps
- **Flashing Green:** Transmitting data
- ▼ **Off:** No link established

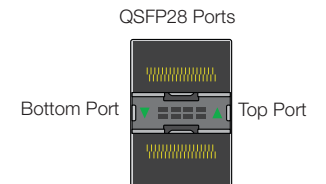

Rear Panel AC Models

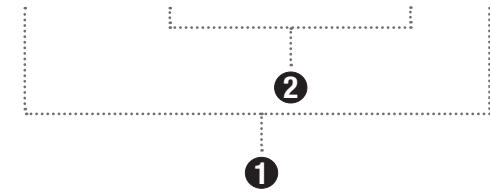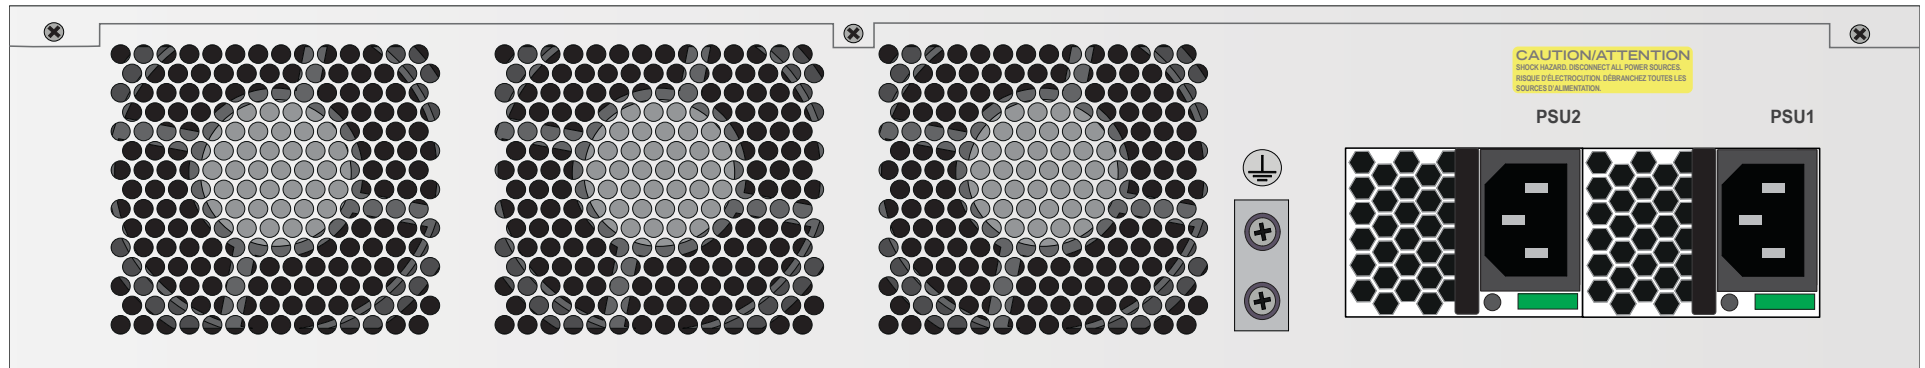  


- 1 Redundant Power Supplies (x2)**
100-240 VAC, 7-3A, 50/60Hz

2 PSU LED Status

- **Green:** Power supply providing power
- ⚡ **Flashing Green:** Power supply not providing power
- **Off:** Error or no power
- **Red:** AC cord unplugged or AC power lost
- ⚡ **Flashing Red:** Power supply warning event

 Rear Panel DC Models

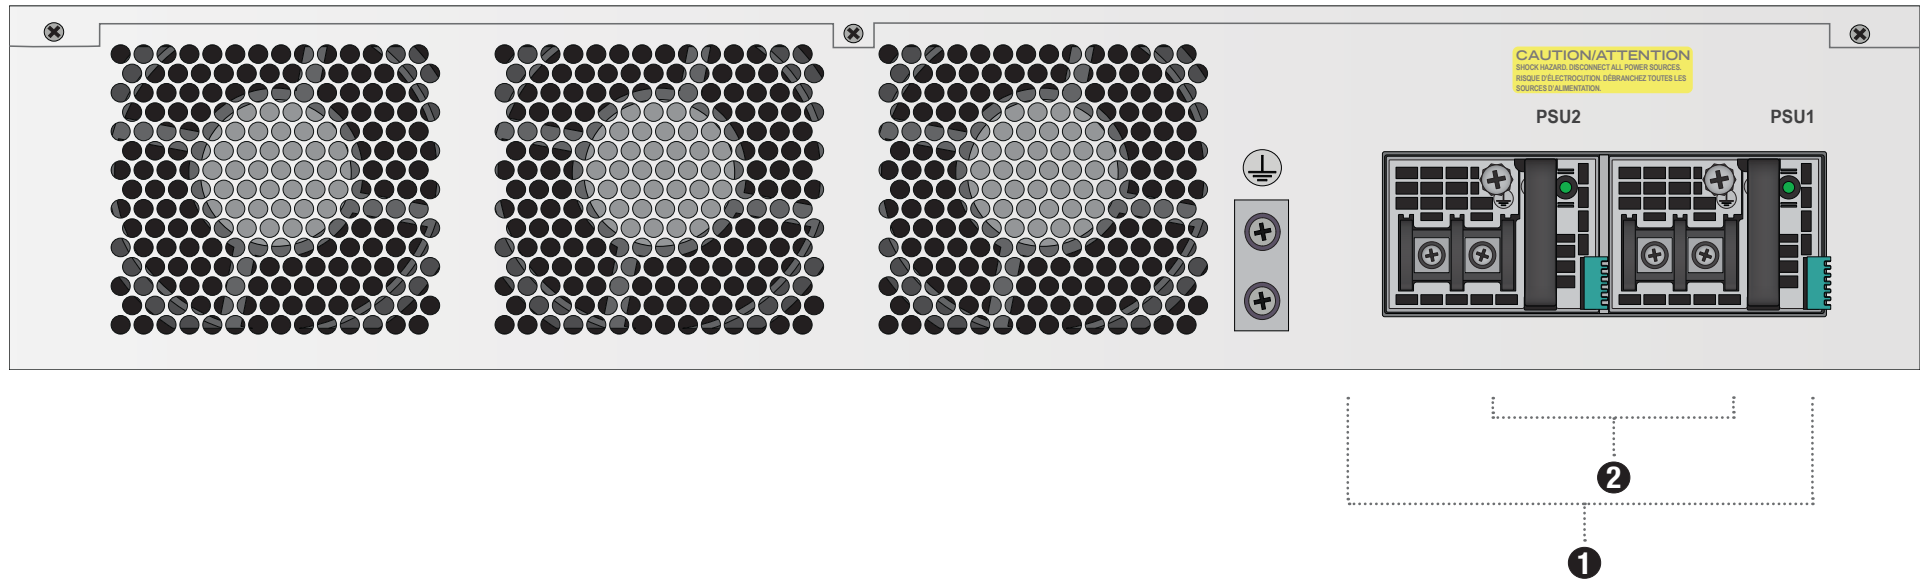

1 Redundant DC Power Supplies (x2)

-48Vdc to -60Vdc, 12-14A max

 
2 PSU LED Status

- Green: Input and output operating normally
- Flashing Green: Input power present, no output
- Off: Error or no power
- Amber: No input power, redundant supply is on
- Flashing Amber: Power supply warning events

Rack Installation

This device mounts in a standard 19 inch rack.

1. **Attach** the provided rack-mount **brackets and screws**
2. **Position** the device and **slide into the rack**
3. **Fasten** rack screws to **secure the device**

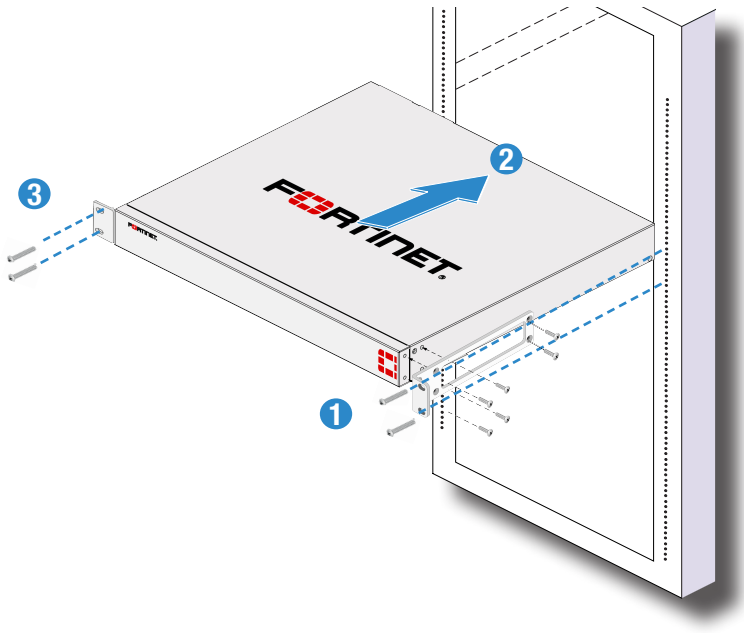

Caution: Ensure there is at least 1.5 inches of space above and below the device

 
Warning: For safety, it is recommended that two people install the device

Note: The [optional rail kit](#) uses the 3RU handles (not the 2RU handles).


Rail Slide Kit (Optional)

Sold separately, the rail slide kit can be used to mount the device.

Refer to the product datasheet for details and ordering information.

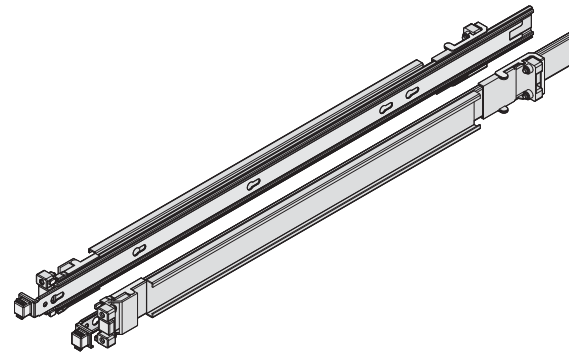


Mounting Rail Assembly

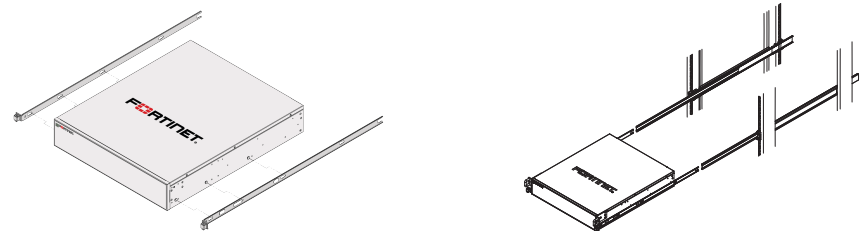 

For more information, please visit <http://docs.fortinet.com>

 
Basic Connections - AC Model

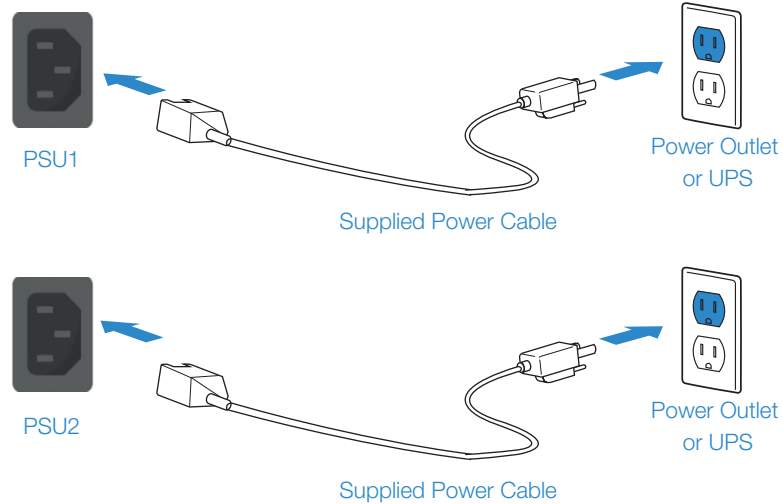

Plug in your device to a [power outlet](#) using the provided [power cables](#).

Note: We recommend connecting your FortiGate to an [uninterruptible power supply \(UPS\)](#) in case of a power outage

 Basic Connections - DC Model

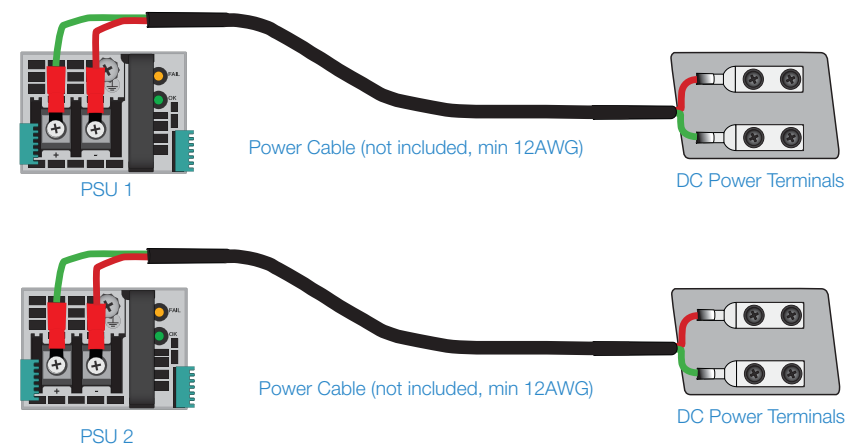


WARNING:

- This product is only intended for installation and use in a Restricted Access Location.
- The DC power cables are intended to be used only for in-rack wiring; must be routed away from sharp edges, and must be adequately fixed to prevent excessive strain on the wires and terminals.
- DC cables must be a minimum of **12 AWG**.
- Ensure the terminal rings are securely and safely fastened to the PSU terminals.

Ground connection

 
A grounding lug is provided with DC models to be used with a 12 AWG ground wire.

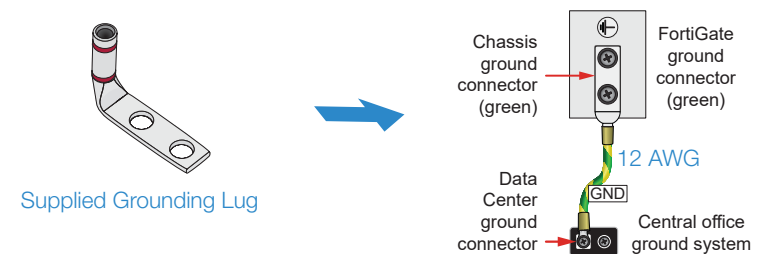

SFP Installation


To install the SFP transceivers:

 1. Slide the SFP into the cage socket until it clicks into place
2. Lift the latch to lock the SFP

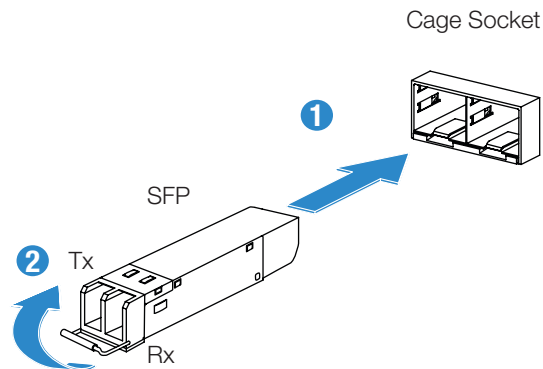

To remove the SFP transceivers:

 1. Lower the latch to unlock the SFP
2. Pull the SFP out of the cage socket carefully

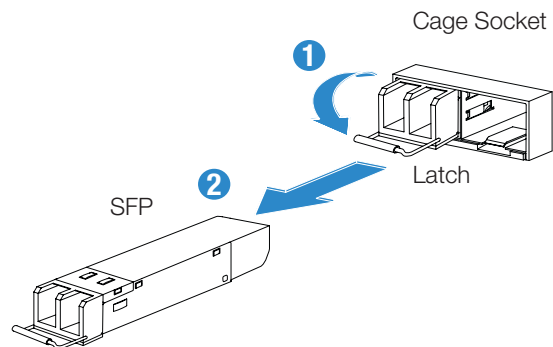

Setup Options

Set up your device locally. Choose one of the following options to complete your setup.



Local Setup

A GUI

An [easy-to-use GUI](#), compatible with most web browsers. To minimize scrolling, the screen resolution should be at least 1280 x 1024 pixels.



Smartphone Setup

B FortiExplorer

FortiExplorer for iOS is a [user-friendly iOS application](#) that helps you [configure](#), [manage](#), and [monitor](#) appliances. FortiExplorer rapidly provisions, deploys, and monitors Security Fabric components such as [FortiGate](#), [FortiWiFi](#), and [FortiAP](#) devices.



Local Setup

C Command Line Interface (CLI)

 
An alternate configuration tool from the web-based manager that uses a [terminal emulation](#) application to [type commands](#) or upload batches of commands from a text file or [configuration script](#). Requires a console cable (available for purchase).

1. Connect **MGMT** to the **Management Computer** using the supplied **Ethernet cable**

2. Enable **DHCP** or set the Management Computer's **IP** and **subnet** to:

Static IP Address: 192.168.1.1
Subnet Mask: 255.255.255.0

3. Visit <https://192.168.1.99> in a web browser

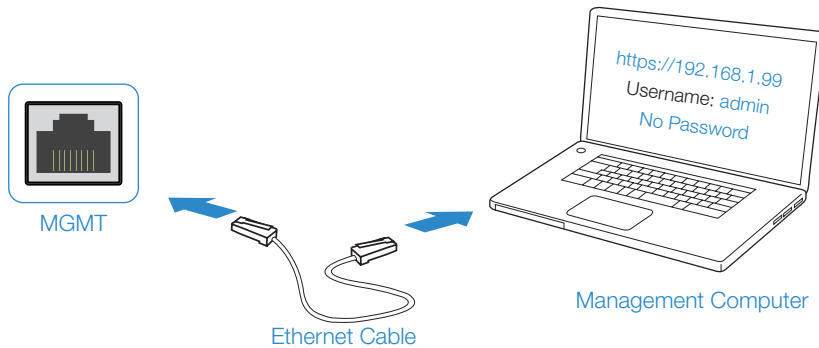

4. Log in with username **admin** and **no password**

The screenshot shows the FortiGate login interface. It has a green header with the FortiGate logo. Below the header are two input fields: 'Username' and 'Password'. At the bottom is a green 'Login' button.

5. When prompted to register, enter your **Fortinet credentials**



The screenshot shows the 'FortiCare Registration Required' dialog box. It displays the Serial Number 'FG800D3915800295' and provides buttons for 'Login' and 'Create Account'. There are input fields for 'Email', 'Password', 'Country', and 'Reseller'. A link for 'Forgot your password?' is also present, along with 'OK' and 'Cancel' buttons at the bottom.

6. The **FortiCare Support Status** in the FortiOS License Information widget will change to **Registered**

License Information		
Entitlement	Status	
FortiCare Support	✓ Registered	
Enhanced Support	✓ 8x5 support - expires on 2020/03/08	
Virtual Machine	✓ Valid - expires on 2020/03/06	
Allocated vCPUs	25% 1 / 4	
Allocated RAM	1002 MiB	
Firmware & General Updates	✓ Licensed - expires on 2020/03/08	
Application Control Signatures	⊙ Version 6.00741	
Device & OS Identification	⊙ Version 1.00084	
Internet Service Database Definitions	⊙ Version 7.00109	
Intrusion Prevention	✓ Licensed - expires on 2020/03/08	
IPS Definitions	⊙ Version 6.00741	
IPS Engine	⊙ Version 5.00031	
Malicious URLs	⊙ Version 2.00430	
Botnet IPs	⊙ Version 1.00000	

1 USB Setup

  1. Download and launch the [FortiExplorer iOS App](#)
2. Connect your [Apple Lightning to USB cable](#) to the FortiGate/FortiWiFi [USB port](#)
3. Tap your device when it appears in [FortiExplorer](#)
4. Log in using your [Fortinet credentials](#)
5. You can now configure your device

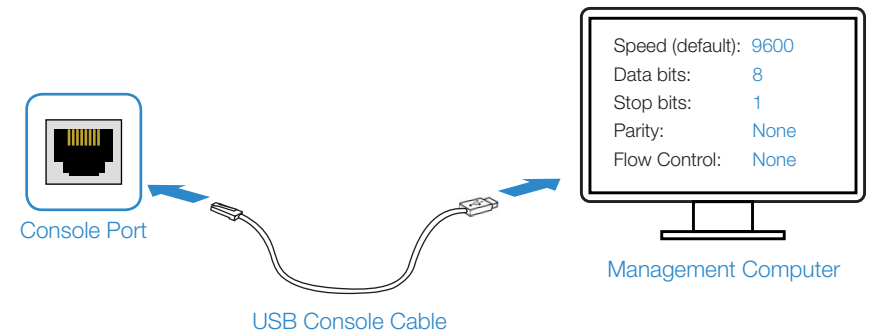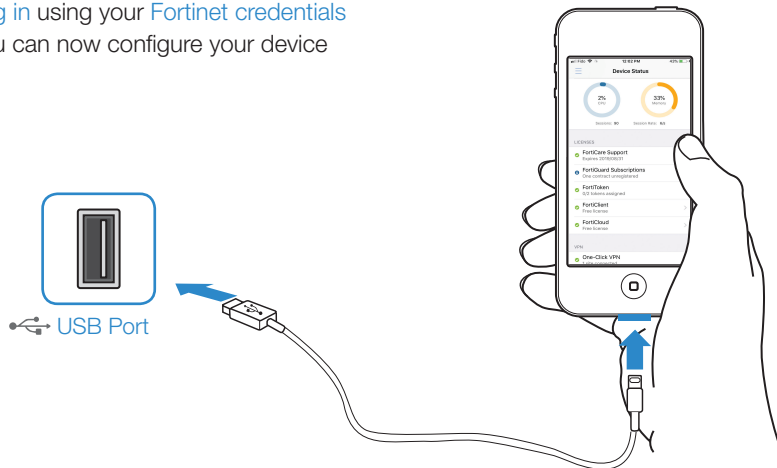

1. Connect the [Console Port](#) with a [console cable](#) to the [Management Computer](#)
2. Start a [terminal program](#) on the [Management Computer](#) and select an available [COM Port](#) using the following default settings:

Baud rate: 9600
Data bits: 8
Parity: None
Stop bits: 1
Flow control: None

3. Log in using your [Fortinet credentials](#)
4. You can now configure your device

```
FortiGate # ?
config      Configure object.
get         Get dynamic and system information.
show        Show configuration.
diagnose    Diagnose facility.
execute     Execute static commands.
exit        Exit the CLI.

FortiGate # config ?
alertemail  Alert email configuration.
antivirus   AntiVirus configuration.
application Application control configuration.
client-reputation Client reputation tracking configuration
dlp         DLP configuration.
endpoint-control Endpoint control configuration.
firewall    Firewall configuration.
ftp-proxy   FTP proxy configuration.
gui         GUI configuration.
icap        ICAP client configuration.
imp2p       IM & P2P policy configuration.
ips         IPS configuration.
--More--
```

Note: Type [?](#) for a [list of commands](#). Type a command with [?](#), such as [config ?](#) to list the options. For advanced options, visit support.fortinet.com

Cautions and Warnings

Environmental specifications

Ambient operating temperature: 0°C to 40°C

Rack Mount Instructions - The following or similar rack-mount instructions are included with the installation instructions:
Instructions de montage en rack - Les instructions de montage en rack suivantes ou similaires sont incluses avec les instructions d'installation:

Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (Tma) specified by the manufacturer.
Température ambiante élevée – S'il est installé dans un rack fermé ou à unités multiples, la température ambiante de fonctionnement de l'environnement du rack peut être supérieure à la température ambiante de la pièce. Par conséquent, il est important d'installer le matériel dans un environnement respectant la température ambiante maximale (Tma) stipulée par le fabricant.

Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
Ventilation réduite – Installation de l'équipement dans un rack doit être telle que la quantité de flux d'air nécessaire au bon fonctionnement de l'équipement n'est pas compromise.

Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
Chargement Mécanique – Montage de l'équipement dans le rack doit être telle qu'une situation dangereuse n'est pas liée à un chargement mécanique inégal.

Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.
Surtenstion – Il convient de prendre l'ensemble des précautions nécessaires lors du branchement de l'équipement au circuit d'alimentation et être particulièrement attentif aux effets de la suralimentation sur le dispositif assurant une protection contre les courts-circuits et le câblage. Ainsi, il est recommandé de tenir compte du numéro d'identification de l'équipement.

Reliable Earthing - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g. use of power strips).
Fiabilité de la mise à la terre – Fiabilité de la mise à la terre de l'équipement monté en rack doit être maintenue. Une attention particulière devrait être accordée aux connexions d'alimentation autres que les connexions directes au circuit de dérivation (par exemple de l'utilisation de bandes de puissance).

Refer to specific Product Model Data Sheet for Environmental Specifications (Operating Temperature, Storage Temperature, Humidity, and Altitude)
Référez à la Fiche Technique de ce produit pour les caractéristiques environnementales (Température de fonctionnement, température de stockage, humidité et l'altitude).

Safety

Warning: Equipment intended for installation in Restricted Access Location.
Avertissement: Le matériel est conçu pour être installé dans un endroit où l'accès est restreint.

Warning: A readily accessible disconnect device shall be incorporated in the building installation wiring.
Avertissement: Un dispositif de déconnexion facilement accessible doit être incorporé dans l'installation électrique du bâtiment.

Battery – Risk of explosion if the battery is replaced by an incorrect type. Do not dispose of batteries in a fire. They may explode. Dispose of used batteries according to your local regulations. IMPORTANT: Switzerland: Annex 4.10 of SR814.013 applies to batteries.
Batterie – Risque d'explosion si la batterie est remplacée par un type incorrect. Ne jetez pas les batteries au feu. Ils peuvent exploser. Jetez les piles usagées conformément aux réglementations locales. IMPORTANT: Suisse: l'annexe 4.10 de SR814.013 s'appliquent aux batteries.

警告
本電池如果更換不正確會有爆炸的危險
請依製造商說明書處理用過之電池

CAUTION: Shock Hazard. Disconnect all power sources.
ATTENTION: Risque d'électrocution. Débranchez toutes les sources d'alimentation.
Caution: Slide/rail mounted equipment is not to be used as a shelf or a work space.
Attention: Un équipement monté sur bâti ne doit pas être utilisé sur une étagère ou dans un espace de travail.

Regulatory Notices

Federal Communication Commission (FCC) – USA

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received; including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

WARNING: Any changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Industry Canada Equipment Standard for Digital Equipment (ICES) – Canada

CAN ICES-003 (A) / NMB-003 (A)

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

European Conformity (CE) - EU

This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.



Voluntary Control Council for Interference (VCCI) – Japan

この装置は、クラスA機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI – A

Product Safety Electrical Appliance & Material (PSE) – Japan

日本では電気用品安全法(PSE)の規定により、同梱している電源コードは本製品の専用電源コードとして利用し、他の製品に使用しないでください。

Bureau of Standards Metrology and Inspection (BSMI) – Taiwan

The presence conditions of the restricted substance (BSMI RoHS table) are available at the link below:
限用物質含有情況表 (RoHS Table) 請到以下 網址下載:
<https://www.fortinet.com/bsmi>

警告： 為避免電磁干擾，本產品不應安裝或使用於住宅環境。

請仔細閱讀以下說明
本設備勿置於潮濕處。
連接至電源前，請先檢查電壓。
當設備不用時，請將所有電源線拔除，避免電壓不穩而造成傷害。
勿將任何液體灑入設備中，避免線路短路。
基於安全理由，只有受到專業訓練的從業人員，才可以打開本設備。
請勿自行調整或修理已通電的設備，以確保您的安全。
如不小心受傷，請立刻找急救人員給予您適當的救護，千萬別因傷勢輕微而忽略自己的傷勢。

請依照台灣法規處置電池。
若不正確替換電池可能導致爆炸危險，替換電池時，請使用設備生產商推薦使用的電池。
請勿拆卸、刺穿或以其他方式損壞電池。

雷射設備非用戶維修設備，請與生產商聯繫維修事宜。

注意：要斷開電源，請將所有電源線從本機上拔下

滑軌警語：
延伸滑軌至進行安裝位置前，請閱讀安裝指示。
勿在安裝位置上放置任何負載於滑軌安裝設備上。
勿將滑軌安裝設備留置於進行安裝時之位置。

英屬蓋曼群島商防特網股份有限公司台灣分公司
地址：台北市內湖區行愛路176號2樓
電話：(02) 27961666

China

警告：在居住环境中，运行此设备可能会造成无线电干扰。

Agência Nacional de Telecomunicações (ANATEL) – Brazil

Este produto não é apropriado para uso em ambientes domésticos, pois poderá causar interferências eletromagnéticas que obrigam o usuário a tomar medidas necessárias para minimizar estas interferências."

Para maiores informações, consulte o site da ANATEL www.gov.br/anatel/pt-br/

Korea Certification (KC) – Korea

A급 기기 (업무용 방송통신기자재)
이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기를 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

