


Log Reference

FortiRecorder 7.2.4

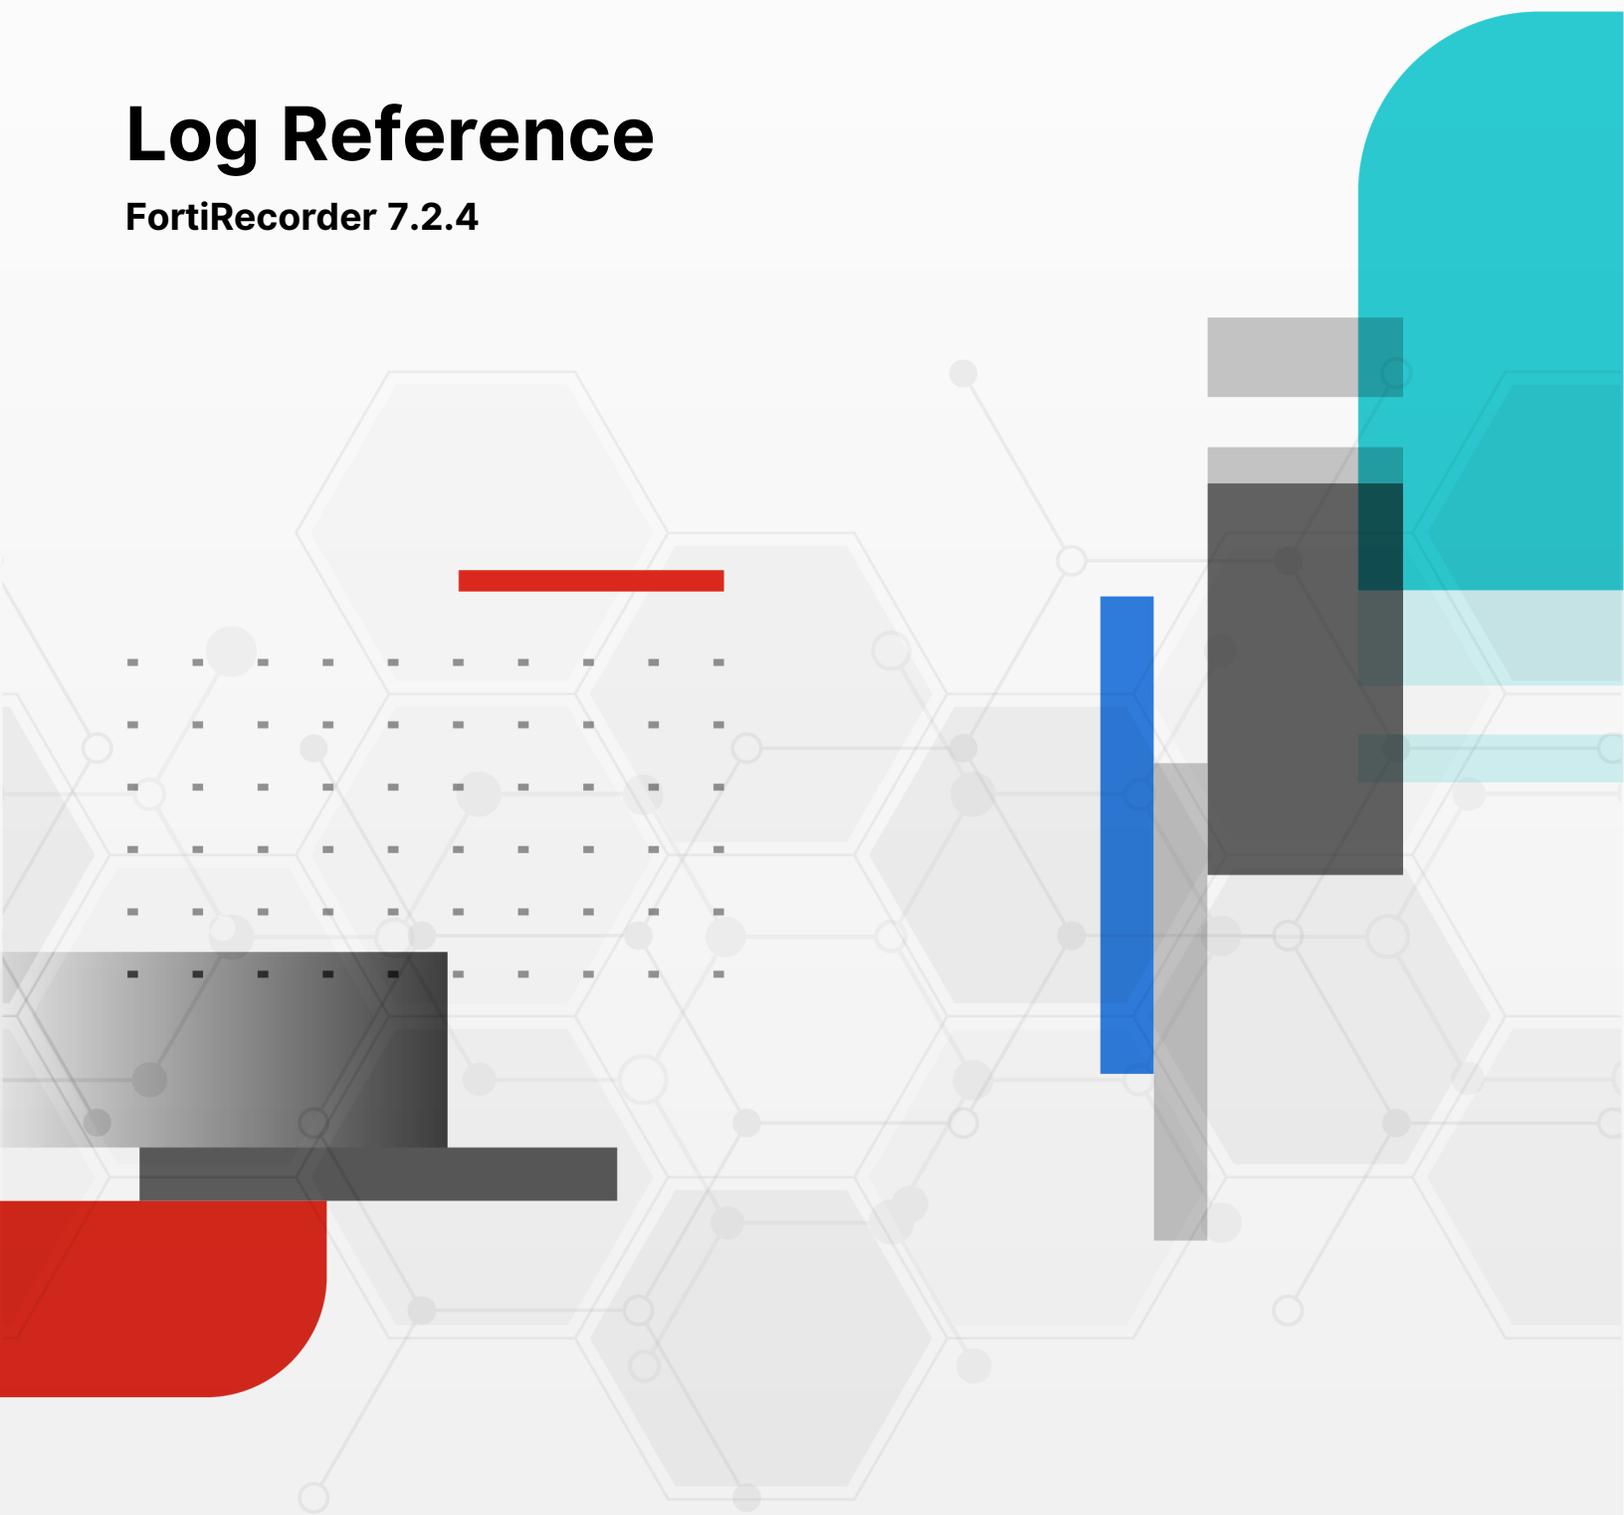

FORTINET DOCUMENT LIBRARY

<https://docs.fortinet.com>

FORTINET VIDEO LIBRARY

<https://video.fortinet.com>

FORTINET BLOG

<https://blog.fortinet.com>

CUSTOMER SERVICE & SUPPORT

<https://support.fortinet.com>

FORTINET TRAINING & CERTIFICATION PROGRAM

<https://www.fortinet.com/training-certification>

FORTINET TRAINING INSTITUTE

<https://training.fortinet.com>

FORTIGUARD LABS

<https://www.fortiguard.com>

END USER LICENSE AGREEMENT

<https://www.fortinet.com/doc/legal/EULA.pdf>

FEEDBACK

Email: techdoc@fortinet.com



May 01, 2025

FortiRecorder 7.2.4 Log Reference

00-724-0932616-20250501

TABLE OF CONTENTS

Change log	12
Introduction	13
Document scope & organization	14
Schema	15
Device ID	16
Log part	16
Log ID	16
Type	17
Subtype	17
Severity/priority	19
User	19
UI	19
Action	19
Status	20
Reason	20
Detection type	21
Detection subtype	21
Camera	21
Message	21
camera	22
config	22
0608000001 CAMERA_CONFIG_START	22
0608000002 CAMERA_CONFIG_OK	23
event	23
0601000001 FACTORY_RESET	24
0601000002 REBOOT	24
0601000003 COLD_START	25
0601000004 WARM_START	25
0601000005 AUTH_FAIL	26
0601000006 CONFIGURE	27
0601000007 ENABLE	27
0601000008 DISABLE	28
0601000010 COMMUNICATION_FAIL	29
0601000011 DISCOVERY_UPDATE	29
0601000015 CAMERA_REPLACED	30
0601000016 VIDEO_DOWNLOADED	31
0601000019 VIDEO_LOCKED	31
0601000021 RESTRICTED_VIDEO_ACCESSED	32
0601000023 INCORRECT_CONFIGURATION	33
0601000027 CAMERA_NO_MODEL	33
0601000028 CAMERA_UNSUPPORTED_ASPECT_RATIO	34
0601000029 CAMERA_UNSUPPORTED_TRANSPORT_TYPE	34
0601000030 CAMERA_OWNER_OVERRIDE	35

0601000031 CAMERA_INUSE	36
0601000032 CAMERA_INUSE_VERIFY	36
0601000034 CAMERA_RENAME_OK	37
0601000035 CAMERA_DELETE_NOT_OWNER	38
0601000036 CAMERA_DELETE_OK	38
0601000037 CAMERA_CONFIG_ERROR	39
0601000038 CAMERA_CONFIG_SCHED_ERROR	39
0601000039 CAMERA_UPDATE_ONVIF_MODEL	40
0601000040 CAMERA_UPDATE_ONVIF_MODEL_OK	41
0601000041 CAMERA_UPDATE_ONVIF_MODEL_FAILED	41
0601000042 PASSWORD_VALIDATED	42
0601000043 PASSWORD_UPDATED	43
0601000044 PASSWORD_NOT_FOUND	43
0601000045 PASSWORD_VALIDATION_FAILED	44
0601000046 PASSWORD_RESET	44
0601000047 PASSWORD_DEFAULT	45
0601000048 CAMERA_VIDEO_STREAM_CHANGE	46
0601000049 CAMERA_SETTING_CHANGE	46
0601000050 COMMUNICATION_SUCCESS	47
0601000051 CONFIG_RETRY	48
0601000052 CONFIG_RETRIES_FAILED	48
0601000053 SD_FORMAT	49
0601000054 SD_FORMAT_FAIL	50
0601000056 CAMERA_PROBLEM	50
0601000057 VIDEO_SPOOL_DOWNGRADE	51
0601000058 CAMERA_MIGRATION_START	52
0601000059 CAMERA_MIGRATION_END	52
0601000060 CAMERA_MIGRATED	53
0601000062 DISABLED_CAMERA_MOTION_EVENT	54
0601000063 UI_PROXY_OPENED	54
0601000064 UI_PROXY_CLOSED	55
0601000065 UI_PROXY_CLOSED_ALL	55
0601000067 CAMERA_INUSE_CLOUD	56
0601000068 CAMERA_DELETE_CLOUD	57
0601000069 VIDEO_UNLOCKED	57
0601000070 WRONG_NVR	58
0601000071 AUTOCONFIG_CAMERA_ENABLE	59
0601000072 AUTOCONFIG_CAMERA_ENABLE_FAIL	59
firmware	60
0605000001 STARTED_FIRMWARE_UPDATE	60
0605000002 FIRMWARE_UPDATE_SUCCESS	61
0605000003 FIRMWARE_UPDATE_FAILURE	61
frcc	62
0609000001 PACKET_SKIPPED	62
0609000002 VIDEO_EXPORTED	63
0609000003 VIDEO_MERGED	64
light-level	64
0606000001 LIGHT_LEVEL	64
0606000002 LIGHT_LEVEL_START	65

0606000003 LIGHT_LEVEL_STOP	66
0606000004 LIGHT_LEVEL_FAIL	66
notification	67
0603000001 SENT_NOTIFICATION	67
0603000002 FAILED_NOTIFICATION	68
0603000003 FAILED_EXTRACT	68
0603000004 CAM_EVENT_THRESHOLD	69
0603000005 CAM_EVENT_BACKLOG	70
quota	70
0604000001 EXPIRE_SUCCESS	71
0604000002 EXPIRE_ERROR	71
0604000003 QUOTA_DELETE_SUCCESS	72
0604000004 QUOTA_DELETE_ERROR	73
0604000005 QUOTA_SPACE_CRITICAL	73
0604000006 QUOTA_REMOTE_SLOW	74
0604000007 QUOTA_SPACE_INFO	75
0604000008 QUOTA_NO_MORE_FILES	75
0604000009 QUOTA_FREE_TOO_LOW	76
0604000010 QUOTA_RECORDING_SUSPENDED	77
0604000011 QUOTA_RECORDING_RESUMED	77
0604000012 MOVE_DEFERRED	78
0604000016 QUOTA_COMPLETED	78
0604000017 LOCAL_INACCESSIBLE	79
0604000018 REMOTE_INACCESSIBLE	80
0604000019 FREE_SPACE_LOW	80
0604000020 EXPIRE_SLOW	81
0604000021 REMOTE_MOVE_FAILED	82
0604000022 QUOTAD_RESTARTING	82
0604000023 SLOW_REMOTE_LOCAL_DELETION	83
recording	84
0602000001 RECORDING_ERROR	84
0602000002 RECORDING_START_FAILURE	84
0602000004 MOTION_IMPORT_FAILURE	85
0602000007 FINALIZATION_FAILED	86
0602000008 RECORDING_RESTART	86
0602000009 RECORDING_TOO_SMALL	87
0602000010 FINALIZATION_OVERFLOW	88
0602000011 FINALIZATION_SLOW	88
0602000012 NORMALIZATION_FAILED	89
0602000013 RECORDING_RESTART_FAILED	90
0602000014 RECORDING_SETUP_FAILURE	90
0602000015 FINALIZATION_FAILED_TOO_SMALL	91
0602000016 FAILED_VIDEO_CLIP	92
0602000017 RECORDING_TIME_CHECK_FAILURE	92
0602000018 RECORDING_NOT_CREATED	93
0602000019 RECORDING_NOT_CHANGED	94
schedule	94
0600000001 START_SCHEDULE	94
0600000002 STOP_SCHEDULE	95

0600000003 START_CAMERA_ERROR	96
0600000004 START_CAMERA_RECOVERY	96
0600000005 STOP_CAMERA_ERROR	97
0600000006 DISABLE_EVENT_REC_ERROR	98
0600000009 CAMERA_STATE_INCORRECT_WARN	98
0600000010 CAMERA_STATE_INCORRECT_ERROR	99
0600000014 CAMERA_ALERT	100
0600000015 VIDEO_STREAM_CHANGE	100
0600000016 CAMERA_SETTING_CHANGE	101
0600000017 CAMERA_CONFIG	102
0600000018 CAMERA_STREAMING	102
0600000019 CAMERA_COMMUNICATION	103
0600000020 CAMERA_STATE_CORRECT	104
0600000021 UPDATE_DETECTION_SETTINGS	104
streaming	105
0607000001 CONNECT_FAILURE	105
0607000002 DISCONNECT	106
0607000003 DISCONNECT_TIMEOUT	107
0607000004 RESTART_TIMESTAMP	107
detection	109
acs	109
1107000000 DETECTION	109
audio	110
1102000000 DETECTION	110
digital-input	111
1103000000 DETECTION	111
face	111
1106000000 DETECTION	112
generic	112
1100000000 DETECTION	113
motion	113
1101000000 DETECTION	113
object	114
1108000000 DETECTION	114
pir	115
1104000000 DETECTION	115
tamper	116
1105000000 DETECTION	116
kevent	118
admin	118
0801000000 GENERIC	118
0801000001 LOGIN_SUCCESS	119
0801000002 LOGIN_FAILURE	119
0801000003 LOGOUT_SUCCESS	120
0801000004 LOGOUT_TIMEOUT	121
0801000005 LOGOUT_FORCED	121
0801000006 VM_LOGIN_SUCCESS	122

0801000018 LOG_SEARCH_MULTIPLE	123
0801000019 LOG_DOWNLOAD	123
0801000020 LOG_DELETE	124
0801000025 AUTH_REPUTATION_DELETE	125
0801000026 AUTH_REPUTATION_EXEMPT	125
0801000027 AUTH_REPUTATION_HISTORY	126
0801000028 LOGOUT_FORCED_ON_ERROR	127
audit	127
0808000001 SUMMARY	128
config	128
0800000000 GENERIC	128
0800000001 DHCPD_INFINITE_LEASE	129
0800000002 DHCPD_INTERFACE_GETS_LEASE	130
0800000003 DHCPD_MEMORY_ALLOCATE_FAILED	130
0800000004 DHCPD_SELECT_CALL_ERROR	131
0800000005 DHCPD_SIOCGIFHWADDR_FAILED	132
0800000006 DHCPD_INTERFACE_INVALID	132
0800000007 DHCPD_SETSOCKOPT_FAILED	133
0800000008 DHCPD_SIOCSIFFLAGS_FAILED	134
0800000009 DHCPD_ENSURE_CONFIG_DEFINED	134
0800000010 DHCPD_CANT_INSTALL_PF_PROG	135
0800000011 DHCPD_SEND_DHCP_FAILED	136
0800000012 DHCPD_RECEIVE_DHCP_FAILED	136
0800000013 DHCPD_SEND_ARP_FAILED	137
0800000014 DHCPD_NO_LEASE_TIME_INFO	137
0800000015 DHCPD_SEND_REQ_IN_ERROR_STATE	138
0800000016 DHCPD_TOO_MANY_DHCP_OPTIONS	139
0800000017 DHCPD_SOCKET_FAILED	139
0800000018 DHCPD_CANT_CREATE_DHCP_SOCKET	140
0800000019 DHCPD_CANT_SET_BROADCAST	141
0800000020 DHCPD_CANT_BIND_TO_SOCKET	141
0800000025 CLI_LOG_ACTION_CLEAR	142
0800000026 CLI_LOG_ACTION_EDIT	142
0800000027 CLI_LOG_ACTION_ADD	143
0800000028 CLI_LOG_ACTION_DELETE	144
0800000029 CLI_LOG_ACTION_MOVE	144
0800000030 CLI_LOG_ACTION_OTHER	145
0800000031 CLI_LOG_ACTION_FAILED	146
0800000032 CLI_LOG_ACTION_FOR	146
0800000033 CLI_LOG_ACTION_DOMAIN	147
0800000034 CLI_LOG_ACTION	147
0800000035 CERT_SSL_ERROR	148
0800000036 CERT_CANT_OPEN_CERT_FILE	149
0800000037 CERT_KEY_FILE_NOT_EXIST	149
0800000038 CERT_CANT_OPEN_KEY_FILE	150
0800000039 CERT_CANT_READ_CA_CERT	151
0800000040 CERT_NOT_CA_CERT	151
0800000041 CERT_CANT_READ_REMOTE_CERT	152
0800000042 CERT_REMOTE_CERT_NOT_CA_CERT	153

0800000043 CERT_IS_REVOKED	153
0800000044 CERT_IS_EXPIRED	154
0800000045 CERT_IS_INVALID	155
0800000046 CERT_PKCS12_INVALID_PASSWD	155
dhcp	156
0806000000 DHCPD_CLIENT_BROADCASTS_DHCPDISCOVER	156
0806000001 DHCPD_SERVER_RESPONDS_WITH_CONFIG	157
0806000002 DHCPD_CLIENT_REQUESTS_CONFIG	157
0806000003 DHCPD_CLIENT_DETECTS_CONFLICT	158
0806000004 DHCPD_CONFIG_ASSIGNED_TO_CLIENT	159
0806000005 DHCPD_SERVER_UNABLE_TO_SATISFY_REQ	159
0806000006 DHCPD_CLIENT_RELEASES_IP	160
0806000007 DHCPD_CLIENT_REQ_LOCAL_CONFIG	161
0806000008 DHCPD_FORWARD_CLIENT_REQ	161
0806000009 DHCPD_FORWARD_SERVER_REPLY	162
0806000010 DHCPD_NO_SHARED_NETWORK	163
0806000011 DHCPD_ADDR_RANGE_SPANS_MULTIPLE_SUBNETS	163
0806000012 DHCPD_ADDR_RANGE_NOT_ON_NET	164
system	165
0802000000 GENERIC	165
0802000001 HWMON_NO_POWER_MONITOR	166
0802000002 HWMON_POWER_SUPPLY_EVENT	166
0802000003 HWMON_RAID_DEVICE_STATUS	167
0802000004 HWMON_RAID_DISK_STATUS	168
0802000007 VM_LICENSE_UPDATED	168
0802000008 CONFIG_RESTORED	169
0802000009 FACTORY_RESET	170
0802000012 SYSTEM_UPGRADED	170
0802000013 SYSTEM_UPGRADED_VER	171
0802000014 SYSTEM_DOWNGRADED	172
0802000016 SYSTEM_RESTARTED	172
0802000017 SYSTEM_SHUTDOWN	173
0802000018 SYSTEM_RELOADED	174
0802000019 IMAGE_ERROR	174
0802000020 REGISTER_DEVICE	175
0802000054 NETD_STARTING	176
0802000055 NETD_REGISTERING	176
0802000056 NETD_START_RUNNING	177
0802000057 NETD_SHUTTING_DOWN	177
0802000058 NETD_STOPPED	178
0802000059 NETD_START_PROBLEM	179
0802000060 NETD_POOL	179
0802000061 FAILED_TFTP_TRANSFER_FROM	180
0802000062 FAILED_TFTP_TRANSFER_TO	181
0802000066 BACKUP_CHDIR_ERROR	181
0802000067 RESTORE_CHDIR_ERROR	182
0802000068 ARCHIVE_CREATION_ERROR	183
0802000069 ARCHIVE_EXTRACTION_ERROR	183
0802000070 ARCHIVE_COMPRESSION_ERROR	184

0802000071	ARCHIVE_DECOMPRESSION_ERROR	185
0802000072	LOGIN_RENAME_ERROR	185
0802000073	CERT_UPLOAD_MISSING_NAME	186
0802000074	CERT_UPLOAD_INTERNAL_ERROR	186
0802000076	UPLOAD_FAILED	187
0802000077	CERT_CSR_RESP_FAILED	188
0802000078	CERT_INV_PKCS12	188
0802000079	CERT_UPLOAD_OK	189
0802000080	CERT_INV_CERT	190
0802000081	CERT_INV_CA	190
0802000082	CERT_INV_CRL	191
0802000083	CERT_INV_REMOTE_CERT	191
0802000084	CERT_BIND_OK	192
0802000085	CERT_BIND_FAILED	193
0802000086	RESOURCE_USAGE	193
0802000091	FG_LICENSE_EXPIRY	194
0802000092	FG_LICENSE_EXPIRED	195
0802000095	MDADM_RAID_EVENT	195
0802000096	LDAP_SYNC_START	196
0802000097	LDAP_SYNC	196
0802000098	LDAP_SYNC_FAILED	197
0802000099	LDAP_SYNC_USAGE	198
0802000100	SEARCH_DONE_STATS	198
0802000101	NASD_STARTING	199
0802000102	NASD_START_RUNNING	200
0802000103	NASD_SHUTTING_DOWN	200
0802000104	NASD_STOPPED	201
0802000105	NASD_OPTIONS	201
0802000106	NASD_STOPPING	202
0802000107	NASD_TEMPORARILY_STOPPED	203
0802000108	NASD_STARTING2	203
0802000109	NASD_FORMAT_CHECK_RUNNING	204
0802000110	NASD_FORMAT_FOR_BLOCK_DEVS	205
0802000111	NASD_FORMATTING_STORAGE	205
0802000112	NASD_UNABLE_TO_PARTITION	206
0802000113	NASD_CHECK_FOR_BLOCK_DEVS	206
0802000114	NASD_CHECKING	207
0802000115	NASD_UNABLE_TO_MOUNT	208
0802000116	NASD_MOUNTED_DEVICE	208
0802000117	NASD_MOVED_HOME	209
0802000118	NASD_MOUNT_FAILED_FOR_BUILD	210
0802000119	NASD_BUILT_BASE_DIRS	210
0802000120	NASD_MOUNT_FAILED	211
0802000121	NASD_MOUNTED_DEVICES	211
0802000122	NASD_NOT_MOUNTED	212
0802000123	NASD_UNMOUNTED_DEVS	213
0802000124	NASD_NAS_STARTED	213
0802000125	NASD_STARTED_STATE	214
0802000126	NASD_NAS_STOPPED	215

0802000127 NASD_STOPPED_STATE	215
0802000128 NASD_NAS_RECOVERED	216
0802000129 NASD_NAS_MOVING_FROM_HOLDOFF	216
0802000130 NASD_NAS_FAILED	217
0802000145 CMDB_CREATE_CMDB_SOCKET_FAILED	218
0802000171 DHCPD_CLIENT_BROADCASTS_DHCPDISCOVER	218
0802000172 DHCPD_SERVER_RESPONDS_WITH_CONFIG	219
0802000173 DHCPD_CLIENT_REQUESTS_CONFIG	220
0802000174 DHCPD_CLIENT_DETECTS_CONFLICT	220
0802000175 DHCPD_CONFIG_ASSIGNED_TO_CLIENT	221
0802000176 DHCPD_SERVER_UNABLE_TO_SATISFY_REQ	222
0802000177 DHCPD_CLIENT_RELEASES_IP	222
0802000178 DHCPD_CLIENT_REQ_LOCAL_CONFIG	223
0802000179 DHCPD_FORWARD_CLIENT_REQ	224
0802000180 DHCPD_FORWARD_SERVER_REPLY	224
0802000181 DHCPD_NO_SHARED_NETWORK	225
0802000182 DHCPD_ADDR_RANGE_SPANS_MULTIPLE_SUBNETS	225
0802000183 DHCPD_ADDR_RANGE_NOT_ON_NET	226
0802000191 MAILLIST_RESTORED_BW_LIST	227
0802000192 DIRECTORY_DOES_NOT_EXIST	227
0802000193 LOWENC_CERT_KEY_ABOVE_512	228
0802000194 SMIT_TEST	229
0802000218 FDS_LOADED_WRONG_IMAGE	229
0802000219 FDS_RESTORE_FAILED	230
0802000220 FDS_CONFIG_BACKUP	231
0802000221 OFTPCD_CONNECTED	231
0802000222 OFTPCD_START_THREAD	232
0802000223 OFTPCD_CONNECTION_BROKEN	233
0802000224 OFTPSD_CONNECTION_REFUSED	233
0802000225 OFTPSD_REQUEST_REFUSED	234
0802000226 OFTPSD_CONNECTION_ACCEPTED	235
0802000227 OFTPSD_NO_KEEPLIVE	235
0802000228 OFTPSD_RECEIVED_CLIENT_EVENT	236
0802000231 NTPD_CLOCK_UPDATED_ERRORS	237
0802000232 NTPD_CLOCK_UPDATED	237
0802000233 NTPD_CANT_UPDATE_CLOCK	238
0802000234 NTPD_UPDATE_CLOCK_ERROR	238
0802000235 NTPD_NTPDATE_FAILED	239
0802000236 NTPD_NTPDATE_CMD	240
0802000280 SCHED_BACKUP_SUCCEED	240
0802000281 LDAPBED_STARTING	241
0802000282 LDAPBED_START_RUNNING	242
0802000283 LDAPBED_SHUTTING_DOWN	242
0802000284 LDAPBED_STOPPED	243
0802000286 OFTPSD_LOGIN_REJECTED	243
0802000287 CONFIG_RESTORE_FAILED	244
0802000290 LDAPCACHED_CAUGHT_EXCEPTION	245
0802000292 LDAPCACHED_GENERIC_DEBUG	245
0802000293 LDAPCACHED_GENERIC_INFO	246

0802000295	REMOTE_ARCHIVE_EVENT	247
0802000296	TIME_CHANGED	247
0802000320	DBDAEMON_DKIMDB_INIT_ERROR	248
0802000336	CAPTURE_STATUS	249
0802000337	LICENSE_UPDATED	249
0802000338	DLP_FP_SOURCE_START	250
0802000503	RSD_PARTITION_FAIL	251
0802000504	RSD_FORMAT_FAIL	251
0802000505	RSD_FORMAT_SUCCESS	252
0802000506	RSD_CHECK_FAIL	252
0802000507	RSD_CHECK_SUCCESS	253
0802000508	RSD_MOUNT_FAIL	254
0802000509	RSD_MOUNT_SUCCESS	254
0802000510	RSD_UNMOUNT_FAIL	255
0802000511	RSD_UNMOUNT_SUCCESS	256
0802000513	SYSTEM_STARTED	256
0802000514	CAM_LICENSE_UPDATED	257
0802000515	CAM_LICENSE_REMOVED	257
0802000516	SERVICE_VIDEO_IMAGE_ERROR	258
0802000517	SERVICE_VIDEO_IMAGE_UPLOAD_ERROR	259
0802000518	RSD_NOT_MOUNTED	259
0802000519	HWMON_HIGH_CPU_TEMP	260
0802000520	HWMON_CRITICAL_CPU_TEMP	261
0802000523	CAMERA_MAXIMUM_EXCEEDED	261
0802000524	CAMERA_ACTION	262
0802000525	CAMERA_COUNT	263
0802000526	SMARTD_MESSAGE	263
0802000530	AUTOINSTALL_IMAGE	264
0802000531	AUTOINSTALL_CONFIG	264
0802000532	AUTOINSTALL_CAMERA_CONFIG	265
0802000533	AUTOINSTALL_CAMERA_NOT_FOUND	266
0802000534	AUTOINSTALL_CAMERA_OK	266
0802000535	AUTOINSTALL_CAMERA_FAIL	267
0802000536	AUTOINSTALL_CAMERA_COMPLETE	268
0802000537	AUTOINSTALL_LOCAL_CONFIG	268
0802000538	AUTOINSTALL_LOCAL_OK	269
0802000539	AUTOINSTALL_LOCAL_FAIL	269
0802000540	AUTOINSTALL_LICENSE_INSTALL	270
0802000541	AUTOINSTALL_LICENSE_OK	271
0802000542	AUTOINSTALL_LICENSE_FAIL	271
0802000543	SYSTEM_DISK_READONLY_FS	272
0802000544	AUTOINSTALL_CAMFW_INSTALL	273
0802000545	AUTOINSTALL_CAMFW_OK	273
0802000546	AUTOINSTALL_CAMFW_FAIL	274
0802000700	NTPMOND_SYNC_LOST	274
0802000701	NTPMOND_SYNC_ESTABLISHED	275
0802000702	NTPMOND_ERR	276

Change log

The following is a list of documentation changes. For a list of software changes, see the [FortiRecorder Release Notes](#).

Date	Change Description
2025-04-25	Initial release of the FortiRecorder 7.2.4 Log Reference.

Introduction

Log messages that FortiRecorder 7.2.4 generates can provide information on login activity and identify issues such as certificate expiration and motion detection by cameras at unexpected times.

Document scope & organization


This document:

- Explains the [log structure \(schema\)](#)
- Provides details about each log message, organized by [type](#) and [subtype](#)

For information about how to configure logging, view log messages, or download log files, instead see the [FortiRecorder Administration Guide](#).

Schema

All FortiRecorder log messages have a timestamp and then key-value pair fields. Fields are organized into a header and a body.

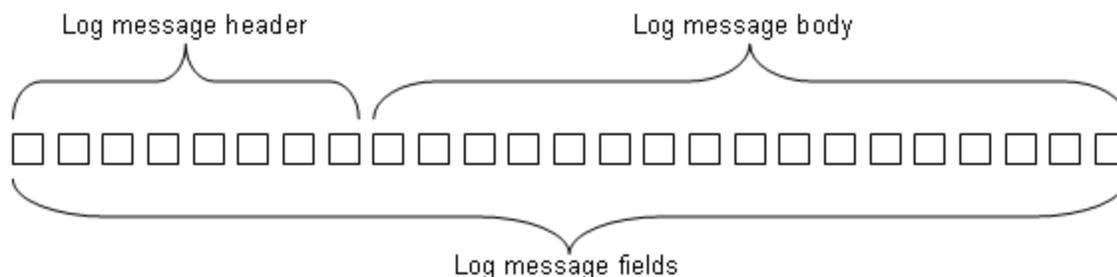

- **Header** — Located at the start of all log messages. Contains the event timestamp, a log identifier (`log_id`), the `type` and `subtype`, and then the severity level (`priority`) of the event. Some fields (`devid` and `log_part`) vary by remote storage of logs, and by log message length.
- **Body** — Located after the header fields. Contains the message (`msg`) field. **Other body fields vary by type or subtype**, such as the associated user name (if any), and actions (if any) that the FortiRecorder appliance took to respond to the event

For example, in the following log message, the fields in bold are the header. The remaining fields are the body.

```
2023-10-20 13:53:59.297 log_id=0801000001 type=kevent subtype=admin pri=information
  user=admin ui=ssh(172.20.130.28) action=login status=success reason=none msg="User
  admin logged in successfully from ssh(172.20.130.28)"
```

This chapter describes the log message schema: each field and when it occurs.



Fields are listed in the order of appearance in raw log messages. If you use a table format instead — for example, the FortiRecorder GUI, a SIEM, or spreadsheet software — columns can be hidden and/or rearranged. Fields may appear in a different order than in this document.

Some fields are always hidden in the table view. Fields that vary by `subtype` do not exist for all log messages, and do not have corresponding columns in the FortiRecorder GUI.

Show/Hide Column does not have options to enable them. To view these hidden fields, either:

- Download the raw log messages. Open the log file in a plain text editor.
- In the GUI, select a log message and then click *View*. A dialog will appear that shows all fields for that log message.

Device ID

If you configure FortiRecorder to send logs to FortiAnalyzer or other Syslog servers, then the device ID (`dev_id`) field is added to the header. Remote log servers often receive log messages from many devices, so the serial number in the `dev_id` field indicates which device recorded the log messages.

This field does not appear when you download log files to your computer, or view logs on FortiRecorder itself.

Log part

The header of some log messages may include a `log_part` field which provides numbered identification (such as 00, 01, and 02) when a log message has been split. Splitting occurs if the log message is too long.

Log ID

The `log_id` field is in every FortiRecorder log message. `log_id` is a 10-digit unique identifier for a specific root cause.

Digits	Description
First two	<p>Type</p> <ul style="list-style-type: none"> 08 is <code>kevent</code> 06 is <code>camera</code> 11 is <code>detection</code>
Next two	<p>Subtype</p> <p>The meaning of these digits varies because each type has different subtypes. For example, if the first two digits are 08 (<code>type=kevent</code>), then the next two digits correspond to its subtypes:</p> <ul style="list-style-type: none"> 01 is <code>admin</code> 02 is <code>system</code> etc. <p>For other types, 01, 02, etc. correspond to their subtypes instead.</p>
Last six	<p>Event ID</p> <p>The meaning of these digits varies because each type and subtype has different associated events. For example, for administrator-related system events (prefix 0801), event ID 000001 indicates a successful administrator login. Motion detection does not have this same type of event.</p>



Other log messages that share the same root cause have the same `log_id`. The `log_id` is *not* a unique identifier for each time that the event has occurred. Instead, it provides a consistent identifier for the same kind of event, because details in the `msg` field may vary each time.

To find other occurrences of the same `log_id`, in the FortiRecorder GUI, you can click the *Log ID* column header to sort them together.

You can search for a log ID in this document to find its meaning and possible solutions.

Type

Every FortiRecorder log message has a `type` field. When you download a log file from FortiRecorder, the type is also in the file name.

Field Value	Downloaded File Name	Description
<code>camera</code>	<code>clog.log</code>	Camera and FortiCentral events and management activities, such as starting a scheduled recording and interruptions of the network connection with FortiRecorder. It does not include motion detection events.
<code>detection</code>	<code>dlog.log</code>	Detection events by cameras, face recognition, object recognition, or access control systems (ACS).
<code>kevent</code>	<code>klog.log</code>	System events and management activities, including reboots, software updates, FortiRecorder configuration changes, and when administrators and users log in or log out. It does not include events that occur on the cameras, ACS devices, or FortiCentral installations, such as camera configuration changes.

Subtype

Every FortiRecorder log message has a `subtype` field. Valid `subtype` values vary by the `type` field. The subtype further categorizes the nature of the event.

Type Value	Subtype Values	Description
camera	config	Camera configuration by FortiRecorder.
	event	Camera system activities such as login (password validation), configuration by FortiRecorder, or configuration by another NVR.
	firmware	Camera software updates.
	frcc	FortiCentral events, such as when a video clip is exported or network connection packets are dropped.
	light-level	Camera light level readings.
	notification	Camera motion detection notification activities, such as when a motion detection video clip cannot be made.
	quota	Disk space usage quota warnings, local (camera) and remote (FortiRecorder) disk availability errors, and moving files from local to remote storage.
	recording	Continuous or temporary (during live video feed) recording on the camera, or interruptions to it.
	schedule	Camera recording schedule changes, activation, or errors.
	streaming	Live video feed connections to a camera.
detection	acs	Access control system (ACS) detections such as key card swipes or doors being forced open.
	audio	Detection of sounds by a microphone on a camera.
	digital-input	Digital input (DIDO) detection by a camera.
	face	Face recognition.
	generic	Generic detection.
	motion	Motion detection by a camera.
	object	Object recognition such as a weapon or vehicle.
	pir	Passive infrared (PIR) detection on a camera.
tamper	Tampering with a camera.	
kevent	admin	Administrator authentication success or failure.
	audit	Audit of deployment health
	config	FortiRecorder configuration changes.
	dhcp	Built-in DHCP server activities, such as IP address lease requests from cameras.
	system	FortiRecorder system activities such as software update validation, time synchronization, shutdown, and reboot.

Severity/priority

When you configure *Log level*, FortiRecorder records log messages where the severity field (`pri`) equals or exceeds the selected level.

For example, if you select *Error*, then the FortiRecorder unit records *Error*, *Critical*, *Alert*, and *Emergency* level log messages.

Level (0 is most severe)	Name	Description
0	Emergency	The system has become unstable.
1	Alert	Immediate action is required.
2	Critical	Functionality is affected.
3	Error	An error condition exists and functionality could be affected.
4	Warning	Functionality could be affected.
5	Notice	Information about normal events.
6	Information	Extra information about system operation.

User

The `user` field is in every FortiRecorder log message where `subtype=admin`. The `user` field indicates which login performed the action that is recorded in the event, or, in the case of actions performed by FortiRecorder, `system` or the name of the daemon.

UI

The `ui` field is in every FortiRecorder log message where `subtype=admin`. It indicates how they connected, either:

- GUI (`GUI`, `http`, or `https`)
- CLI (either the widget in the GUI (`cli-console`), local serial `console` connection, or network connection via `ssh`, or `telnet`)
- FortiCentral (FRCC)

Action

The `action` field is in every FortiRecorder log message where `type=system`. It indicates what FortiRecorder, cameras, or other devices did during the event, or as a response to the event.

Field Value	Description
(empty)	No action.
none	No action.
	 <p>Both can have this action:</p> <ul style="list-style-type: none"> • Normal events that do not require correction • Errors that FortiRecorder cannot automatically correct, and may require you to troubleshoot <p>To distinguish them, use the Log ID on page 16.</p>
bootup	The FortiRecorder unit started.
login	An administrator or other user was authenticating to start a session in the GUI, CLI, or FortiCentral.
logout	An administrator or other user was ending an authenticated session.
reboot	An administrator restarted the FortiRecorder unit.
start	The camera tried to start a schedule for continuous recording or recording triggered by motion detection.
stop	The camera stopped continuous recording or motion detection.
	 <p>Both can have this action:</p> <ul style="list-style-type: none"> • Normal events that do not require correction • Errors that FortiRecorder cannot automatically correct, and may require you to troubleshoot <p>To distinguish them, use the Log ID on page 16.</p>
update	Settings on the camera were updated.
upgrade	Software (firmware) on the FortiRecorder was updated.

Status

The `status` field is in every FortiRecorder log message where `type=kevent`. It indicates whether the action succeeded or not.

Reason

The `reason` field is in every FortiRecorder log message where `type=kevent`. The `reason` field indicates the reason for the action (if any).

Detection type

The `dtype` field is in every FortiRecorder log message where `type=detection`. It indicates the type of detection, such as `motion`.

Detection subtype

The `dsubtype` field is in every FortiRecorder log message where `type=detection`. It indicates the subtype of detection, such as `"motion alarm"`.

Camera

The `camera` field is in every FortiRecorder log message where `type=camera` or `type=detection`. It indicates the name of the camera or IP address of the FortiCentral installation where the event occurred.

Message

The `msg` field is in every FortiRecorder log message. Length and contents vary by the cause of the event, but `msg` usually contains extra details that are not in other fields.



Each time that a similar event occurs, the details in `msg` can be different. To find all events with the same root cause, don't search for a matching `msg`. Instead, see [Log ID on page 16](#).

camera

If the log message header contains:

```
type=camera
```

then the log message describes system events on cameras and FortiCentral installations that are connected to the FortiRecorder unit.

This section describes log messages of that type.

config

If the log message header contains:

```
subtype=config
```

then the log message describes configuration changes on a camera that is connected to the FortiRecorder unit.

This section describes log messages of that subtype.

0608000001 CAMERA_CONFIG_START

Meaning

Configuration of camera started.

Fields

Field	Value	Data Type	Length
log_id	0608000001	string	10
type	camera	string	16
subtype	config	string	20
pri	information	uint8	1
user	system	string	32
action	start	string	16
camera	<CAMERA>	string	32
msg	Configuration of camera '<CAMERA>' started.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0608000001 type=camera subtype=config pri=information
user=system action=start camera=<CAMERA> msg=Configuration of camera '<CAMERA>'
started.
```

0608000002 CAMERA_CONFIG_OK

Meaning

Configuration of camera completed successfully.

Fields

Field	Value	Data Type	Length
log_id	0608000002	string	10
type	camera	string	16
subtype	config	string	20
pri	information	uint8	1
user	system	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Configuration of camera '<CAMERA>' completed successfully.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0608000002 type=camera subtype=config pri=information
user=system action=stop camera=<CAMERA> msg=Configuration of camera '<CAMERA>'
completed successfully.
```

event

If the log message header contains:

```
subtype=event
```

then the log message describes a system event on a camera that is connected to the FortiRecorder unit, such as login (password validation), configuration by FortiRecorder, or configuration by another NVR.

This section describes log messages of that subtype.

060100001 FACTORY_RESET

Meaning

Camera factory reset.

Fields

Field	Value	Data Type	Length
log_id	0601000001	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	<USER>	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Factory reset of camera '<CAMERA>' by <USER> from <FROM>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000001 type=camera subtype=event pri=information
user=<USER> action=stop camera=<CAMERA> msg=Factory reset of camera '<CAMERA>' by
<USER> from <FROM>.
```

060100002 REBOOT

Meaning

Camera reboot.

Fields

Field	Value	Data Type	Length
log_id	0601000002	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	<USER>	string	32

Field	Value	Data Type	Length
action	stop	string	16
camera	<CAMERA>	string	32
msg	Reboot of camera '<CAMERA>' by <USER> from <FROM>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000002 type=camera subtype=event pri=information
  user=<USER> action=stop camera=<CAMERA> msg=Reboot of camera '<CAMERA>' by <USER> from
  <FROM>.
```

0601000003 COLD_START

Meaning

Camera powered up.

Fields

Field	Value	Data Type	Length
log_id	0601000003	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	start	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' powered up.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000003 type=camera subtype=event pri=information
  user=system action=start camera=<CAMERA> msg=Camera '<CAMERA>' powered up.
```

0601000004 WARM_START

Meaning

Camera rebooted.

Fields

Field	Value	Data Type	Length
log_id	0601000004	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	start	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' rebooted.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000004 type=camera subtype=event pri=information
user=system action=start camera=<CAMERA> msg=Camera '<CAMERA>' rebooted.
```

0601000005 AUTH_FAIL

Meaning

Camera authentication failure.

Fields

Field	Value	Data Type	Length
log_id	0601000005	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	start	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' authentication failure for <FUSER> from <FFROM>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000005 type=camera subtype=event pri=information
user=system action=start camera=<CAMERA> msg=Camera '<CAMERA>' authentication failure
for <FUSER> from <FFROM>.
```

0601000006 CONFIGURE

Meaning

Camera configured.

Fields

Field	Value	Data Type	Length
log_id	0601000006	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	<USER>	string	32
action	update	string	16
camera	<CAMERA>	string	32
msg	Camera configuration sent to '<CAMERA>' by <USER> from <FROM>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000006 type=camera subtype=event pri=information
user=<USER> action=update camera=<CAMERA> msg=Camera configuration sent to '<CAMERA>'
by <USER> from <FROM>.
```

0601000007 ENABLE

Meaning

Camera enabled.

Fields

Field	Value	Data Type	Length
log_id	0601000007	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	<USER>	string	32
action	start	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' enabled by <USER> from <FROM>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000007 type=camera subtype=event pri=information
user=<USER> action=start camera=<CAMERA> msg=Camera '<CAMERA>' enabled by <USER> from
<FROM>.
```

0601000008 DISABLE

Meaning

Camera disabled.

Fields

Field	Value	Data Type	Length
log_id	0601000008	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	<USER>	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' disabled by <USER> from <FROM>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000008 type=camera subtype=event pri=information
  user=<USER> action=stop camera=<CAMERA> msg=Camera '<CAMERA>' disabled by <USER> from
  <FROM>.
```

0601000010 COMMUNICATION_FAIL

Meaning

Camera experienced a communication problem.

Fields

Field	Value	Data Type	Length
log_id	0601000010	string	10
type	camera	string	16
subtype	event	string	20
pri	warning	uint8	1
user	system	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' experienced a communication problem.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000010 type=camera subtype=event pri=warning user=system
  action=stop camera=<CAMERA> msg=Camera '<CAMERA>' experienced a communication problem.
```

0601000011 DISCOVERY_UPDATE

Meaning

A camera has had an IP change and that information has been updated in the FortiRecorder configuration.

Fields

Field	Value	Data Type	Length
log_id	0601000011	string	10

Field	Value	Data Type	Length
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	update	string	16
camera	<CAMERA>	string	32
msg	Discovery updated the IP address for camera '<CAMERA>' (<MAC>) from <FROM_IP> to <TO_IP>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000011 type=camera subtype=event pri=information
user=system action=update camera=<CAMERA> msg=Discovery updated the IP address for
camera '<CAMERA>' (<MAC>) from <FROM_IP> to <TO_IP>.
```

0601000015 CAMERA_REPLACED

Meaning

Camera mac address has been replaced with other mac address.

Fields

Field	Value	Data Type	Length
log_id	0601000015	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	replace	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' <OLDMAC> has been replaced with device <NEWMAC>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000015 type=camera subtype=event pri=information
user=system action=replace camera=<CAMERA> msg=Camera '<CAMERA>' <OLDMAC> has been
replaced with device <NEWMAC>.
```

0601000016 VIDEO_DOWNLOADED

Meaning

User downloaded a video file.

Fields

Field	Value	Data Type	Length
log_id	0601000016	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	<USER>	string	32
action	download	string	16
camera	<CAMERA>	string	32
msg	User <USER> from <ADDR> downloaded a video file for camera '<CAMERA>', start time: <START_TIME>, end time: <END_TIME>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000016 type=camera subtype=event pri=information
user=<USER> action=download camera=<CAMERA> msg=User <USER> from <ADDR> downloaded a
video file for camera '<CAMERA>', start time: <START_TIME>, end time: <END_TIME>.
```

0601000019 VIDEO_LOCKED

Meaning

User locked video file.

Fields

Field	Value	Data Type	Length
log_id	0601000019	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1

Field	Value	Data Type	Length
user	<USER>	string	32
action	video_lock	string	16
camera	<CAMERA>	string	32
msg	User <USER> from <ADDR> locked video file <FILE> for camera '<CAMERA>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000019 type=camera subtype=event pri=information
  user=<USER> action=video_lock camera=<CAMERA> msg=User <USER> from <ADDR> locked video
  file <FILE> for camera '<CAMERA>'.
```

0601000021 RESTRICTED_VIDEO_ACCESSED

Meaning

User accessed restricted video file.

Fields

Field	Value	Data Type	Length
log_id	0601000021	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	<USER>	string	32
action	video_access	string	16
camera	<CAMERA>	string	32
msg	User <USER> from <ADDR> accessed restricted video file <FILE> for camera '<CAMERA>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000021 type=camera subtype=event pri=information
  user=<USER> action=video_access camera=<CAMERA> msg=User <USER> from <ADDR> accessed
  restricted video file <FILE> for camera '<CAMERA>'.
```

060100023 INCORRECT_CONFIGURATION

Meaning

Camera provisioning is incorrect.

Fields

Field	Value	Data Type	Length
log_id	0601000023	string	10
type	camera	string	16
subtype	event	string	20
pri	warning	uint8	1
user	system	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Provisioning of '<CAMERA>' is incorrect.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000023 type=camera subtype=event pri=warning user=system
action=stop camera=<CAMERA> msg=Provisioning of '<CAMERA>' is incorrect.
```

060100027 CAMERA_NO_MODEL

Meaning

Camera has no model information for vendor and model.

Fields

Field	Value	Data Type	Length
log_id	0601000027	string	10
type	camera	string	16
subtype	event	string	20
pri	error	uint8	1
user	system	string	32
action	config	string	16

Field	Value	Data Type	Length
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' has no model information for vendor '<VENDOR>' and model '<MODEL>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000027 type=camera subtype=event pri=error user=system
action=config camera=<CAMERA> msg=Camera '<CAMERA>' has no model information for
vendor '<VENDOR>' and model '<MODEL>'.
```

0601000028 CAMERA_UNSUPPORTED_ASPECT_RATIO

Meaning

Unsupported aspect ratio.

Fields

Field	Value	Data Type	Length
log_id	0601000028	string	10
type	camera	string	16
subtype	event	string	20
pri	error	uint8	1
user	system	string	32
action	config	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>': unsupported aspect ratio.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000028 type=camera subtype=event pri=error user=system
action=config camera=<CAMERA> msg=Camera '<CAMERA>': unsupported aspect ratio.
```

0601000029 CAMERA_UNSUPPORTED_TRANSPORT_TYPE

Meaning

Unsupported media transport type.

Fields

Field	Value	Data Type	Length
log_id	0601000029	string	10
type	camera	string	16
subtype	event	string	20
pri	error	uint8	1
user	system	string	32
action	config	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>': unsupported media transport type.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000029 type=camera subtype=event pri=error user=system
action=config camera=<CAMERA> msg=Camera '<CAMERA>': unsupported media transport type.
```

0601000030 CAMERA_OWNER_OVERRIDE

Meaning

Camera has been assigned to this NVR.

Fields

Field	Value	Data Type	Length
log_id	0601000030	string	10
type	camera	string	16
subtype	event	string	20
pri	warning	uint8	1
user	system	string	32
action	config	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>', in use by the NVR at <NVRIP>, has been assigned to this NVR.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000030 type=camera subtype=event pri=warning user=system
  action=config camera=<CAMERA> msg=Camera '<CAMERA>', in use by the NVR at <NVRIP>, has
  been assigned to this NVR.
```

0601000031 CAMERA_INUSE

Meaning

Camera is in use by the other NVR.

Fields

Field	Value	Data Type	Length
log_id	0601000031	string	10
type	camera	string	16
subtype	event	string	20
pri	warning	uint8	1
user	system	string	32
action	config	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' is in use by the NVR at <NVRIP>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000031 type=camera subtype=event pri=warning user=system
  action=config camera=<CAMERA> msg=Camera '<CAMERA>' is in use by the NVR at <NVRIP>.
```

0601000032 CAMERA_INUSE_VERIFY

Meaning

Ownership of the camera cannot be verified.

Fields

Field	Value	Data Type	Length
log_id	0601000032	string	10

Field	Value	Data Type	Length
type	camera	string	16
subtype	event	string	20
pri	error	uint8	1
user	system	string	32
action	config	string	16
camera	<CAMERA>	string	32
msg	Ownership of camera '<CAMERA>' can't be verified.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000032 type=camera subtype=event pri=error user=system
action=config camera=<CAMERA> msg=Ownership of camera '<CAMERA>' can't be verified.
```

0601000034 CAMERA_RENAME_OK

Meaning

Camera rename completed successfully.

Fields

Field	Value	Data Type	Length
log_id	0601000034	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	config	string	16
camera	none	string	32
msg	Rename of camera '<ONAME>' to '<NAME>' completed successfully.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000034 type=camera subtype=event pri=information
user=system action=config camera= msg=Rename of camera '<ONAME>' to '<NAME>' completed
successfully.
```

0601000035 CAMERA_DELETE_NOT_OWNER

Meaning

Deleted camera is in use by the other NVR.

Fields

Field	Value	Data Type	Length
log_id	0601000035	string	10
type	camera	string	16
subtype	event	string	20
pri	warning	uint8	1
user	system	string	32
action	config	string	16
camera	<CAMERA>	string	32
msg	Deleted camera '<CAMERA>' is in use by the NVR at <NVRIP>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000035 type=camera subtype=event pri=warning user=system
action=config camera=<CAMERA> msg=Deleted camera '<CAMERA>' is in use by the NVR at
<NVRIP>.
```

0601000036 CAMERA_DELETE_OK

Meaning

Camera deletion completed successfully.

Fields

Field	Value	Data Type	Length
log_id	0601000036	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32

Field	Value	Data Type	Length
action	config	string	16
camera	<CAMERA>	string	32
msg	Deletion of camera '<CAMERA>' completed successfully.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000036 type=camera subtype=event pri=information
user=system action=config camera=<CAMERA> msg=Deletion of camera '<CAMERA>' completed
successfully.
```

0601000037 CAMERA_CONFIG_ERROR

Meaning

Camera configuration failed.

Fields

Field	Value	Data Type	Length
log_id	0601000037	string	10
type	camera	string	16
subtype	event	string	20
pri	error	uint8	1
user	system	string	32
action	config	string	16
camera	<CAMERA>	string	32
msg	Configuration of camera '<CAMERA>' failed: '<MSG>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000037 type=camera subtype=event pri=error user=system
action=config camera=<CAMERA> msg=Configuration of camera '<CAMERA>' failed: '<MSG>'.
```

0601000038 CAMERA_CONFIG_SCHED_ERROR

Meaning

Camera configuration scheduling failed.

Fields

Field	Value	Data Type	Length
log_id	0601000038	string	10
type	camera	string	16
subtype	event	string	20
pri	error	uint8	1
user	system	string	32
action	config	string	16
camera	<CAMERA>	string	32
msg	Configuration of camera '<CAMERA>' failed: '<MSG>', scheduling error: '<SCHEDMSG>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000038 type=camera subtype=event pri=error user=system
action=config camera=<CAMERA> msg=Configuration of camera '<CAMERA>' failed: '<MSG>',
scheduling error: '<SCHEDMSG>'.
```

0601000039 CAMERA_UPDATE_ONVIF_MODEL

Meaning

Updating ONVIF camera model.

Fields

Field	Value	Data Type	Length
log_id	0601000039	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	config	string	16
camera	none	string	32
msg	Updating ONVIF camera model <VENDOR>-<MODEL>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000039 type=camera subtype=event pri=information
  user=system action=config camera= msg=Updating ONVIF camera model <VENDOR>-<MODEL>.
```

0601000040 CAMERA_UPDATE_ONVIF_MODEL_OK

Meaning

Updating ONVIF camera model succeeded.

Fields

Field	Value	Data Type	Length
log_id	0601000040	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	config	string	16
camera	none	string	32
msg	Updating ONVIF camera model <VENDOR>-<MODEL> succeeded.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000040 type=camera subtype=event pri=information
  user=system action=config camera= msg=Updating ONVIF camera model <VENDOR>-<MODEL>
  succeeded.
```

0601000041 CAMERA_UPDATE_ONVIF_MODEL_FAILED

Meaning

Updating ONVIF camera model failed.

Fields

Field	Value	Data Type	Length
log_id	0601000041	string	10

Field	Value	Data Type	Length
type	camera	string	16
subtype	event	string	20
pri	error	uint8	1
user	system	string	32
action	config	string	16
camera	none	string	32
msg	Updating ONVIF camera model <VENDOR>-<MODEL> failed.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000041 type=camera subtype=event pri=error user=system
action=config camera= msg=Updating ONVIF camera model <VENDOR>-<MODEL> failed.
```

0601000042 PASSWORD_VALIDATED

Meaning

Camera password validated.

Fields

Field	Value	Data Type	Length
log_id	0601000042	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	<PTYPE> password on camera '<CAMERA>' has been validated.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000042 type=camera subtype=event pri=information
user=system action=none camera=<CAMERA> msg=<PTYPE> password on camera '<CAMERA>' has
been validated.
```

060100043 PASSWORD_UPDATED

Meaning

Camera password has been updated.

Fields

Field	Value	Data Type	Length
log_id	0601000043	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	<PTYPE> password on camera '<CAMERA>' has been updated.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000043 type=camera subtype=event pri=information
user=system action=none camera=<CAMERA> msg=<PTYPE> password on camera '<CAMERA>' has
been updated.
```

060100044 PASSWORD_NOT_FOUND

Meaning

Camera password could not be found.

Fields

Field	Value	Data Type	Length
log_id	0601000044	string	10
type	camera	string	16
subtype	event	string	20
pri	error	uint8	1
user	system	string	32

Field	Value	Data Type	Length
action	none	string	16
camera	<CAMERA>	string	32
msg	<PTYPE> password on camera '<CAMERA>' could not be found.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000044 type=camera subtype=event pri=error user=system
action=none camera=<CAMERA> msg=<PTYPE> password on camera '<CAMERA>' could not be
found.
```

0601000045 PASSWORD_VALIDATION_FAILED

Meaning

Camera password validation failed.

Fields

Field	Value	Data Type	Length
log_id	0601000045	string	10
type	camera	string	16
subtype	event	string	20
pri	error	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	<PTYPE> password on camera '<CAMERA>' could not be validated.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000045 type=camera subtype=event pri=error user=system
action=none camera=<CAMERA> msg=<PTYPE> password on camera '<CAMERA>' could not be
validated.
```

0601000046 PASSWORD_RESET

Meaning

Camera password has been reset to factory defaults.

Fields

Field	Value	Data Type	Length
log_id	0601000046	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	<PTYPE> password on camera '<CAMERA>' has been reset to factory default.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000046 type=camera subtype=event pri=information
user=system action=none camera=<CAMERA> msg=<PTYPE> password on camera '<CAMERA>' has
been reset to factory default.
```

0601000047 PASSWORD_DEFAULT

Meaning

Camera password is already factory default.

Fields

Field	Value	Data Type	Length
log_id	0601000047	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	<PTYPE> password on camera '<CAMERA>' is already factory default.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000047 type=camera subtype=event pri=information
  user=system action=none camera=<CAMERA> msg=<PTYPE> password on camera '<CAMERA>' is
  already factory default.
```

0601000048 CAMERA_VIDEO_STREAM_CHANGE

Meaning

Video-streams on camera have changed.

Fields

Field	Value	Data Type	Length
log_id	0601000048	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	Video-streams on camera '<CAMERA>' have changed to '<TO>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000048 type=camera subtype=event pri=information
  user=system action=none camera=<CAMERA> msg=Video-streams on camera '<CAMERA>' have
  changed to '<TO>'.
```

0601000049 CAMERA_SETTING_CHANGE

Meaning

Camera settings on camera have changed.

Fields

Field	Value	Data Type	Length
log_id	0601000049	string	10

Field	Value	Data Type	Length
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	Camera-settings on '<CAMERA>' have changed to '<TO>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000049 type=camera subtype=event pri=information
  user=system action=none camera=<CAMERA> msg=Camera-settings on '<CAMERA>' have changed
  to '<TO>'.
```

0601000050 COMMUNICATION_SUCCESS

Meaning

Communication with camera is re-established.

Fields

Field	Value	Data Type	Length
log_id	0601000050	string	10
type	camera	string	16
subtype	event	string	20
pri	warning	uint8	1
user	system	string	32
action	start	string	16
camera	<CAMERA>	string	32
msg	Communication with camera '<CAMERA>' is re-established.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000050 type=camera subtype=event pri=warning user=system
  action=start camera=<CAMERA> msg=Communication with camera '<CAMERA>' is re-
  established.
```

0601000051 CONFIG_RETRY

Meaning

Retrying configuration for camera.

Fields

Field	Value	Data Type	Length
log_id	0601000051	string	10
type	camera	string	16
subtype	event	string	20
pri	warning	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	Retrying configuration (attempt 1) for camera <CAMERA>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000051 type=camera subtype=event pri=warning user=system
action=none camera=<CAMERA> msg=Retrying configuration (attempt 1) for camera
<CAMERA>.
```

0601000052 CONFIG_RETRIES_FAILED

Meaning

Configuration of camera failed after several attempts.

Fields

Field	Value	Data Type	Length
log_id	0601000052	string	10
type	camera	string	16
subtype	event	string	20
pri	warning	uint8	1
user	system	string	32

Field	Value	Data Type	Length
action	none	string	16
camera	<CAMERA>	string	32
msg	Configuration of camera <CAMERA> failed after 1 retries.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000052 type=camera subtype=event pri=warning user=system
action=none camera=<CAMERA> msg=Configuration of camera <CAMERA> failed after 1
retries.
```

0601000053 SD_FORMAT

Meaning

User formatted the SD card for camera.

Fields

Field	Value	Data Type	Length
log_id	0601000053	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	<USER>	string	32
action	delete	string	16
camera	<CAMERA>	string	32
msg	User <USER> from <ADDR> formatted the SD card for camera '<CAMERA>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000053 type=camera subtype=event pri=information
user=<USER> action=delete camera=<CAMERA> msg=User <USER> from <ADDR> formatted the SD
card for camera '<CAMERA>'.
```

0601000054 SD_FORMAT_FAIL

Meaning

Formatting the SD card for camera failed.

Fields

Field	Value	Data Type	Length
log_id	0601000054	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	<USER>	string	32
action	delete	string	16
camera	<CAMERA>	string	32
msg	Formatting the SD card for camera '<CAMERA>' by user <USER> from <ADDR> failed.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000054 type=camera subtype=event pri=information
user=<USER> action=delete camera=<CAMERA> msg=Formatting the SD card for camera
'<CAMERA>' by user <USER> from <ADDR> failed.
```

0601000056 CAMERA_PROBLEM

Meaning

Camera is experiencing a problem. Certain measures will be taken.

Fields

Field	Value	Data Type	Length
log_id	0601000056	string	10
type	camera	string	16
subtype	event	string	20
pri	warning	uint8	1

Field	Value	Data Type	Length
user	system	string	32
action	verify	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' is experiencing a problem with <PROBLEM>. Camera will be <CORRECTIVE_ACTION>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000056 type=camera subtype=event pri=warning user=system
action=verify camera=<CAMERA> msg=Camera '<CAMERA>' is experiencing a problem with
<PROBLEM>. Camera will be <CORRECTIVE_ACTION>.
```

0601000057 VIDEO_SPOOL_DOWNGRADE

Meaning

Downgrade of local/remote video spool.

Fields

Field	Value	Data Type	Length
log_id	0601000057	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	none	string	16
camera	none	string	32
msg	Downgrade of local video spool from version V3 to version V2 successful.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000057 type=camera subtype=event pri=information
user=system action=none camera= msg=Downgrade of local video spool from version V3 to
version V2 successful.
```

0601000058 CAMERA_MIGRATION_START

Meaning

Migration of local/remote video spool is starting.

Fields

Field	Value	Data Type	Length
log_id	0601000058	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	none	string	16
camera	none	string	32
msg	Migration of local video spool from version V2 to version V3 starting.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000058 type=camera subtype=event pri=information
user=system action=none camera=msg=Migration of local video spool from version V2 to
version V3 starting.
```

0601000059 CAMERA_MIGRATION_END

Meaning

Migration of local/remote video spool finished.

Fields

Field	Value	Data Type	Length
log_id	0601000059	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32

Field	Value	Data Type	Length
action	none	string	16
camera	none	string	32
msg	Migration of local video spool from version V2 to version V3 finished.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000059 type=camera subtype=event pri=information
user=system action=none camera= msg=Migration of local video spool from version V2 to
version V3 finished.
```

0601000060 CAMERA_MIGRATED

Meaning

Recordings have been migrated.

Fields

Field	Value	Data Type	Length
log_id	0601000060	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	Local recordings for camera '<CAMERA>' have been migrated from video spool version V2 to version V3.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000060 type=camera subtype=event pri=information
user=system action=none camera=<CAMERA> msg=Local recordings for camera '<CAMERA>'
have been migrated from video spool version V2 to version V3.
```

0601000062 DISABLED_CAMERA_MOTION_EVENT

Meaning

A camera event was unexpectedly received from a disabled camera.

Fields

Field	Value	Data Type	Length
log_id	0601000062	string	10
type	camera	string	16
subtype	event	string	20
pri	warning	uint8	1
user	system	string	32
action	config	string	16
camera	<CAMERA>	string	32
msg	Received motion event from disabled camera '<CAMERA>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000062 type=camera subtype=event pri=warning user=system
action=config camera=<CAMERA> msg=Received motion event from disabled camera
'<CAMERA>'.
```

0601000063 UI_PROXY_OPENED

Meaning

User opened proxy tunnel to camera.

Fields

Field	Value	Data Type	Length
log_id	0601000063	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	<USER>	string	32

Field	Value	Data Type	Length
action	none	string	16
camera	<CAMERA>	string	32
msg	User '<USER>' opened proxy tunnel to camera '<CAMERA>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000063 type=camera subtype=event pri=information
  user=<USER> action=none camera=<CAMERA> msg=User '<USER>' opened proxy tunnel to
  camera '<CAMERA>'.
```

0601000064 UI_PROXY_CLOSED

Meaning

User closed proxy tunnel to camera.

Fields

Field	Value	Data Type	Length
log_id	0601000064	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	<USER>	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	User '<USER>' closed proxy tunnel to camera '<CAMERA>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000064 type=camera subtype=event pri=information
  user=<USER> action=none camera=<CAMERA> msg=User '<USER>' closed proxy tunnel to
  camera '<CAMERA>'.
```

0601000065 UI_PROXY_CLOSED_ALL

Meaning

User closed all proxy tunnels to camera.

Fields

Field	Value	Data Type	Length
log_id	0601000065	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	none	string	32
action	none	string	16
camera	none	string	32
msg	Closed all proxy tunnels for source ip '<SRC_IP4>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000065 type=camera subtype=event pri=information user=
action=none camera= msg=Closed all proxy tunnels for source ip '<SRC_IP4>'.
```

0601000067 CAMERA_INUSE_CLOUD

Meaning

Cloud camera is already in use.

Fields

Field	Value	Data Type	Length
log_id	0601000067	string	10
type	camera	string	16
subtype	event	string	20
pri	warning	uint8	1
user	system	string	32
action	config	string	16
camera	<CAMERA>	string	32
msg	Cloud camera '<CAMERA>' is already in use.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000067 type=camera subtype=event pri=warning user=system
action=config camera=<CAMERA> msg=Cloud camera '<CAMERA>' is already in use.
```

0601000068 CAMERA_DELETE_CLOUD

Meaning

Deleted cloud camera is being used on the cloud.

Fields

Field	Value	Data Type	Length
log_id	0601000068	string	10
type	camera	string	16
subtype	event	string	20
pri	warning	uint8	1
user	system	string	32
action	config	string	16
camera	<CAMERA>	string	32
msg	Deleted cloud camera '<CAMERA>' is being used on the cloud.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000068 type=camera subtype=event pri=warning user=system
action=config camera=<CAMERA> msg=Deleted cloud camera '<CAMERA>' is being used on the
cloud.
```

0601000069 VIDEO_UNLOCKED

Meaning

User unlocked video file.

Fields

Field	Value	Data Type	Length
log_id	0601000069	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	<USER>	string	32

Field	Value	Data Type	Length
action	video_unlock	string	16
camera	<CAMERA>	string	32
msg	User <USER> from <ADDR> unlocked video file <FILE> for camera '<CAMERA>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000069 type=camera subtype=event pri=information
user=<USER> action=video_unlock camera=<CAMERA> msg=User <USER> from <ADDR> unlocked
video file <FILE> for camera '<CAMERA>'.
```

0601000070 WRONG_NVR

Meaning

Camera configuration was changed by a different NVR.

Fields

Field	Value	Data Type	Length
log_id	0601000070	string	10
type	camera	string	16
subtype	event	string	20
pri	warning	uint8	1
user	system	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' configuration was changed by a different NVR - <NVRIP>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000070 type=camera subtype=event pri=warning user=system
action=stop camera=<CAMERA> msg=Camera '<CAMERA>' configuration was changed by a
different NVR - <NVRIP>.
```

0601000071 AUTOCONFIG_CAMERA_ENABLE

Meaning

Autoconfigured camera has been enabled.

Fields

Field	Value	Data Type	Length
log_id	0601000071	string	10
type	camera	string	16
subtype	event	string	20
pri	information	uint8	1
user	system	string	32
action	config	string	16
camera	<CAMERA>	string	32
msg	Autoconfigure camera '<CAMERA>' has been enabled.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000071 type=camera subtype=event pri=information
user=system action=config camera=<CAMERA> msg=Autoconfigure camera '<CAMERA>' has been
enabled.
```

0601000072 AUTOCONFIG_CAMERA_ENABLE_FAIL

Meaning

Autoconfigured camera has been enabled.

Fields

Field	Value	Data Type	Length
log_id	0601000072	string	10
type	camera	string	16
subtype	event	string	20
pri	warning	uint8	1
user	system	string	32

Field	Value	Data Type	Length
action	config	string	16
camera	<CAMERA>	string	32
msg	Autoconfigure camera '<CAMERA>' failed to enable: '<MSG>'	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0601000072 type=camera subtype=event pri=warning user=system
  action=config camera=<CAMERA> msg=Autoconfigure camera '<CAMERA>' failed to enable:
  '<MSG>'
```

firmware

If the log message header contains:

```
subtype=firmware
```

then the log message describes a software update on a camera that is connected to the FortiRecorder unit.

This section describes log messages of that subtype.

0605000001 STARTED_FIRMWARE_UPDATE

Meaning

Started firmware update for camera.

Fields

Field	Value	Data Type	Length
log_id	0605000001	string	10
type	camera	string	16
subtype	firmware	string	20
pri	information	uint8	1
user	<USER>	string	32
action	start	string	16
camera	<CAMERA>	string	32
msg	Started firmware update for camera '<CAMERA>' to version '<FW_VERSION>' by <USER> from <FROM>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0605000001 type=camera subtype=firmware pri=information
user=<USER> action=start camera=<CAMERA> msg=Started firmware update for camera
'<CAMERA>' to version '<FW_VERSION>' by <USER> from <FROM>'.
```

0605000002 FIRMWARE_UPDATE_SUCCESS

Meaning

Successfully updated camera firmware.

Fields

Field	Value	Data Type	Length
log_id	0605000002	string	10
type	camera	string	16
subtype	firmware	string	20
pri	information	uint8	1
user	<USER>	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Successfully updated camera '<CAMERA>' to '<FW_VERSION>' by <USER> from <FROM>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0605000002 type=camera subtype=firmware pri=information
user=<USER> action=stop camera=<CAMERA> msg=Successfully updated camera '<CAMERA>' to
'<FW_VERSION>' by <USER> from <FROM>'.
```

0605000003 FIRMWARE_UPDATE_FAILURE

Meaning

Failed updating camera firmware.

Fields

Field	Value	Data Type	Length
log_id	0605000003	string	10
type	camera	string	16
subtype	firmware	string	20
pri	error	uint8	1
user	<USER>	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Failed updating camera '<CAMERA>' to '<FW_VERSION>' with error 1 by <USER> from <FROM>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0605000003 type=camera subtype=firmware pri=error user=<USER>
action=stop camera=<CAMERA> msg=Failed updating camera '<CAMERA>' to '<FW_VERSION>'
with error 1 by <USER> from <FROM>.
```

frcc

If the log message header contains:

```
subtype=frcc
```

then the log message describes actions and errors on FortiCentral installations.

This section describes log messages of that subtype.

0609000001 PACKET_SKIPPED

Meaning

FortiCentral packets skipped in output queue (time delay in s, queue size in bytes). Stages: 'P frames skipping','round robin I frames','keep alive (ping only)'

Fields

Field	Value	Data Type	Length
log_id	0609000001	string	10

Field	Value	Data Type	Length
type	camera	string	16
subtype	frcc	string	20
pri	alert	uint8	1
user	none	string	32
action	none	string	16
camera	none	string	32
msg	FortiCentral client connection <ADDR> <SKIP_STAGE>, 2, 3.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0609000001 type=camera subtype=frcc pri=alert user=
action=none camera= msg=FortiCentral client connection <ADDR> <SKIP_STAGE>, 2, 3.
```

0609000002 VIDEO_EXPORTED

Meaning

FortiCentral exported a video file for camera.

Fields

Field	Value	Data Type	Length
log_id	0609000002	string	10
type	camera	string	16
subtype	frcc	string	20
pri	information	uint8	1
user	none	string	32
action	download	string	16
camera	<CAMERA>	string	32
msg	FortiCentral from <ADDR> exported a video file for camera '<CAMERA>', start time: <START_TIME>, end time: <END_TIME>, file size : 1, <HASH_TYPE> - <HASH_CHECKSUM>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0609000002 type=camera subtype=frcc pri=information user=
action=download camera=<CAMERA> msg=FortiCentral from <ADDR> exported a video file for
camera '<CAMERA>', start time: <START_TIME>, end time: <END_TIME>, file size : 1,
<HASH_TYPE> - <HASH_CHECKSUM>.
```

0609000003 VIDEO_MERGED

Meaning

FortiCentral merged video files. The hash value can be used to verify authenticity of the downloaded file.

Fields

Field	Value	Data Type	Length
log_id	0609000003	string	10
type	camera	string	16
subtype	frcc	string	20
pri	information	uint8	1
user	none	string	32
action	download	string	16
camera	<CAMERA>	string	32
msg	FortiCentral from <ADDR> merged video files for camera '<CAMERA>' file size : <FILE_SIZE>, Hash <HASH_ALGORITHM>: <HASH_CHECKSUM>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0609000003 type=camera subtype=frcc pri=information user=
action=download camera=<CAMERA> msg=FortiCentral from <ADDR> merged video files for
camera '<CAMERA>' file size : <FILE_SIZE>, Hash <HASH_ALGORITHM>: <HASH_CHECKSUM>.
```

light-level

If the log message header contains:

```
subtype=light-level
```

then the log message describes a change in brightness or darkness detected by a camera that is connected to the FortiRecorder unit.

This section describes log messages of that subtype.

0606000001 LIGHT_LEVEL

Meaning

Camera light level values.

Fields

Field	Value	Data Type	Length
log_id	0606000001	string	10
type	camera	string	16
subtype	light-level	string	20
pri	information	uint8	1
user	system	string	32
action	update	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' light-level = '1'	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0606000001 type=camera subtype=light-level pri=information
user=system action=update camera=<CAMERA> msg=Camera '<CAMERA>' light-level = '1'
```

0606000002 LIGHT_LEVEL_START

Meaning

Camera light-level monitoring started.

Fields

Field	Value	Data Type	Length
log_id	0606000002	string	10
type	camera	string	16
subtype	light-level	string	20
pri	information	uint8	1
user	system	string	32
action	start	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' light-level monitoring started	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0606000002 type=camera subtype=light-level pri=information
user=system action=start camera=<CAMERA> msg=Camera '<CAMERA>' light-level monitoring
```

started

0606000003 LIGHT_LEVEL_STOP

Meaning

Camera light-level monitoring stopped.

Fields

Field	Value	Data Type	Length
log_id	0606000003	string	10
type	camera	string	16
subtype	light-level	string	20
pri	information	uint8	1
user	system	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' light-level monitoring stopped	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0606000003 type=camera subtype=light-level pri=information
user=system action=stop camera=<CAMERA> msg=Camera '<CAMERA>' light-level monitoring
stopped
```

0606000004 LIGHT_LEVEL_FAIL

Meaning

Camera failed to read light-level values.

Fields

Field	Value	Data Type	Length
log_id	0606000004	string	10
type	camera	string	16
subtype	light-level	string	20

Field	Value	Data Type	Length
pri	information	uint8	1
user	system	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' failed to take light-level reading	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0606000004 type=camera subtype=light-level pri=information
user=system action=stop camera=<CAMERA> msg=Camera '<CAMERA>' failed to take light-
level reading
```

notification

If the log message header contains:

```
subtype=notification
```

then the log message describes motion detection notification activities, such as when a motion detection video clip cannot be made by a camera that is connected to the FortiRecorder unit.

This section describes log messages of that subtype.

0603000001 SENT_NOTIFICATION

Meaning

A camera event triggered a configured user notification.

Fields

Field	Value	Data Type	Length
log_id	0603000001	string	10
type	camera	string	16
subtype	notification	string	20
pri	information	uint8	1
user	system	string	32
notification	<NOTIFICATION>	string	32
camera	<CAMERA>	string	32

Field	Value	Data Type	Length
msg	Notification '<NOTIFICATION>' was triggered for camera '<CAMERA>', <MTYPES> been sent.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0603000001 type=camera subtype=notification pri=information
user=system notification=<NOTIFICATION> camera=<CAMERA> msg=Notification
'<NOTIFICATION>' was triggered for camera '<CAMERA>', <MTYPES> been sent.
```

0603000002 FAILED_NOTIFICATION

Meaning

A camera event triggered a configured user notification but none of the users have access to the camera.

Fields

Field	Value	Data Type	Length
log_id	0603000002	string	10
type	camera	string	16
subtype	notification	string	20
pri	error	uint8	1
user	system	string	32
notification	<NOTIFICATION>	string	32
camera	<CAMERA>	string	32
msg	Notification '<NOTIFICATION>' was triggered for camera '<CAMERA>', but has no users with access to that camera.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0603000002 type=camera subtype=notification pri=error
user=system notification=<NOTIFICATION> camera=<CAMERA> msg=Notification
'<NOTIFICATION>' was triggered for camera '<CAMERA>', but has no users with access to
that camera.
```

0603000003 FAILED_EXTRACT

Meaning

An attempt to create a motion clip failed because there is no video recording available at that time.

Fields

Field	Value	Data Type	Length
log_id	0603000003	string	10
type	camera	string	16
subtype	notification	string	20
pri	error	uint8	1
user	system	string	32
notification	none	string	32
camera	<CAMERA>	string	32
msg	No available video to extract motion clip for '<CAMERA>' in range <START_TIME> - <END_TIME>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0603000003 type=camera subtype=notification pri=error
user=system notification= camera=<CAMERA> msg=No available video to extract motion
clip for '<CAMERA>' in range <START_TIME> - <END_TIME>.
```

0603000004 CAM_EVENT_THRESHOLD

Meaning

This is a notice that a backlog of events is building up for a camera. Consider lowering the event sensitivity.

Fields

Field	Value	Data Type	Length
log_id	0603000004	string	10
type	camera	string	16
subtype	notification	string	20
pri	error	uint8	1
user	system	string	32
notification	none	string	32
camera	<CAMERA>	string	32
msg	Camera event backlog threshold of 1 reached for '<CAMERA>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0603000004 type=camera subtype=notification pri=error
user=system notification= camera=<CAMERA> msg=Camera event backlog threshold of 1
reached for '<CAMERA>'.
```

0603000005 CAM_EVENT_BACKLOG

Meaning

The limit for camera event backlog was reached. Events older than the limit will not be processed.

Fields

Field	Value	Data Type	Length
log_id	0603000005	string	10
type	camera	string	16
subtype	notification	string	20
pri	error	uint8	1
user	system	string	32
notification	none	string	32
camera	<CAMERA>	string	32
msg	Maximum camera event backlog of 1 reached. Not processing events for '<CAMERA>' older than <BACKLOG_CUTOFF_TIME>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0603000005 type=camera subtype=notification pri=error
user=system notification= camera=<CAMERA> msg=Maximum camera event backlog of 1
reached. Not processing events for '<CAMERA>' older than <BACKLOG_CUTOFF_TIME>.
```

quota

If the log message header contains:

```
subtype=quota
```

then the log message describes disk space usage quota warnings, local (camera) and remote disk availability errors, and moving files from local to remote storage.

This section describes log messages of that subtype.

0604000001 EXPIRE_SUCCESS

Meaning

Some videos on local/remote storage expired and have been moved/deleted

Fields

Field	Value	Data Type	Length
log_id	0604000001	string	10
type	camera	string	16
subtype	quota	string	20
pri	information	uint8	1
user	system	string	32
action	start	string	16
camera	<CAMERA>	string	32
msg	Expiry: moved 4 continuous videos older than <DATE> for '<CAMERA>' from local storage, size 5.50 MB.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000001 type=camera subtype=quota pri=information
user=system action=start camera=<CAMERA> msg=Expiry: moved 4 continuous videos older
than <DATE> for '<CAMERA>' from local storage, size 5.50 MB.
```

0604000002 EXPIRE_ERROR

Meaning

Failed to move/delete expired videos

Fields

Field	Value	Data Type	Length
log_id	0604000002	string	10
type	camera	string	16
subtype	quota	string	20
pri	error	uint8	1

Field	Value	Data Type	Length
user	system	string	32
action	start	string	16
camera	<CAMERA>	string	32
msg	Expiry: failed to move 4 continuous videos older than <DATE> for '<CAMERA>' from local storage, size 5.50 MB.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000002 type=camera subtype=quota pri=error user=system
action=start camera=<CAMERA> msg=Expiry: failed to move 4 continuous videos older than
<DATE> for '<CAMERA>' from local storage, size 5.50 MB.
```

0604000003 QUOTA_DELETE_SUCCESS

Meaning

Some videos on local/remote storage have been moved/delete due to quota limit

Fields

Field	Value	Data Type	Length
log_id	0604000003	string	10
type	camera	string	16
subtype	quota	string	20
pri	information	uint8	1
user	system	string	32
action	start	string	16
camera	none	string	32
msg	Quota: moved 3 videos from local storage, size 4.50 MB.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000003 type=camera subtype=quota pri=information
user=system action=start camera= msg=Quota: moved 3 videos from local storage, size
4.50 MB.
```

0604000004 QUOTA_DELETE_ERROR

Meaning

Failed to move/delete the videos during quota limit enforcement

Fields

Field	Value	Data Type	Length
log_id	0604000004	string	10
type	camera	string	16
subtype	quota	string	20
pri	error	uint8	1
user	system	string	32
action	start	string	16
camera	none	string	32
msg	Quota: failed to move 3 videos from local storage, size 4.50 MB.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000004 type=camera subtype=quota pri=error user=system  
action=start camera=msg=Quota: failed to move 3 videos from local storage, size 4.50  
MB.
```

0604000005 QUOTA_SPACE_CRITICAL

Meaning

Space used on local/remote storage has exceeded the quota

Fields

Field	Value	Data Type	Length
log_id	0604000005	string	10
type	camera	string	16
subtype	quota	string	20
pri	critical	uint8	1
user	system	string	32

Field	Value	Data Type	Length
action	none	string	16
camera	none	string	32
msg	Quota: space used on local storage has exceeded 2.50% of available space	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000005 type=camera subtype=quota pri=critical user=system
action=none camera= msg=Quota: space used on local storage has exceeded 2.50% of
available space
```

0604000006 QUOTA_REMOTE_SLOW

Meaning

Video files are being created faster than they can be moved to remote storage, and space on local storage has exceeded the quota. Some of the oldest video files will be deleted.

Fields

Field	Value	Data Type	Length
log_id	0604000006	string	10
type	camera	string	16
subtype	quota	string	20
pri	warning	uint8	1
user	system	string	32
action	none	string	16
camera	none	string	32
msg	Quota: video files are being created faster than they can be moved to remote storage, and space on local storage (3GB) has exceeded 1.50% of available space. At 2.50% some of the oldest video files will be deleted.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000006 type=camera subtype=quota pri=warning user=system
action=none camera= msg=Quota: video files are being created faster than they can be
moved to remote storage, and space on local storage (3GB) has exceeded 1.50% of
available space. At 2.50% some of the oldest video files will be deleted.
```

0604000007 QUOTA_SPACE_INFO

Meaning

Space used on local/remote storage has reached the quota.

Fields

Field	Value	Data Type	Length
log_id	0604000007	string	10
type	camera	string	16
subtype	quota	string	20
pri	information	uint8	1
user	system	string	32
action	none	string	16
camera	none	string	32
msg	Quota: space used on local storage is now under 2.50% of available space	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000007 type=camera subtype=quota pri=information
user=system action=none camera=msg=Quota: space used on local storage is now under
2.50% of available space
```

0604000008 QUOTA_NO_MORE_FILES

Meaning

No more files to delete/move.

Fields

Field	Value	Data Type	Length
log_id	0604000008	string	10
type	camera	string	16
subtype	quota	string	20
pri	error	uint8	1

Field	Value	Data Type	Length
user	system	string	32
action	start	string	16
camera	none	string	32
msg	Quota: no more files to move, space used on local storage is 3.50 MB	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000008 type=camera subtype=quota pri=error user=system
  action=start camera= msg=Quota: no more files to move, space used on local storage is
  3.50 MB
```

0604000009 QUOTA_FREE_TOO_LOW

Meaning

Deletion/moving videos on local/remote storage does not free more space.

Fields

Field	Value	Data Type	Length
log_id	0604000009	string	10
type	camera	string	16
subtype	quota	string	20
pri	warning	uint8	1
user	system	string	32
action	start	string	16
camera	none	string	32
msg	Quota: free space after move on local storage (4.50 MB) is not greater than free space before move (3.50 MB)	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000009 type=camera subtype=quota pri=warning user=system
  action=start camera= msg=Quota: free space after move on local storage (4.50 MB) is
  not greater than free space before move (3.50 MB)
```

0604000010 QUOTA_RECORDING_SUSPENDED

Meaning

Recording suspended due to lack of space.

Fields

Field	Value	Data Type	Length
log_id	0604000010	string	10
type	camera	string	16
subtype	quota	string	20
pri	alert	uint8	1
user	system	string	32
action	stop	string	16
camera	none	string	32
msg	Quota: Recording suspended due to lack of space	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000010 type=camera subtype=quota pri=alert user=system
action=stop camera= msg=Quota: Recording suspended due to lack of space
```

0604000011 QUOTA_RECORDING_RESUMED

Meaning

Recording resumed, space now available.

Fields

Field	Value	Data Type	Length
log_id	0604000011	string	10
type	camera	string	16
subtype	quota	string	20
pri	alert	uint8	1
user	system	string	32
action	start	string	16

Field	Value	Data Type	Length
camera	none	string	32
msg	Quota: Recording resumed, space now available	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000011 type=camera subtype=quota pri=alert user=system
action=start camera= msg=Quota: Recording resumed, space now available
```

0604000012 MOVE_DEFERRED

Meaning

Remote storage unavailable. Move operations have been deferred.

Fields

Field	Value	Data Type	Length
log_id	0604000012	string	10
type	camera	string	16
subtype	quota	string	20
pri	alert	uint8	1
user	system	string	32
action	move	string	16
camera	none	string	32
msg	Expiry: Remote storage unavailable. Move operations have been deferred.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000012 type=camera subtype=quota pri=alert user=system
action=move camera= msg=Expiry: Remote storage unavailable. Move operations have been
deferred.
```

0604000016 QUOTA_COMPLETED

Meaning

Quota enforcement completed.

Fields

Field	Value	Data Type	Length
log_id	0604000016	string	10
type	camera	string	16
subtype	quota	string	20
pri	information	uint8	1
user	system	string	32
action	none	string	16
camera	none	string	32
msg	Quota: quota enforcement completed. 1 file/2.5MB deleted on local storage. 3 files/4.5MB deleted on remote storage. Earliest video file starts at <DATE>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000016 type=camera subtype=quota pri=information
user=system action=none camera=msg=Quota: quota enforcement completed. 1 file/2.5MB
deleted on local storage. 3 files/4.5MB deleted on remote storage. Earliest video file
starts at <DATE>.
```

0604000017 LOCAL_INACCESSIBLE

Meaning

Local storage inaccessible or not writable.

Fields

Field	Value	Data Type	Length
log_id	0604000017	string	10
type	camera	string	16
subtype	quota	string	20
pri	critical	uint8	1
user	system	string	32
action	none	string	16
camera	none	string	32
msg	Quota: local storage inaccessible or unwritable.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000017 type=camera subtype=quota pri=critical user=system
action=none camera= msg=Quota: local storage inaccessible or unwritable.
```

0604000018 REMOTE_INACCESSIBLE

Meaning

Remote storage configured but inaccessible or not writable, enforcing local quota by deletion.

Fields

Field	Value	Data Type	Length
log_id	0604000018	string	10
type	camera	string	16
subtype	quota	string	20
pri	error	uint8	1
user	system	string	32
action	none	string	16
camera	none	string	32
msg	Quota: remote storage configured but inaccessible or unwritable, enforcing local quota by deletion.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000018 type=camera subtype=quota pri=error user=system
action=none camera= msg=Quota: remote storage configured but inaccessible or
unwritable, enforcing local quota by deletion.
```

0604000019 FREE_SPACE_LOW

Meaning

Insufficient free space on local/remote storage.

Fields

Field	Value	Data Type	Length
log_id	0604000019	string	10
type	camera	string	16
subtype	quota	string	20
pri	critical	uint8	1
user	system	string	32
action	none	string	16
camera	none	string	32
msg	Quota: free space on local video disk is 2 bytes, minimum is 3.50% of disk size.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000019 type=camera subtype=quota pri=critical user=system
action=none camera=msg=Quota: free space on local video disk is 2 bytes, minimum is
3.50% of disk size.
```

0604000020 EXPIRE_SLOW

Meaning

Remote storage rate is too slow for expiry.

Fields

Field	Value	Data Type	Length
log_id	0604000020	string	10
type	camera	string	16
subtype	quota	string	20
pri	warning	uint8	1
user	system	string	32
action	none	string	16
camera	none	string	32
msg	Quota: remote storage rate is too slow for expiry (1.50 MB/s).	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000020 type=camera subtype=quota pri=warning user=system
action=none camera= msg=Quota: remote storage rate is too slow for expiry (1.50 MB/s).
```

0604000021 REMOTE_MOVE_FAILED

Meaning

Moving videos to remote storage failed.

Fields

Field	Value	Data Type	Length
log_id	0604000021	string	10
type	camera	string	16
subtype	quota	string	20
pri	error	uint8	1
user	system	string	32
action	none	string	16
camera	none	string	32
msg	Quota: move to remote failed for <FILE>, errno=1, errcode=2.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000021 type=camera subtype=quota pri=error user=system
action=none camera= msg=Quota: move to remote failed for <FILE>, errno=1, errcode=2.
```

0604000022 QUOTAD_RESTARTING

Meaning

Quotad service has been restarted due to excessive quota thread delay

Fields

Field	Value	Data Type	Length
log_id	0604000022	string	10
type	camera	string	16

Field	Value	Data Type	Length
subtype	quota	string	20
pri	alert	uint8	1
user	system	string	32
action	none	string	16
camera	none	string	32
msg	Quota: quotad has restarted due to excessive quota thread delay, last status: 1.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000022 type=camera subtype=quota pri=alert user=system
action=none camera=msg=Quota: quotad has restarted due to excessive quota thread
delay, last status: 1.
```

0604000023 SLOW_REMOTE_LOCAL_DELETION

Meaning

Some files were deleted due to slow remote storage.

Fields

Field	Value	Data Type	Length
log_id	0604000023	string	10
type	camera	string	16
subtype	quota	string	20
pri	warning	uint8	1
user	system	string	32
action	none	string	16
camera	none	string	32
msg	Quota: deleted files on local due to slow remote storage, local/remote usage was 1GB/2GB, local usage is now 3GB.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0604000023 type=camera subtype=quota pri=warning user=system
action=none camera=msg=Quota: deleted files on local due to slow remote storage,
local/remote usage was 1GB/2GB, local usage is now 3GB.
```

recording

If the log message header contains:

```
subtype=recording
```

then the log message describes continuous or temporary (during live video feed) recording on the camera, or interruptions to it.

This section describes log messages of that subtype.

060200001 RECORDING_ERROR

Meaning

Camera experienced an interruption that may result in a loss of recording.

Fields

Field	Value	Data Type	Length
log_id	0602000001	string	10
type	camera	string	16
subtype	recording	string	20
pri	warning	uint8	1
user	system	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' experienced an interruption that may result in a loss of recording.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000001 type=camera subtype=recording pri=warning
user=system action=stop camera=<CAMERA> msg=Camera '<CAMERA>' experienced an
interruption that may result in a loss of recording.
```

060200002 RECORDING_START_FAILURE

Meaning

Camera failed to start a recording.

Fields

Field	Value	Data Type	Length
log_id	0602000002	string	10
type	camera	string	16
subtype	recording	string	20
pri	warning	uint8	1
user	system	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' failed to start a <RECTYPE> recording.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000002 type=camera subtype=recording pri=warning
user=system action=stop camera=<CAMERA> msg=Camera '<CAMERA>' failed to start a
<RECTYPE> recording.
```

0602000004 MOTION_IMPORT_FAILURE

Meaning

Failed to import motion snapshot file.

Fields

Field	Value	Data Type	Length
log_id	0602000004	string	10
type	camera	string	16
subtype	recording	string	20
pri	debug	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	Failed to import motion snapshot file <SRC>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000004 type=camera subtype=recording pri=debug
  user=system action=none camera=<CAMERA> msg=Failed to import motion snapshot file
  <SRC>.
```

0602000007 FINALIZATION_FAILED

Meaning

File finalization failed.

Fields

Field	Value	Data Type	Length
log_id	0602000007	string	10
type	camera	string	16
subtype	recording	string	20
pri	error	uint8	1
user	system	string	32
action	video_recovery	string	16
camera	<CAMERA>	string	32
msg	Finalization for camera <CAMERA> file <FILE> size 1 failed.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000007 type=camera subtype=recording pri=error
  user=system action=video_recovery camera=<CAMERA> msg=Finalization for camera <CAMERA>
  file <FILE> size 1 failed.
```

0602000008 RECORDING_RESTART

Meaning

Interrupted recording has been restarted.

Fields

Field	Value	Data Type	Length
log_id	0602000008	string	10

Field	Value	Data Type	Length
type	camera	string	16
subtype	recording	string	20
pri	information	uint8	1
user	system	string	32
action	start	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' interrupted recording has been restarted.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000008 type=camera subtype=recording pri=information
user=system action=start camera=<CAMERA> msg=Camera '<CAMERA>' interrupted recording
has been restarted.
```

0602000009 RECORDING_TOO_SMALL

Meaning

Some recorded files are too small after recording start.

Fields

Field	Value	Data Type	Length
log_id	0602000009	string	10
type	camera	string	16
subtype	recording	string	20
pri	error	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' recording file '<FILE>' is too small (1) after starting recording.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000009 type=camera subtype=recording pri=error
user=system action=none camera=<CAMERA> msg=Camera '<CAMERA>' recording file '<FILE>'
is too small (1) after starting recording.
```

0602000010 FINALIZATION_OVERFLOW

Meaning

Camera recording finalization enqueue failed.

Fields

Field	Value	Data Type	Length
log_id	0602000010	string	10
type	camera	string	16
subtype	recording	string	20
pri	error	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' recording finalization enqueue failed. Queue size '1'	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000010 type=camera subtype=recording pri=error
user=system action=none camera=<CAMERA> msg=Camera '<CAMERA>' recording finalization
enqueue failed. Queue size '1'
```

0602000011 FINALIZATION_SLOW

Meaning

Camera recording is slow to finalize.

Fields

Field	Value	Data Type	Length
log_id	0602000011	string	10
type	camera	string	16
subtype	recording	string	20
pri	information	uint8	1

Field	Value	Data Type	Length
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' recording slow to finalize.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000011 type=camera subtype=recording pri=information
user=system action=none camera=<CAMERA> msg=Camera '<CAMERA>' recording slow to
finalize.
```

0602000012 NORMALIZATION_FAILED

Meaning

Camera recording file failed to normalize.

Fields

Field	Value	Data Type	Length
log_id	0602000012	string	10
type	camera	string	16
subtype	recording	string	20
pri	information	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' recording file '<FILE>' failed to normalize.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000012 type=camera subtype=recording pri=information
user=system action=none camera=<CAMERA> msg=Camera '<CAMERA>' recording file '<FILE>'
failed to normalize.
```

0602000013 RECORDING_RESTART_FAILED

Meaning

Failed to restart camera recording.

Fields

Field	Value	Data Type	Length
log_id	0602000013	string	10
type	camera	string	16
subtype	recording	string	20
pri	error	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	Restarting Camera '<CAMERA>' recording failed.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000013 type=camera subtype=recording pri=error
user=system action=none camera=<CAMERA> msg=Restarting Camera '<CAMERA>' recording
failed.
```

0602000014 RECORDING_SETUP_FAILURE

Meaning

Failed to set up camera recording.

Fields

Field	Value	Data Type	Length
log_id	0602000014	string	10
type	camera	string	16
subtype	recording	string	20
pri	warning	uint8	1
user	system	string	32

Field	Value	Data Type	Length
action	none	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' failed to setup a <RECTYPE> recording.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000014 type=camera subtype=recording pri=warning
user=system action=none camera=<CAMERA> msg=Camera '<CAMERA>' failed to setup a
<RECTYPE> recording.
```

0602000015 FINALIZATION_FAILED_TOO_SMALL

Meaning

Finalization for camera file failed. Recording has no content.

Fields

Field	Value	Data Type	Length
log_id	0602000015	string	10
type	camera	string	16
subtype	recording	string	20
pri	error	uint8	1
user	system	string	32
action	video_recovery	string	16
camera	<CAMERA>	string	32
msg	Finalization for camera '<CAMERA>' file '<FILE>' size '1' failed. Recording has no content.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000015 type=camera subtype=recording pri=error
user=system action=video_recovery camera=<CAMERA> msg=Finalization for camera
'<CAMERA>' file '<FILE>' size '1' failed. Recording has no content.
```

0602000016 FAILED_VIDEO_CLIP

Meaning

Failed to create a video clip for detection event.

Fields

Field	Value	Data Type	Length
log_id	0602000016	string	10
type	camera	string	16
subtype	recording	string	20
pri	error	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	Failed to create a video clip for detection event at time '<TIME>' (error 1).	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000016 type=camera subtype=recording pri=error
user=system action=none camera=<CAMERA> msg=Failed to create a video clip for
detection event at time '<TIME>' (error 1).
```

0602000017 RECORDING_TIME_CHECK_FAILURE

Meaning

Stopping recording due to time check so that it may be restarted.

Fields

Field	Value	Data Type	Length
log_id	0602000017	string	10
type	camera	string	16
subtype	recording	string	20
pri	warning	uint8	1

Field	Value	Data Type	Length
user	system	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Recording for camera '<CAMERA>' file '<FILE>' was last updated '1' seconds ago. Stopping recording so that it may be restarted.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000017 type=camera subtype=recording pri=warning
user=system action=stop camera=<CAMERA> msg=Recording for camera '<CAMERA>' file
'<FILE>' was last updated '1' seconds ago. Stopping recording so that it may be
restarted.
```

0602000018 RECORDING_NOT_CREATED

Meaning

Recording file was not created after recording start.

Fields

Field	Value	Data Type	Length
log_id	0602000018	string	10
type	camera	string	16
subtype	recording	string	20
pri	error	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' recording file '<FILE>' not created after starting recording.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000018 type=camera subtype=recording pri=error
user=system action=none camera=<CAMERA> msg=Camera '<CAMERA>' recording file '<FILE>'
not created after starting recording.
```

0602000019 RECORDING_NOT_CHANGED

Meaning

Recording file has not changed after recording start.

Fields

Field	Value	Data Type	Length
log_id	0602000019	string	10
type	camera	string	16
subtype	recording	string	20
pri	error	uint8	1
user	system	string	32
action	none	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' recording file '<FILE>' has not changed since <DATE> after starting recording.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0602000019 type=camera subtype=recording pri=error
user=system action=none camera=<CAMERA> msg=Camera '<CAMERA>' recording file '<FILE>'
has not changed since <DATE> after starting recording.
```

schedule

If the log message header contains:

```
subtype=schedule
```

then the log message describes recording schedule changes, activation, or errors on cameras connected to the FortiRecorder unit.

This section describes log messages of that subtype.

0600000001 START_SCHEDULE

Meaning

Recording schedule has started for camera.

Fields

Field	Value	Data Type	Length
log_id	0600000001	string	10
type	camera	string	16
subtype	schedule	string	20
pri	information	uint8	1
user	system	string	32
action	start	string	16
schedule	<SCHEDULE>	string	32
camera	<CAMERA>	string	32
msg	Recording schedule '<SCHEDULE>' on '<CAMERA>' started <REC_ TYPE>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000001 type=camera subtype=schedule pri=information
user=system action=start schedule=<SCHEDULE> camera=<CAMERA> msg=Recording schedule
'<SCHEDULE>' on '<CAMERA>' started <REC_TYPE>.
```

0600000002 STOP_SCHEDULE

Meaning

Recording schedule has stopped for camera.

Fields

Field	Value	Data Type	Length
log_id	0600000002	string	10
type	camera	string	16
subtype	schedule	string	20
pri	information	uint8	1
user	system	string	32
action	stop	string	16
schedule	<SCHEDULE>	string	32
camera	<CAMERA>	string	32
msg	Recording schedule '<SCHEDULE>' on '<CAMERA>' stopped <REC_TYPE>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000002 type=camera subtype=schedule pri=information
user=system action=stop schedule=<SCHEDULE> camera=<CAMERA> msg=Recording schedule
'<SCHEDULE>' on '<CAMERA>' stopped <REC_TYPE>.
```

0600000003 START_CAMERA_ERROR

Meaning

Failed to start recording for camera.

Fields

Field	Value	Data Type	Length
log_id	0600000003	string	10
type	camera	string	16
subtype	schedule	string	20
pri	error	uint8	1
user	system	string	32
action	start	string	16
schedule	<SCHEDULE>	string	32
camera	<CAMERA>	string	32
msg	Failed to start '<REC_TYPE>' recording for camera '<CAMERA>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000003 type=camera subtype=schedule pri=error user=system
action=start schedule=<SCHEDULE> camera=<CAMERA> msg=Failed to start '<REC_TYPE>'
recording for camera '<CAMERA>'.
```

0600000004 START_CAMERA_RECOVERY

Meaning

Enabled a recording for camera successfully after some failed attempts.

Fields

Field	Value	Data Type	Length
log_id	0600000004	string	10
type	camera	string	16
subtype	schedule	string	20
pri	information	uint8	1
user	system	string	32
action	start	string	16
schedule	<SCHEDULE>	string	32
camera	<CAMERA>	string	32
msg	Enabled a recording for camera '<CAMERA>' successfully after some failed attempts.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000004 type=camera subtype=schedule pri=information
user=system action=start schedule=<SCHEDULE> camera=<CAMERA> msg=Enabled a recording
for camera '<CAMERA>' successfully after some failed attempts.
```

0600000005 STOP_CAMERA_ERROR

Meaning

Failed to stop recording for camera.

Fields

Field	Value	Data Type	Length
log_id	0600000005	string	10
type	camera	string	16
subtype	schedule	string	20
pri	error	uint8	1
user	system	string	32
action	stop	string	16
schedule	<SCHEDULE>	string	32
camera	<CAMERA>	string	32
msg	Failed to stop '<REC_TYPE>' recording for camera '<CAMERA>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000005 type=camera subtype=schedule pri=error user=system
  action=stop schedule=<SCHEDULE> camera=<CAMERA> msg=Failed to stop '<REC_TYPE>'
  recording for camera '<CAMERA>'.
```

0600000006 DISABLE_EVENT_REC_ERROR

Meaning

Failed to disable recording for camera.

Fields

Field	Value	Data Type	Length
log_id	0600000006	string	10
type	camera	string	16
subtype	schedule	string	20
pri	error	uint8	1
user	system	string	32
action	stop	string	16
schedule	<SCHEDULE>	string	32
camera	<CAMERA>	string	32
msg	Failed to disable '<ETYPE>' recording for camera '<CAMERA>' (<ERROR>).	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000006 type=camera subtype=schedule pri=error user=system
  action=stop schedule=<SCHEDULE> camera=<CAMERA> msg=Failed to disable '<ETYPE>'
  recording for camera '<CAMERA>' (<ERROR>).
```

0600000009 CAMERA_STATE_INCORRECT_WARN

Meaning

Camera is in an incorrect state.

Fields

Field	Value	Data Type	Length
log_id	0600000009	string	10
type	camera	string	16
subtype	schedule	string	20
pri	warning	uint8	1
user	system	string	32
action	stop	string	16
schedule	<SCHEDULE>	string	32
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' is in an incorrect state: '<CUR_STATE>'. The expected state is '<REQ_STATE>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000009 type=camera subtype=schedule pri=warning
user=system action=stop schedule=<SCHEDULE> camera=<CAMERA> msg=Camera '<CAMERA>' is
in an incorrect state: '<CUR_STATE>'. The expected state is '<REQ_STATE>'.
```

0600000010 CAMERA_STATE_INCORRECT_ERROR

Meaning

Camera is in an incorrect state.

Fields

Field	Value	Data Type	Length
log_id	0600000010	string	10
type	camera	string	16
subtype	schedule	string	20
pri	error	uint8	1
user	system	string	32
action	stop	string	16
schedule	<SCHEDULE>	string	32
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' is in an incorrect state: '<CUR_STATE>'. The expected state is '<REQ_STATE>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000010 type=camera subtype=schedule pri=error user=system
action=stop schedule=<SCHEDULE> camera=<CAMERA> msg=Camera '<CAMERA>' is in an
incorrect state: '<CUR_STATE>'. The expected state is '<REQ_STATE>'.
```

0600000014 CAMERA_ALERT

Meaning

Camera alerts.

Fields

Field	Value	Data Type	Length
log_id	0600000014	string	10
type	camera	string	16
subtype	schedule	string	20
pri	error	uint8	1
user	system	string	32
action	stop	string	16
schedule	none	string	32
camera	none	string	32
msg	Ongoing issues:<MSG>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000014 type=camera subtype=schedule pri=error user=system
action=stop schedule= camera= msg=Ongoing issues:<MSG>
```

0600000015 VIDEO_STREAM_CHANGE

Meaning

Video-stream schedule is active on camera.

Fields

Field	Value	Data Type	Length
log_id	0600000015	string	10
type	camera	string	16
subtype	schedule	string	20
pri	information	uint8	1
user	system	string	32
action	start	string	16
schedule	<SCHEDULE>	string	32
camera	<CAMERA>	string	32
msg	Video-stream schedule '<SCHEDULE>' active on '<CAMERA>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000015 type=camera subtype=schedule pri=information
user=system action=start schedule=<SCHEDULE> camera=<CAMERA> msg=Video-stream schedule
'<SCHEDULE>' active on '<CAMERA>'.
```

0600000016 CAMERA_SETTING_CHANGE

Meaning

Camera-setting schedule is active on camera.

Fields

Field	Value	Data Type	Length
log_id	0600000016	string	10
type	camera	string	16
subtype	schedule	string	20
pri	information	uint8	1
user	system	string	32
action	start	string	16
schedule	<SCHEDULE>	string	32
camera	<CAMERA>	string	32
msg	Camera-setting schedule '<SCHEDULE>' active on '<CAMERA>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000016 type=camera subtype=schedule pri=information
user=system action=start schedule=<SCHEDULE> camera=<CAMERA> msg=Camera-setting
schedule '<SCHEDULE>' active on '<CAMERA>'.
```

0600000017 CAMERA_CONFIG

Meaning

Configuration errors on camera.

Fields

Field	Value	Data Type	Length
log_id	0600000017	string	10
type	camera	string	16
subtype	schedule	string	20
pri	error	uint8	1
user	system	string	32
action	stop	string	16
schedule	none	string	32
camera	none	string	32
msg	Cameras with configuration errors: <MSG>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000017 type=camera subtype=schedule pri=error user=system
action=stop schedule= camera= msg=Cameras with configuration errors: <MSG>
```

0600000018 CAMERA_STREAMING

Meaning

Recording errors on camera.

Fields

Field	Value	Data Type	Length
log_id	0600000018	string	10
type	camera	string	16
subtype	schedule	string	20
pri	error	uint8	1
user	system	string	32
action	stop	string	16
schedule	none	string	32
camera	none	string	32
msg	Recording errors for cameras: <MSG>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000018 type=camera subtype=schedule pri=error user=system
action=stop schedule= camera= msg=Recording errors for cameras: <MSG>
```

0600000019 CAMERA_COMMUNICATION

Meaning

Communication errors on camera.

Fields

Field	Value	Data Type	Length
log_id	0600000019	string	10
type	camera	string	16
subtype	schedule	string	20
pri	error	uint8	1
user	system	string	32
action	stop	string	16
schedule	none	string	32
camera	none	string	32
msg	Communication errors for cameras: <MSG>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000019 type=camera subtype=schedule pri=error user=system
action=stop schedule= camera= msg=Communication errors for cameras: <MSG>
```

0600000020 CAMERA_STATE_CORRECT

Meaning

Camera is now in a correct recording state.

Fields

Field	Value	Data Type	Length
log_id	0600000020	string	10
type	camera	string	16
subtype	schedule	string	20
pri	information	uint8	1
user	system	string	32
action	start	string	16
schedule	none	string	32
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' is now in a correct recording state.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000020 type=camera subtype=schedule pri=information
user=system action=start schedule= camera=<CAMERA> msg=Camera '<CAMERA>' is now in a
correct recording state.
```

0600000021 UPDATE_DETECTION_SETTINGS

Meaning

Updated detection settings successfully for camera.

Fields

Field	Value	Data Type	Length
log_id	0600000021	string	10
type	camera	string	16
subtype	schedule	string	20
pri	information	uint8	1
user	system	string	32
action	update	string	16
schedule	<SCHEDULE>	string	32
camera	<CAMERA>	string	32
msg	Updated detection settings successfully for camera '<CAMERA>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0600000021 type=camera subtype=schedule pri=information
user=system action=update schedule=<SCHEDULE> camera=<CAMERA> msg=Updated detection
settings successfully for camera '<CAMERA>'.
```

streaming

If the log message header contains:

```
subtype=streaming
```

then the log message describes live video feed connections to a camera.

This section describes log messages of that subtype.

0607000001 CONNECT_FAILURE

Meaning

Failed to connect to camera.

Fields

Field	Value	Data Type	Length
log_id	0607000001	string	10
type	camera	string	16

Field	Value	Data Type	Length
subtype	streaming	string	20
pri	error	uint8	1
user	system	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Failed to connect to camera '<CAMERA>' (<STREAM>).	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0607000001 type=camera subtype=streaming pri=error
user=system action=stop camera=<CAMERA> msg=Failed to connect to camera '<CAMERA>'
(<STREAM>).
```

0607000002 DISCONNECT

Meaning

Camera unexpectedly disconnected from NVR.

Fields

Field	Value	Data Type	Length
log_id	0607000002	string	10
type	camera	string	16
subtype	streaming	string	20
pri	warning	uint8	1
user	system	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Camera '<CAMERA>' (<STREAM>) unexpectedly disconnected from NVR.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0607000002 type=camera subtype=streaming pri=warning
user=system action=stop camera=<CAMERA> msg=Camera '<CAMERA>' (<STREAM>) unexpectedly
disconnected from NVR.
```

0607000003 DISCONNECT_TIMEOUT

Meaning

Camera disconnection because of no RTP packets have been received for expected time out.

Fields

Field	Value	Data Type	Length
log_id	0607000003	string	10
type	camera	string	16
subtype	streaming	string	20
pri	warning	uint8	1
user	system	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Disconnecting from camera '<CAMERA>' (<STREAM>) because no RTP packets have been received for 1 seconds (<REASON>).	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0607000003 type=camera subtype=streaming pri=warning
user=system action=stop camera=<CAMERA> msg=Disconnecting from camera '<CAMERA>'
(<STREAM>) because no RTP packets have been received for 1 seconds (<REASON>).
```

0607000004 RESTART_TIMESTAMP

Meaning

Restarting camera because timestamp problem has been detected.

Fields

Field	Value	Data Type	Length
log_id	0607000004	string	10
type	camera	string	16
subtype	streaming	string	20
pri	warning	uint8	1

Field	Value	Data Type	Length
user	system	string	32
action	stop	string	16
camera	<CAMERA>	string	32
msg	Restarting from camera '<CAMERA>' (<STREAM>) because timestamp problem has been detected.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0607000004 type=camera subtype=streaming pri=warning
user=system action=stop camera=<CAMERA> msg=Restarting from camera '<CAMERA>'
(<STREAM>) because timestamp problem has been detected.
```

detection

If the log message header contains:

```
type=detection
```

then the log message describes events such as doors being forced open and motion detection by cameras and ACS devices.

This section describes log messages of that type.

acs

If the log message header contains:

```
subtype=acs
```

then the log message describes detections by an access control system (ACS), such as doors being forced open.

This section describes log messages of that subtype.

1107000000 DETECTION

Meaning

ACS event at camera.

Fields

Field	Value	Data Type	Length
log_id	1107000000	string	10
type	detection	string	16
subtype	acs	string	20
pri	information	uint8	1
action	start	string	16
dtype	acs	string	16
dsubtype	""	string	16
camera	<CAMERA>	string	32
msg	ACS event at camera <CAMERA>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=1107000000 type=detection subtype=acs pri=information
  action=start dtype=acs dsubtype="" camera=<CAMERA> msg=ACS event at camera <CAMERA>.
```

audio

If the log message header contains:

```
subtype=audio
```

then the log message describes detections of sound by a microphone on a camera.

This section describes log messages of that subtype.

1102000000 DETECTION

Meaning

Audio detection on camera.

Fields

Field	Value	Data Type	Length
log_id	1102000000	string	10
type	detection	string	16
subtype	audio	string	20
pri	information	uint8	1
action	start	string	16
dtype	audio	string	16
dsubtype	""	string	16
camera	<CAMERA>	string	32
msg	Audio detection on camera <CAMERA>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=1102000000 type=detection subtype=audio pri=information
  action=start dtype=audio dsubtype="" camera=<CAMERA> msg=Audio detection on camera
  <CAMERA>.
```

digital-input

If the log message header contains:

```
subtype=digital-input
```

then the log message describes detections by a digital input/output (DIDO) connection on a camera.

This section describes log messages of that subtype.

1103000000 DETECTION

Meaning

Digital-input on camera.

Fields

Field	Value	Data Type	Length
log_id	1103000000	string	10
type	detection	string	16
subtype	digital-input	string	20
pri	information	uint8	1
action	start	string	16
dtype	digital-input	string	16
dsubtype	""	string	16
camera	<CAMERA>	string	32
msg	Digital-input on camera <CAMERA>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=1103000000 type=detection subtype=digital-input
  pri=information action=start dtype=digital-input dsubtype="" camera=<CAMERA>
  msg=Digital-input on camera <CAMERA>.
```

face

If the log message header contains:

```
subtype=face
```

then the log message describes detections by face recognition on FortiRecorder using video from its connected cameras.

This section describes log messages of that subtype.

1106000000 DETECTION

Meaning

Face detection on camera.

Fields

Field	Value	Data Type	Length
log_id	1106000000	string	10
type	detection	string	16
subtype	face	string	20
pri	information	uint8	1
action	start	string	16
dtype	face	string	16
dsubtype	"<DSUBTYPE>"	string	16
camera	<CAMERA>	string	32
msg	Face detection (<DSUBTYPE>) on camera <CAMERA> at <TIME>. <TEXT>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=1106000000 type=detection subtype=face pri=information
  action=start dtype=face dsubtype="<DSUBTYPE>" camera=<CAMERA> msg=Face detection
  (<DSUBTYPE>) on camera <CAMERA> at <TIME>. <TEXT>
```

generic

If the log message header contains:

```
subtype=generic
```

then the log message describes non-specific detections by cameras connected to the FortiRecorder unit.

This section describes log messages of that subtype.

1100000000 DETECTION

Meaning

Generic detection on camera.

Fields

Field	Value	Data Type	Length
log_id	1100000000	string	10
type	detection	string	16
subtype	generic	string	20
pri	information	uint8	1
action	start	string	16
dtype	generic	string	16
dsubtype	""	string	16
camera	<CAMERA>	string	32
msg	Generic detection on camera <CAMERA>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=1100000000 type=detection subtype=generic pri=information
  action=start dtype=generic dsubtype="" camera=<CAMERA> msg=Generic detection on camera
  <CAMERA>.
```

motion

If the log message header contains:

```
subtype=motion
```

then the log message describes motion detections by cameras connected to the FortiRecorder unit.

This section describes log messages of that subtype.

1101000000 DETECTION

Meaning

Motion detection on camera.

Fields

Field	Value	Data Type	Length
log_id	1101000000	string	10
type	detection	string	16
subtype	motion	string	20
pri	information	uint8	1
action	start	string	16
dtype	motion	string	16
dsubtype	"<DSUBTYPE>"	string	16
camera	<CAMERA>	string	32
msg	Motion detection on camera <CAMERA>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=1101000000 type=detection subtype=motion pri=information
action=start dtype=motion dsubtype="<DSUBTYPE>" camera=<CAMERA> msg=Motion detection
on camera <CAMERA>.
```

object

If the log message header contains:

```
subtype=object
```

then the log message describes detections by object recognition on FortiRecorder using video from its connected cameras.

This section describes log messages of that subtype.

1108000000 DETECTION

Meaning

Object detection on camera.

Fields

Field	Value	Data Type	Length
log_id	1108000000	string	10

Field	Value	Data Type	Length
type	detection	string	16
subtype	object	string	20
pri	information	uint8	1
action	start	string	16
dtype	object	string	16
dsubtype	"<DSUBTYPE>"	string	16
camera	<CAMERA>	string	32
msg	Object detection (<DSUBTYPE>) on camera <CAMERA> at <TIME>. <TEXT>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=1108000000 type=detection subtype=object pri=information
  action=start dtype=object dsubtype="<DSUBTYPE>" camera=<CAMERA> msg=Object detection
  (<DSUBTYPE>) on camera <CAMERA> at <TIME>. <TEXT>
```

pir

If the log message header contains:

```
subtype=pir
```

then the log message describes detections of passive infrared (PIR) by a sensor on a camera.

This section describes log messages of that subtype.

1104000000 DETECTION

Meaning

PIR detection on camera.

Fields

Field	Value	Data Type	Length
log_id	1104000000	string	10
type	detection	string	16
subtype	pir	string	20
pri	information	uint8	1

Field	Value	Data Type	Length
action	start	string	16
dtype	pir	string	16
dsubtype	""	string	16
camera	<CAMERA>	string	32
msg	PIR detection on camera <CAMERA>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=1104000000 type=detection subtype=pir pri=information
  action=start dtype=pir dsubtype="" camera=<CAMERA> msg=PIR detection on camera
  <CAMERA>.
```

tamper

If the log message header contains:

```
subtype=tamper
```

then the log message describes detections of tampering with a camera.

This section describes log messages of that subtype.

1105000000 DETECTION

Meaning

Tamper detection on camera.

Fields

Field	Value	Data Type	Length
log_id	1105000000	string	10
type	detection	string	16
subtype	tamper	string	20
pri	information	uint8	1
action	start	string	16
dtype	tamper	string	16
dsubtype	"<DSUBTYPE>"	string	16

Field	Value	Data Type	Length
camera	<CAMERA>	string	32
msg	Tamper <DSUBTYPE> detection on camera <CAMERA>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=1105000000 type=detection subtype=tamper pri=information  
action=start dtype=tamper dsubtype="<DSUBTYPE>" camera=<CAMERA> msg=Tamper <DSUBTYPE>  
detection on camera <CAMERA>.
```

kevent

If the log message header contains:

```
type=kevent
```

then the log message describes system events on the FortiRecorder unit, such as daemon activities, authentication failures, and reboots.

This section describes log messages of that type.

admin

If the log message header contains:

```
subtype=admin
```

then the log message describes administrator and user logins on the FortiRecorder unit, for both local and remote authentication.

This section describes log messages of that subtype.

0801000000 GENERIC

Meaning

Fields

Field	Value	Data Type	Length
log_id	0801000000	string	10
type	kevent	string	16
subtype	admin	string	20
pri	alert	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	none	string	16
status	none	string	10
reason	unknown	string	16
msg	<MSG> (user: <USER>, from: <UI>)	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0801000000 type=kevent subtype=admin pri=alert user=<USER>
  ui=<UI> action=none status=none reason=unknown msg=<MSG> (user: <USER>, from: <UI>)
```

0801000001 LOGIN_SUCCESS

Meaning

An administrator successfully logged in using the web-based manager or CLI.

Fields

Field	Value	Data Type	Length
log_id	0801000001	string	10
type	kevent	string	16
subtype	admin	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	login	string	16
status	success	string	10
reason	passwd_invalid	string	16
msg	User <USER> logged in successfully from <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0801000001 type=kevent subtype=admin pri=information
  user=<USER> ui=<UI> action=login status=success reason=passwd_invalid msg=User <USER>
  logged in successfully from <UI>
```

0801000002 LOGIN_FAILURE

Meaning

An administrator failed to log in using the console, SSH, or telnet.

Fields

Field	Value	Data Type	Length
log_id	0801000002	string	10
type	kevent	string	16
subtype	admin	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	login	string	16
status	failure	string	10
reason	passwd_invalid	string	16
msg	User <USER> login failed from <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0801000002 type=kevent subtype=admin pri=information
user=<USER> ui=<UI> action=login status=failure reason=passwd_invalid msg=User <USER>
login failed from <UI>
```

0801000003 LOGOUT_SUCCESS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0801000003	string	10
type	kevent	string	16
subtype	admin	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	logout	string	16
status	success	string	10
reason	unknown	string	16
msg	User <USER> logged out from <UI>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0801000003 type=kevent subtype=admin pri=information
  user=<USER> ui=<UI> action=logout status=success reason=unknown msg=User <USER> logged
  out from <UI>.
```

0801000004 LOGOUT_TIMEOUT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0801000004	string	10
type	kevent	string	16
subtype	admin	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	logout	string	16
status	success	string	10
reason	unknown	string	16
msg	User <USER> time out on <UI>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0801000004 type=kevent subtype=admin pri=information
  user=<USER> ui=<UI> action=logout status=success reason=unknown msg=User <USER> time
  out on <UI>.
```

0801000005 LOGOUT_FORCED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0801000005	string	10
type	kevent	string	16
subtype	admin	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	logout	string	16
status	success	string	10
reason	unknown	string	16
msg	GUI session forced logout from <UI>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0801000005 type=kevent subtype=admin pri=information
user=<USER> ui=<UI> action=logout status=success reason=unknown msg=GUI session forced
logout from <UI>.
```

0801000006 VM_LOGIN_SUCCESS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0801000006	string	10
type	kevent	string	16
subtype	admin	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	login	string	16
status	success	string	10
reason	passwd_invalid	string	16
msg	VM admin user <USER> login allowed from <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0801000006 type=kevent subtype=admin pri=information
  user=<USER> ui=<UI> action=login status=success reason=passwd_invalid msg=VM admin
  user <USER> login allowed from <UI>
```

0801000018 LOG_SEARCH_MULTIPLE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0801000018	string	10
type	kevent	string	16
subtype	admin	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	none	string	16
status	success	string	10
reason	unknown	string	16
msg	User <USER> performed search on <LOGTYPE> log: [<CONDITION>] from <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0801000018 type=kevent subtype=admin pri=information
  user=<USER> ui=<UI> action=none status=success reason=unknown msg=User <USER>
  performed search on <LOGTYPE> log: [<CONDITION>] from <UI>
```

0801000019 LOG_DOWNLOAD

Meaning

Fields

Field	Value	Data Type	Length
log_id	0801000019	string	10
type	kevent	string	16
subtype	admin	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	none	string	16
status	success	string	10
reason	unknown	string	16
msg	User <USER> downloaded log file <LOGFILE> from <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0801000019 type=kevent subtype=admin pri=information
user=<USER> ui=<UI> action=none status=success reason=unknown msg=User <USER>
downloaded log file <LOGFILE> from <UI>
```

0801000020 LOG_DELETE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0801000020	string	10
type	kevent	string	16
subtype	admin	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	none	string	16
status	success	string	10
reason	unknown	string	16
msg	User <USER> deleted log file <LOGFILE> from <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0801000020 type=kevent subtype=admin pri=information
  user=<USER> ui=<UI> action=none status=success reason=unknown msg=User <USER> deleted
  log file <LOGFILE> from <UI>
```

0801000025 AUTH_REPUTATION_DELETE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0801000025	string	10
type	kevent	string	16
subtype	admin	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	none	string	16
status	success	string	10
reason	unknown	string	16
msg	User <USER> deleted IP <IP> from authentication reputation blocked list from <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0801000025 type=kevent subtype=admin pri=information
  user=<USER> ui=<UI> action=none status=success reason=unknown msg=User <USER> deleted
  IP <IP> from authentication reputation blocked list from <UI>
```

0801000026 AUTH_REPUTATION_EXEMPT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0801000026	string	10
type	kevent	string	16
subtype	admin	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	none	string	16
status	success	string	10
reason	unknown	string	16
msg	User <USER> added IP <IP> to authentication reputation exempt list from <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0801000026 type=kevent subtype=admin pri=information
user=<USER> ui=<UI> action=none status=success reason=unknown msg=User <USER> added IP
<IP> to authentication reputation exempt list from <UI>
```

0801000027 AUTH_REPUTATION_HISTORY

Meaning

Fields

Field	Value	Data Type	Length
log_id	0801000027	string	10
type	kevent	string	16
subtype	admin	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	none	string	16
status	success	string	10

Field	Value	Data Type	Length
reason	unknown	string	16
msg	User <USER> viewed authentication reputation block history for IP <IP> from <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0801000027 type=kevent subtype=admin pri=information
  user=<USER> ui=<UI> action=none status=success reason=unknown msg=User <USER> viewed
  authentication reputation block history for IP <IP> from <UI>
```

0801000028 LOGOUT_FORCED_ON_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0801000028	string	10
type	kevent	string	16
subtype	admin	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	logout	string	16
status	success	string	10
reason	unknown	string	16
msg	GUI session forced logout for <ERROR> from <UI>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0801000028 type=kevent subtype=admin pri=information
  user=<USER> ui=<UI> action=logout status=success reason=unknown msg=GUI session forced
  logout for <ERROR> from <UI>.
```

audit

If the log message header contains:

subtype=audit

then the log message describes configuration and network connection problems that the FortiRecorder unit has detected in the deployment.

This section describes log messages of that subtype.

0808000001 SUMMARY

Meaning

Fields

Field	Value	Data Type	Length
log_id	0808000001	string	10
type	kevent	string	16
subtype	audit	string	20
pri	information	uint8	1
user	system	string	32
msg	Health Audit Result Summary: 1 Critical, 2 High, 3 Medium, 4 Low	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0808000001 type=kevent subtype=audit pri=information
user=system msg=Health Audit Result Summary: 1 Critical, 2 High, 3 Medium, 4 Low
```

config

If the log message header contains:

subtype=config

then the log message describes configuration changes on the FortiRecorder unit.

This section describes log messages of that subtype.

0800000000 GENERIC

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000000	string	10
type	kevent	string	16
subtype	config	string	20
pri	alert	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	<MSG> (user: <USER>, from: <UI>)	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000000 type=kevent subtype=config pri=alert user=<USER>
  ui=<UI> module=unknown submodule=unknown msg=<MSG> (user: <USER>, from: <UI>)
```

0800000001 DHCPD_INFINITE_LEASE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000001	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	dhcpcd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	infinite IP address lease time.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000001 type=kevent subtype=config pri=information
  user=dhcpd ui=127.0.0.1 module=system submodule=interface msg=infinite IP address
  lease time.
```

0800000002 DHCPD_INTERFACE_GETS_LEASE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000002	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	dhcpd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	interface <INTF> gets a DHCP lease, ip:1.2.3.4, mask:5.6.7.8, gateway:9.10.11.12, lease expiry:<EXPIRY>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000002 type=kevent subtype=config pri=information
  user=dhcpd ui=127.0.0.1 module=system submodule=interface msg=interface <INTF> gets a
  DHCP lease, ip:1.2.3.4, mask:5.6.7.8, gateway:9.10.11.12, lease expiry:<EXPIRY>
```

0800000003 DHCPD_MEMORY_ALLOCATE_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000003	string	10
type	kevent	string	16
subtype	config	string	20
pri	error	uint8	1
user	dhcpcd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	memory allocate failed!	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000003 type=kevent subtype=config pri=error user=dhcpcd
  ui=127.0.0.1 module=system submodule=interface msg=memory allocate failed!
```

0800000004 DHCPD_SELECT_CALL_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000004	string	10
type	kevent	string	16
subtype	config	string	20
pri	error	uint8	1
user	dhcpcd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	select call error	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000004 type=kevent subtype=config pri=error user=dhcpd
  ui=127.0.0.1 module=system submodule=interface msg=select call error
```

0800000005 DHCPD_SIOCGIFHWADDR_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000005	string	10
type	kevent	string	16
subtype	config	string	20
pri	error	uint8	1
user	dhcpd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	ioctl SIOCGIFHWADDR failed	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000005 type=kevent subtype=config pri=error user=dhcpd
  ui=127.0.0.1 module=system submodule=interface msg=ioctl SIOCGIFHWADDR failed
```

0800000006 DHCPD_INTERFACE_INVALID

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000006	string	10
type	kevent	string	16

Field	Value	Data Type	Length
subtype	config	string	20
pri	error	uint8	1
user	dhcpcd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	interface <INTF> is not Ethernet or 802.2 Token Ring	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000006 type=kevent subtype=config pri=error user=dhcpcd
  ui=127.0.0.1 module=system submodule=interface msg=interface <INTF> is not Ethernet or
  802.2 Token Ring
```

0800000007 DHCPD_SETSOCKOPT_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000007	string	10
type	kevent	string	16
subtype	config	string	20
pri	error	uint8	1
user	dhcpcd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	setsockopt failed	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000007 type=kevent subtype=config pri=error user=dhcpcd
  ui=127.0.0.1 module=system submodule=interface msg=setsockopt failed
```

0800000008 DHCPD_SIOCSIFFLAGS_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000008	string	10
type	kevent	string	16
subtype	config	string	20
pri	error	uint8	1
user	dhcpcd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	ioctl SIOCSIFFLAGS failed	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000008 type=kevent subtype=config pri=error user=dhcpcd ui=127.0.0.1 module=system submodule=interface msg=ioctl SIOCSIFFLAGS failed
```

0800000009 DHCPD_ENSURE_CONFIG_DEFINED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000009	string	10
type	kevent	string	16
subtype	config	string	20
pri	error	uint8	1
user	dhcpcd	string	32
ui	127.0.0.1	string	32

Field	Value	Data Type	Length
module	system	string	16
submodule	interface	string	16
msg	socket: - make sure CONFIG_PACKET and CONFIG_FILTER are defined in your kernel configuration	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000009 type=kevent subtype=config pri=error user=dhcpd
ui=127.0.0.1 module=system submodule=interface msg=socket: - make sure CONFIG_PACKET
and CONFIG_FILTER are defined in your kernel configuration
```

0800000010 DHCPD_CANT_INSTALL_PF_PROG

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000010	string	10
type	kevent	string	16
subtype	config	string	20
pri	error	uint8	1
user	dhcpd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	Can't install packet filter program:	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000010 type=kevent subtype=config pri=error user=dhcpd
ui=127.0.0.1 module=system submodule=interface msg=Can't install packet filter
program:
```

0800000011 DHCPD_SEND_DHCP_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000011	string	10
type	kevent	string	16
subtype	config	string	20
pri	error	uint8	1
user	dhcpcd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	send dhcp packet failed	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000011 type=kevent subtype=config pri=error user=dhcpcd
  ui=127.0.0.1 module=system submodule=interface msg=send dhcp packet failed
```

0800000012 DHCPD_RECEIVE_DHCP_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000012	string	10
type	kevent	string	16
subtype	config	string	20
pri	error	uint8	1
user	dhcpcd	string	32
ui	127.0.0.1	string	32

Field	Value	Data Type	Length
module	system	string	16
submodule	interface	string	16
msg	Receive from dhcp socket returns error!	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000012 type=kevent subtype=config pri=error user=dhcpd
ui=127.0.0.1 module=system submodule=interface msg=Receive from dhcp socket returns
error!
```

0800000013 DHCPD_SEND_ARP_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000013	string	10
type	kevent	string	16
subtype	config	string	20
pri	error	uint8	1
user	dhcpd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	send arp packet failed	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000013 type=kevent subtype=config pri=error user=dhcpd
ui=127.0.0.1 module=system submodule=interface msg=send arp packet failed
```

0800000014 DHCPD_NO_LEASE_TIME_INFO

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000014	string	10
type	kevent	string	16
subtype	config	string	20
pri	error	uint8	1
user	dhcpcd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	No lease time information in dhcp ack packet!	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000014 type=kevent subtype=config pri=error user=dhcpcd
  ui=127.0.0.1 module=system submodule=interface msg=No lease time information in dhcp
  ack packet!
```

0800000015 DHCPD_SEND_REQ_IN_ERROR_STATE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000015	string	10
type	kevent	string	16
subtype	config	string	20
pri	error	uint8	1
user	dhcpcd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	send_request in error state!	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000015 type=kevent subtype=config pri=error user=dhcpd
  ui=127.0.0.1 module=system submodule=interface msg=send_request in error state!
```

0800000016 DHCPD_TOO_MANY_DHCP_OPTIONS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000016	string	10
type	kevent	string	16
subtype	config	string	20
pri	error	uint8	1
user	dhcpd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	Too many DHCP options!	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000016 type=kevent subtype=config pri=error user=dhcpd
  ui=127.0.0.1 module=system submodule=interface msg=Too many DHCP options!
```

0800000017 DHCPD_SOCKET_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000017	string	10
type	kevent	string	16

Field	Value	Data Type	Length
subtype	config	string	20
pri	critical	uint8	1
user	dhcpcd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	socket failed	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000017 type=kevent subtype=config pri=critical
user=dhcpcd ui=127.0.0.1 module=system submodule=interface msg=socket failed
```

0800000018 DHCPD_CANT_CREATE_DHCP_SOCKET

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000018	string	10
type	kevent	string	16
subtype	config	string	20
pri	critical	uint8	1
user	dhcpcd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	Can't create dhcp socket	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000018 type=kevent subtype=config pri=critical
user=dhcpcd ui=127.0.0.1 module=system submodule=interface msg=Can't create dhcp
socket
```

0800000019 DHCPD_CANT_SET_BROADCAST

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000019	string	10
type	kevent	string	16
subtype	config	string	20
pri	critical	uint8	1
user	dhcpd	string	32
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	Can't set SO_BROADCAST option on dhcp socket.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000019 type=kevent subtype=config pri=critical
user=dhcpd ui=127.0.0.1 module=system submodule=interface msg=Can't set SO_BROADCAST
option on dhcp socket.
```

0800000020 DHCPD_CANT_BIND_TO_SOCKET

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000020	string	10
type	kevent	string	16
subtype	config	string	20
pri	critical	uint8	1
user	dhcpd	string	32

Field	Value	Data Type	Length
ui	127.0.0.1	string	32
module	system	string	16
submodule	interface	string	16
msg	Can't bind to the socket	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000020 type=kevent subtype=config pri=critical
  user=dhcpd ui=127.0.0.1 module=system submodule=interface msg=Can't bind to the
  socket
```

0800000025 CLI_LOG_ACTION_CLEAR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000025	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	none	string	32
ui	none	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	cleared all entries	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000025 type=kevent subtype=config pri=information user=
  ui= module=unknown submodule=unknown msg=cleared all entries
```

0800000026 CLI_LOG_ACTION_EDIT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000026	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	none	string	32
ui	none	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	Modify	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000026 type=kevent subtype=config pri=information user=
  ui= module=unknown submodule=unknown msg=Modify
```

0800000027 CLI_LOG_ACTION_ADD

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000027	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	none	string	32
ui	none	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	Added	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000027 type=kevent subtype=config pri=information user=
  ui= module=unknown submodule=unknown msg=Added
```

0800000028 CLI_LOG_ACTION_DELETE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000028	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	none	string	32
ui	none	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	Deleted	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000028 type=kevent subtype=config pri=information user=
  ui= module=unknown submodule=unknown msg=Deleted
```

0800000029 CLI_LOG_ACTION_MOVE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000029	string	10
type	kevent	string	16

Field	Value	Data Type	Length
subtype	config	string	20
pri	information	uint8	1
user	none	string	32
ui	none	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	moved an entry	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000029 type=kevent subtype=config pri=information user=
  ui= module=unknown submodule=unknown msg=moved an entry
```

0800000030 CLI_LOG_ACTION_OTHER

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000030	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	none	string	32
ui	none	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	other action	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000030 type=kevent subtype=config pri=information user=
  ui= module=unknown submodule=unknown msg=other action
```

0800000031 CLI_LOG_ACTION_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000031	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	none	string	32
ui	none	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	failed (1)	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000031 type=kevent subtype=config pri=information user=
  ui= module=unknown submodule=unknown msg=failed (1)
```

0800000032 CLI_LOG_ACTION_FOR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000032	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	none	string	32
ui	none	string	32

Field	Value	Data Type	Length
module	unknown	string	16
submodule	unknown	string	16
msg	for '<PATH> <NAME>'	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000032 type=kevent subtype=config pri=information user=
  ui= module=unknown submodule=unknown msg=for '<PATH> <NAME>'
```

0800000033 CLI_LOG_ACTION_DOMAIN

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000033	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	none	string	32
ui	none	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	on domain '<DOMAIN>'	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000033 type=kevent subtype=config pri=information user=
  ui= module=unknown submodule=unknown msg=on domain '<DOMAIN>'
```

0800000034 CLI_LOG_ACTION

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000034	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	<MSG> (user: <USER>, from: <UI>)	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000034 type=kevent subtype=config pri=information
user=<USER> ui=<UI> module=unknown submodule=unknown msg=<MSG> (user: <USER>, from:
<UI>)
```

0800000035 CERT_SSL_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000035	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	admin	string	32
ui	admin	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	<PREFIX>: err=0x0x1: <LIB> / <FUNC> / <REASON>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000035 type=kevent subtype=config pri=information
  user=admin ui=admin module=unknown submodule=unknown msg=<PREFIX>: err=0x0x1: <LIB> /
  <FUNC> / <REASON>
```

0800000036 CERT_CANT_OPEN_CERT_FILE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000036	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	admin	string	32
ui	admin	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	Read Certificate File: Could not open file <FILE>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000036 type=kevent subtype=config pri=information
  user=admin ui=admin module=unknown submodule=unknown msg=Read Certificate File: Could
  not open file <FILE>
```

0800000037 CERT_KEY_FILE_NOT_EXIST

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000037	string	10

Field	Value	Data Type	Length
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	admin	string	32
ui	admin	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	Load KeyFile: File does not exist, <FILE>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000037 type=kevent subtype=config pri=information
user=admin ui=admin module=unknown submodule=unknown msg=Load KeyFile: File does not
exist, <FILE>
```

0800000038 CERT_CANT_OPEN_KEY_FILE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000038	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	admin	string	32
ui	admin	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	Load KeyFile: Could not open <FILE>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000038 type=kevent subtype=config pri=information
user=admin ui=admin module=unknown submodule=unknown msg=Load KeyFile: Could not open
<FILE>
```

0800000039 CERT_CANT_READ_CA_CERT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000039	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	admin	string	32
ui	admin	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	Import CA Certificate: Could not read an X509 certificate from file	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000039 type=kevent subtype=config pri=information
user=admin ui=admin module=unknown submodule=unknown msg=Import CA Certificate: Could
not read an X509 certificate from file
```

0800000040 CERT_NOT_CA_CERT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000040	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	admin	string	32

Field	Value	Data Type	Length
ui	admin	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	Import CA Certificate: The certificate is not a CA certificate.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000040 type=kevent subtype=config pri=information
user=admin ui=admin module=unknown submodule=unknown msg=Import CA Certificate: The
certificate is not a CA certificate.
```

0800000041 CERT_CANT_READ_REMOTE_CERT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000041	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	admin	string	32
ui	admin	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	Import Remote Certificate: Could not read a certificate from the file	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000041 type=kevent subtype=config pri=information
user=admin ui=admin module=unknown submodule=unknown msg=Import Remote Certificate:
Could not read a certificate from the file
```

0800000042 CERT_REMOTE_CERT_NOT_CA_CERT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000042	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	admin	string	32
ui	admin	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	Import Remote Certificate: The certificate is not a CA certificate.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000042 type=kevent subtype=config pri=information
user=admin ui=admin module=unknown submodule=unknown msg=Import Remote Certificate:
The certificate is not a CA certificate.
```

0800000043 CERT_IS_REVOKED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000043	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	admin	string	32

Field	Value	Data Type	Length
ui	admin	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	Certificate check. Certificate is revoked. <ERR>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000043 type=kevent subtype=config pri=information
user=admin ui=admin module=unknown submodule=unknown msg=Certificate check.
Certificate is revoked. <ERR>
```

0800000044 CERT_IS_EXPIRED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000044	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	admin	string	32
ui	admin	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	Certificate check. Certificate is expired. <ERR>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000044 type=kevent subtype=config pri=information
user=admin ui=admin module=unknown submodule=unknown msg=Certificate check.
Certificate is expired. <ERR>
```

080000045 CERT_IS_INVALID

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000045	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	admin	string	32
ui	admin	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	Certificate check. Certificate is invalid. <ERR>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000045 type=kevent subtype=config pri=information
user=admin ui=admin module=unknown submodule=unknown msg=Certificate check.
Certificate is invalid. <ERR>
```

080000046 CERT_PKCS12_INVALID_PASSWD

Meaning

Fields

Field	Value	Data Type	Length
log_id	0800000046	string	10
type	kevent	string	16
subtype	config	string	20
pri	information	uint8	1
user	admin	string	32

Field	Value	Data Type	Length
ui	admin	string	32
module	unknown	string	16
submodule	unknown	string	16
msg	PKCS12 import: Invalid Password	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0800000046 type=kevent subtype=config pri=information
  user=admin ui=admin module=unknown submodule=unknown msg=PKCS12 import: Invalid
  Password
```

dhcp

If the log message header contains:

```
subtype=dhcp
```

then the log message describes events for the built-in DHCP server on the FortiRecorder unit.

This section describes log messages of that subtype.

080600000 DHCPD_CLIENT_BROADCASTS_DHCPDISCOVER

Meaning

Fields

Field	Value	Data Type	Length
log_id	0806000000	string	10
type	kevent	string	16
subtype	dhcp	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	NONE	string	16
status	N/A	string	10
session_id	""	string	10
msg	A client broadcasts a DHCPDISCOVER message: <DETAILS>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0806000000 type=kevent subtype=dhcp pri=information
user=system ui=system action=NONE status=N/A session_id="" msg=A client broadcasts a
DHCPDISCOVER message: <DETAILS>
```

0806000001 DHCPD_SERVER_RESPONDS_WITH_CONFIG

Meaning

Fields

Field	Value	Data Type	Length
log_id	0806000001	string	10
type	kevent	string	16
subtype	dhcp	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	NONE	string	16
status	N/A	string	10
session_id	""	string	10
msg	Server responds with offer of configuration parameters: <DETAILS>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0806000001 type=kevent subtype=dhcp pri=information
user=system ui=system action=NONE status=N/A session_id="" msg=Server responds with
offer of configuration parameters: <DETAILS>
```

0806000002 DHCPD_CLIENT_REQUESTS_CONFIG

Meaning

Fields

Field	Value	Data Type	Length
log_id	0806000002	string	10
type	kevent	string	16
subtype	dhcp	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	NONE	string	16
status	N/A	string	10
session_id	""	string	10
msg	Client requests IP address/configuration parameters: <DETAILS>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0806000002 type=kevent subtype=dhcp pri=information
user=system ui=system action=NONE status=N/A session_id="" msg=Client requests IP
address/configuration parameters: <DETAILS>
```

0806000003 DHCPD_CLIENT_DETECTS_CONFLICT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0806000003	string	10
type	kevent	string	16
subtype	dhcp	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	NONE	string	16
status	N/A	string	10
session_id	""	string	10
msg	Client detects an IP conflict and declines the address: <DETAILS>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0806000003 type=kevent subtype=dhcp pri=information
user=system ui=system action=NONE status=N/A session_id="" msg=Client detects an IP
conflict and declines the address: <DETAILS>
```

0806000004 DHCPD_CONFIG_ASSIGNED_TO_CLIENT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0806000004	string	10
type	kevent	string	16
subtype	dhcp	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	NONE	string	16
status	N/A	string	10
session_id	""	string	10
msg	Assigns IP address/configuration parameters to the client: <DETAILS>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0806000004 type=kevent subtype=dhcp pri=information
user=system ui=system action=NONE status=N/A session_id="" msg=Assigns IP
address/configuration parameters to the client: <DETAILS>
```

0806000005 DHCPD_SERVER_UNABLE_TO_SATISFY_REQ

Meaning

Fields

Field	Value	Data Type	Length
log_id	0806000005	string	10
type	kevent	string	16
subtype	dhcp	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	NONE	string	16
status	N/A	string	10
session_id	""	string	10
msg	Server is unable to satisfy the client's request: <DETAILS>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0806000005 type=kevent subtype=dhcp pri=information
user=system ui=system action=NONE status=N/A session_id="" msg=Server is unable to
satisfy the client's request: <DETAILS>
```

0806000006 DHCPD_CLIENT_RELEASES_IP

Meaning

Fields

Field	Value	Data Type	Length
log_id	0806000006	string	10
type	kevent	string	16
subtype	dhcp	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	NONE	string	16
status	N/A	string	10
session_id	""	string	10

Field	Value	Data Type	Length
msg	Client relinquishes the IP address and cancelling remaining lease: <DETAILS>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0806000006 type=kevent subtype=dhcp pri=information
user=system ui=system action=NONE status=N/A session_id="" msg=Client relinquishes the
IP address and cancelling remaining lease: <DETAILS>
```

0806000007 DHCPD_CLIENT_REQ_LOCAL_CONFIG

Meaning

Fields

Field	Value	Data Type	Length
log_id	0806000007	string	10
type	kevent	string	16
subtype	dhcp	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	NONE	string	16
status	N/A	string	10
session_id	""	string	10
msg	Client asks only for local configuration parameters: <DETAILS>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0806000007 type=kevent subtype=dhcp pri=information
user=system ui=system action=NONE status=N/A session_id="" msg=Client asks only for
local configuration parameters: <DETAILS>
```

0806000008 DHCPD_FORWARD_CLIENT_REQ

Meaning

Fields

Field	Value	Data Type	Length
log_id	0806000008	string	10
type	kevent	string	16
subtype	dhcp	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	NONE	string	16
status	N/A	string	10
session_id	""	string	10
msg	Forward a client's request to server: <DETAILS>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0806000008 type=kevent subtype=dhcp pri=information
user=system ui=system action=NONE status=N/A session_id="" msg=Forward a client's
request to server: <DETAILS>
```

0806000009 DHCPD_FORWARD_SERVER_REPLY

Meaning

Fields

Field	Value	Data Type	Length
log_id	0806000009	string	10
type	kevent	string	16
subtype	dhcp	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	NONE	string	16
status	N/A	string	10
session_id	""	string	10
msg	Forward server's reply to a client: <DETAILS>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0806000009 type=kevent subtype=dhcp pri=information
  user=system ui=system action=NONE status=N/A session_id="" msg=Forward server's reply
  to a client: <DETAILS>
```

0806000010 DHCPD_NO_SHARED_NETWORK

Meaning

Fields

Field	Value	Data Type	Length
log_id	0806000010	string	10
type	kevent	string	16
subtype	dhcp	string	20
pri	error	uint8	1
user	system	string	32
ui	system	string	32
action	NONE	string	16
status	N/A	string	10
session_id	""	string	10
msg	No shared network for network <IP> (<MASK>)	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0806000010 type=kevent subtype=dhcp pri=error user=system
  ui=system action=NONE status=N/A session_id="" msg=No shared network for network <IP>
  (<MASK>)
```

0806000011 DHCPD_ADDR_RANGE_SPANS_MULTIPLE_SUBNETS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0806000011	string	10
type	kevent	string	16
subtype	dhcp	string	20
pri	error	uint8	1
user	system	string	32
ui	system	string	32
action	NONE	string	16
status	N/A	string	10
session_id	""	string	10
msg	Address range <LOW> to <HIGH>, netmask <MASK> spans multiple subnets!	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0806000011 type=kevent subtype=dhcp pri=error user=system
  ui=system action=NONE status=N/A session_id="" msg=Address range <LOW> to <HIGH>,
  netmask <MASK> spans multiple subnets!
```

0806000012 DHCPD_ADDR_RANGE_NOT_ON_NET

Meaning

Fields

Field	Value	Data Type	Length
log_id	0806000012	string	10
type	kevent	string	16
subtype	dhcp	string	20
pri	error	uint8	1
user	system	string	32
ui	system	string	32
action	NONE	string	16
status	N/A	string	10

Field	Value	Data Type	Length
session_id	""	string	10
msg	Address range <LOW> to <HIGH> not on net <NET>/<MASK>!	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0806000012 type=kevent subtype=dhcp pri=error user=system
  ui=system action=NONE status=N/A session_id="" msg=Address range <LOW> to <HIGH> not
  on net <NET>/<MASK>!
```

system

If the log message header contains:

```
subtype=system
```

then the log message describes system events such as reboots or daemon activity on the FortiRecorder unit.

This section describes log messages of that subtype.

0802000000 GENERIC

Meaning

A generic system message.

Fields

Field	Value	Data Type	Length
log_id	0802000000	string	10
type	kevent	string	16
subtype	system	string	20
pri	alert	uint8	1
user	none	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	<MSG>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000000 type=kevent subtype=system pri=alert user= ui=
action=none status=none msg=<MSG>
```

0802000001 HWMON_NO_POWER_MONITOR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000001	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	hwmon	string	32
ui	hwmon	string	32
action	none	string	16
status	success	string	10
msg	Power monitor is not operational.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000001 type=kevent subtype=system pri=warning user=hwmon
ui=hwmon action=none status=success msg=Power monitor is not operational.
```

0802000002 HWMON_POWER_SUPPLY_EVENT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000002	string	10
type	kevent	string	16

Field	Value	Data Type	Length
subtype	system	string	20
pri	warning	uint8	1
user	hwmon	string	32
ui	hwmon	string	32
action	none	string	16
status	success	string	10
msg	The <PS> power supply status is <PS_STATUS>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000002 type=kevent subtype=system pri=warning user=hwmon
  ui=hwmon action=none status=success msg=The <PS> power supply status is <PS_STATUS>.
```

0802000003 HWMON_RAID_DEVICE_STATUS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000003	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	hwmon	string	32
ui	hwmon	string	32
action	none	string	16
status	success	string	10
msg	RAID device has changed status from '<OLD_STATUS>' to '<NEW_STATUS>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000003 type=kevent subtype=system pri=warning user=hwmon
  ui=hwmon action=none status=success msg=RAID device has changed status from '<OLD_
  STATUS>' to '<NEW_STATUS>'.
```

0802000004 HWMON_RAID_DISK_STATUS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000004	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	hwmon	string	32
ui	hwmon	string	32
action	none	string	16
status	success	string	10
msg	Disk p1 has changed status from '<OLD_STATUS>' to '<NEW_STATUS>'.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000004 type=kevent subtype=system pri=warning user=hwmon
  ui=hwmon action=none status=success msg=Disk p1 has changed status from '<OLD_STATUS>'
  to '<NEW_STATUS>'.
```

0802000007 VM_LICENSE_UPDATED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000007	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	<USER>	string	32

Field	Value	Data Type	Length
ui	<UI>	string	32
action	reload	string	16
status	none	string	10
msg	VM license: <MSG> by user <USER> via <UI>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000007 type=kevent subtype=system pri=warning user=<USER>
  ui=<UI> action=reload status=none msg=VM license: <MSG> by user <USER> via <UI>.
```

0802000008 CONFIG_RESTORED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000008	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	restore	string	16
status	none	string	10
msg	System configuration is restored from <WHERE> file (name: <FILE>, version: <VER2>) on <VER1> by user <USER> via <UI>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000008 type=kevent subtype=system pri=warning user=<USER>
  ui=<UI> action=restore status=none msg=System configuration is restored from <WHERE>
  file (name: <FILE>, version: <VER2>) on <VER1> by user <USER> via <UI>.
```

080200009 FACTORY_RESET

Meaning

An administrator reset the system to factory default using the CLI, web-based manager, or LCD.

Fields

Field	Value	Data Type	Length
log_id	080200009	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	factory_reset	string	16
status	success	string	10
msg	System has been reset to factory defaults by user <USER> via <UI>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=080200009 type=kevent subtype=system pri=warning user=<USER>
  ui=<UI> action=factory_reset status=success msg=System has been reset to factory
  defaults by user <USER> via <UI>.
```

080200012 SYSTEM_UPGRADED

Meaning

An administrator upgraded system firmware using the CLI or web-based manager.

Fields

Field	Value	Data Type	Length
log_id	080200012	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1

Field	Value	Data Type	Length
user	<USER>	string	32
ui	<UI>	string	32
action	upgrade	string	16
status	none	string	10
msg	System firmware has been upgraded from <VER1> to <VER2> by user <USER> via <UI>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000012 type=kevent subtype=system pri=warning user=<USER>
  ui=<UI> action=upgrade status=none msg=System firmware has been upgraded from <VER1>
  to <VER2> by user <USER> via <UI>.
```

0802000013 SYSTEM_UPGRADED_VER

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000013	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	upgrade	string	16
status	none	string	10
msg	System <VER> has been upgraded by user <USER> via <UI>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000013 type=kevent subtype=system pri=warning user=<USER>
  ui=<UI> action=upgrade status=none msg=System <VER> has been upgraded by user <USER>
  via <UI>.
```

0802000014 SYSTEM_DOWNGRADED

Meaning

An administrator downgraded system firmware using the CLI or web-based manager.

Fields

Field	Value	Data Type	Length
log_id	0802000014	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	downgrade	string	16
status	none	string	10
msg	System firmware has been downgraded from <VER1> to <VER2> by user <USER> via <UI>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000014 type=kevent subtype=system pri=warning user=<USER>
  ui=<UI> action=downgrade status=none msg=System firmware has been downgraded from
  <VER1> to <VER2> by user <USER> via <UI>.
```

0802000016 SYSTEM_RESTARTED

Meaning

An administrator restarted the system using the CLI or web-based manager.

Fields

Field	Value	Data Type	Length
log_id	0802000016	string	10
type	kevent	string	16
subtype	system	string	20

Field	Value	Data Type	Length
pri	warning	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	reboot	string	16
status	none	string	10
msg	System (<VER>) has been restarted by user <USER> via <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000016 type=kevent subtype=system pri=warning user=<USER>
  ui=<UI> action=reboot status=none msg=System (<VER>) has been restarted by user <USER>
  via <UI>
```

0802000017 SYSTEM_SHUTDOWN

Meaning

An administrator shut down the system using the CLI or web-based manager.

Fields

Field	Value	Data Type	Length
log_id	0802000017	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	shutdown	string	16
status	none	string	10
msg	System (<VER>) has been shutdown by user <USER> via <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000017 type=kevent subtype=system pri=warning user=<USER>
  ui=<UI> action=shutdown status=none msg=System (<VER>) has been shutdown by user
  <USER> via <UI>
```

0802000018 SYSTEM_RELOADED

Meaning

An administrator reloaded the system using the CLI or web-based manager.

Fields

Field	Value	Data Type	Length
log_id	0802000018	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	reload	string	16
status	none	string	10
msg	System (<VER>) has been reloaded by user <USER> via <UI>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000018 type=kevent subtype=system pri=warning user=<USER>
  ui=<UI> action=reload status=none msg=System (<VER>) has been reloaded by user <USER>
  via <UI>.
```

0802000019 IMAGE_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000019	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	<USER>	string	32

Field	Value	Data Type	Length
ui	<UI>	string	32
action	upgrade	string	16
status	failure	string	10
msg	Check image error by user <USER> via <UI>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000019 type=kevent subtype=system pri=warning user=<USER>
  ui=<UI> action=upgrade status=failure msg=Check image error by user <USER> via <UI>.
```

0802000020 REGISTER_DEVICE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000020	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	failure	string	10
msg	OFTPD: couldn't register device <DEVICE> from OFTPD: <ERROR>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000020 type=kevent subtype=system pri=warning user=system
  ui=system action=none status=failure msg=OFTPD: couldn't register device <DEVICE> from
  OFTPD: <ERROR>.
```

0802000054 NETD_STARTING

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000054	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	netd	string	32
ui	netd	string	32
action	none	string	16
status	success	string	10
msg	starting	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000054 type=kevent subtype=system pri=information  
user=netd ui=netd action=none status=success msg=starting
```

0802000055 NETD_REGISTERING

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000055	string	10
type	kevent	string	16
subtype	system	string	20
pri	debug	uint8	1
user	netd	string	32
ui	netd	string	32

Field	Value	Data Type	Length
action	none	string	16
status	success	string	10
msg	registering services	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000055 type=kevent subtype=system pri=debug user=netd
  ui=netd action=none status=success msg=registering services
```

0802000056 NETD_START_RUNNING

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000056	string	10
type	kevent	string	16
subtype	system	string	20
pri	debug	uint8	1
user	netd	string	32
ui	netd	string	32
action	none	string	16
status	success	string	10
msg	starting	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000056 type=kevent subtype=system pri=debug user=netd
  ui=netd action=none status=success msg=starting
```

0802000057 NETD_SHUTTING_DOWN

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000057	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	netd	string	32
ui	netd	string	32
action	none	string	16
status	success	string	10
msg	shutting down	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000057 type=kevent subtype=system pri=information  
user=netd ui=netd action=none status=success msg=shutting down
```

0802000058 NETD_STOPPED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000058	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	netd	string	32
ui	netd	string	32
action	none	string	16
status	success	string	10
msg	stopped	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000058 type=kevent subtype=system pri=information
user=netd ui=netd action=none status=success msg=stopped
```

0802000059 NETD_START_PROBLEM

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000059	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	netd	string	32
ui	netd	string	32
action	none	string	16
status	success	string	10
msg	problem starting <SERVICE>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000059 type=kevent subtype=system pri=error user=netd
ui=netd action=none status=success msg=problem starting <SERVICE>
```

0802000060 NETD_POOL

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000060	string	10
type	kevent	string	16

Field	Value	Data Type	Length
subtype	system	string	20
pri	warning	uint8	1
user	netd	string	32
ui	netd	string	32
action	none	string	16
status	success	string	10
msg	couldn't find pool 1	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000060 type=kevent subtype=system pri=warning user=netd
  ui=netd action=none status=success msg=couldn't find pool 1
```

0802000061 FAILED_TFTP_TRANSFER_FROM

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000061	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	backup	string	16
status	success	string	10
msg	Failed TFTP transfer from <SERVER> while attempting to <WHAT> by user <USER> via <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000061 type=kevent subtype=system pri=error user=<USER>
  ui=<UI> action=backup status=success msg=Failed TFTP transfer from <SERVER> while
  attempting to <WHAT> by user <USER> via <UI>
```

0802000062 FAILED_TFTP_TRANSFER_TO

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000062	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	backup	string	16
status	success	string	10
msg	Failed TFTP transfer to <SERVER> while attempting to <WHAT> by user <USER> via <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000062 type=kevent subtype=system pri=error user=<USER>
  ui=<UI> action=backup status=success msg=Failed TFTP transfer to <SERVER> while
  attempting to <WHAT> by user <USER> via <UI>
```

0802000066 BACKUP_CHDIR_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000066	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	<USER>	string	32

Field	Value	Data Type	Length
ui	<UI>	string	32
action	backup	string	16
status	failure	string	10
msg	Failed to change to directory <PATH> (1) during archive creation by user <USER> via <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000066 type=kevent subtype=system pri=error user=<USER>
  ui=<UI> action=backup status=failure msg=Failed to change to directory <PATH> (1)
  during archive creation by user <USER> via <UI>
```

0802000067 RESTORE_CHDIR_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000067	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	restore	string	16
status	failure	string	10
msg	Failed to change to directory <PATH> (1) during archive extraction by user <USER> via <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000067 type=kevent subtype=system pri=error user=<USER>
  ui=<UI> action=restore status=failure msg=Failed to change to directory <PATH> (1)
  during archive extraction by user <USER> via <UI>
```

0802000068 ARCHIVE_CREATION_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000068	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	backup	string	16
status	failure	string	10
msg	Failed to execute archive creation (1) by user <USER> via <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000068 type=kevent subtype=system pri=error user=<USER>
  ui=<UI> action=backup status=failure msg=Failed to execute archive creation (1) by
  user <USER> via <UI>
```

0802000069 ARCHIVE_EXTRACTION_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000069	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	<USER>	string	32

Field	Value	Data Type	Length
ui	<UI>	string	32
action	restore	string	16
status	failure	string	10
msg	Failed to execute archive extraction (1) by user <USER> via <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000069 type=kevent subtype=system pri=error user=<USER>
  ui=<UI> action=restore status=failure msg=Failed to execute archive extraction (1) by
  user <USER> via <UI>
```

0802000070 ARCHIVE_COMPRESSION_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000070	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	backup	string	16
status	failure	string	10
msg	Failure during archive compressions (1) by user <USER> via <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000070 type=kevent subtype=system pri=error user=<USER>
  ui=<UI> action=backup status=failure msg=Failure during archive compressions (1) by
  user <USER> via <UI>
```

0802000071 ARCHIVE_DECOMPRESSION_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000071	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	restore	string	16
status	failure	string	10
msg	Failure during archive decompressions (1) by user <USER> via <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000071 type=kevent subtype=system pri=error user=<USER>
  ui=<UI> action=restore status=failure msg=Failure during archive decompressions (1) by
  user <USER> via <UI>
```

0802000072 LOGIN_RENAME_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000072	string	10
type	kevent	string	16
subtype	system	string	20
pri	debug	uint8	1
user	system	string	32

Field	Value	Data Type	Length
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Error 1: can't rename C_LOGIN (<NAME>).	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000072 type=kevent subtype=system pri=debug user=system
  ui= action=none status=none msg=Error 1: can't rename C_LOGIN (<NAME>).
```

0802000073 CERT_UPLOAD_MISSING_NAME

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000073	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	system	string	32
ui	none	string	32
action	upload	string	16
status	failure	string	10
msg	Certificate upload: missing the certificate name.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000073 type=kevent subtype=system pri=error user=system
  ui= action=upload status=failure msg=Certificate upload: missing the certificate name.
```

0802000074 CERT_UPLOAD_INTERNAL_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000074	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	system	string	32
ui	none	string	32
action	upload	string	16
status	failure	string	10
msg	Certificate upload: internal error (1).	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000074 type=kevent subtype=system pri=error user=system
  ui= action=upload status=failure msg=Certificate upload: internal error (1).
```

0802000076 UPLOAD_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000076	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	system	string	32
ui	none	string	32
action	upload	string	16
status	failure	string	10
msg	<MSG>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000076 type=kevent subtype=system pri=error user=system
  ui= action=upload status=failure msg=<MSG>
```

0802000077 CERT_CSR_RESP_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000077	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	system	string	32
ui	none	string	32
action	upload	string	16
status	failure	string	10
msg	Certificate upload: importing the CSR response failed	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000077 type=kevent subtype=system pri=error user=system
  ui= action=upload status=failure msg=Certificate upload: importing the CSR response
  failed
```

0802000078 CERT_INV_PKCS12

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000078	string	10

Field	Value	Data Type	Length
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	system	string	32
ui	none	string	32
action	upload	string	16
status	failure	string	10
msg	Certificate upload: invalid PKCS12 certificate or password	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000078 type=kevent subtype=system pri=error user=system
  ui= action=upload status=failure msg=Certificate upload: invalid PKCS12 certificate or
  password
```

0802000079 CERT_UPLOAD_OK

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000079	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	none	string	32
action	upload	string	16
status	success	string	10
msg	Certificate upload: OK.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000079 type=kevent subtype=system pri=information
  user=system ui= action=upload status=success msg=Certificate upload: OK.
```

0802000080 CERT_INV_CERT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000080	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	system	string	32
ui	none	string	32
action	upload	string	16
status	failure	string	10
msg	Certificate upload: invalid certificate, key or password.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000080 type=kevent subtype=system pri=error user=system
  ui= action=upload status=failure msg=Certificate upload: invalid certificate, key or
  password.
```

0802000081 CERT_INV_CA

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000081	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	system	string	32

Field	Value	Data Type	Length
ui	none	string	32
action	upload	string	16
status	failure	string	10
msg	Certificate upload: invalid CA certificate.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000081 type=kevent subtype=system pri=error user=system
  ui= action=upload status=failure msg=Certificate upload: invalid CA certificate.
```

0802000082 CERT_INV_CRL

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000082	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	system	string	32
ui	none	string	32
action	upload	string	16
status	failure	string	10
msg	Certificate upload: invalid certificate revocation list.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000082 type=kevent subtype=system pri=error user=system
  ui= action=upload status=failure msg=Certificate upload: invalid certificate
  revocation list.
```

0802000083 CERT_INV_REMOTE_CERT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000083	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	system	string	32
ui	none	string	32
action	upload	string	16
status	failure	string	10
msg	Certificate upload: invalid remote certificate.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000083 type=kevent subtype=system pri=error user=system
  ui= action=upload status=failure msg=Certificate upload: invalid remote certificate.
```

0802000084 CERT_BIND_OK

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000084	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	none	string	32
action	upload	string	16
status	success	string	10
msg	Certificate binding succeeded.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000084 type=kevent subtype=system pri=information
user=system ui= action=upload status=success msg=Certificate binding succeeded.
```

0802000085 CERT_BIND_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000085	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	system	string	32
ui	none	string	32
action	upload	string	16
status	failure	string	10
msg	Certificate binding failed: <REASON>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000085 type=kevent subtype=system pri=error user=system
ui= action=upload status=failure msg=Certificate binding failed: <REASON>.
```

0802000086 RESOURCE_USAGE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000086	string	10
type	kevent	string	16

Field	Value	Data Type	Length
subtype	system	string	20
pri	alert	uint8	1
user	none	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	<MSG>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000086 type=kevent subtype=system pri=alert user= ui=
action=none status=none msg=<MSG>
```

0802000091 FG_LICENSE_EXPIRY

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000091	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	system	string	32
ui	none	string	32
action	upload	string	16
status	failure	string	10
msg	FortiGuard <NAME> license is expiring in 1 <DAYS> on <DATE>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000091 type=kevent subtype=system pri=warning user=system
ui= action=upload status=failure msg=FortiGuard <NAME> license is expiring in 1 <DAYS>
on <DATE>.
```

0802000092 FG_LICENSE_EXPIRED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000092	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	system	string	32
ui	none	string	32
action	upload	string	16
status	failure	string	10
msg	FortiGuard <NAME> license is expired.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000092 type=kevent subtype=system pri=warning user=system
  ui= action=upload status=failure msg=FortiGuard <NAME> license is expired.
```

0802000095 MDADM_RAID_EVENT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000095	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	system	string	32
ui	system	string	32

Field	Value	Data Type	Length
action	none	string	16
status	none	string	10
msg	event on chroot-64-dev:<DEV>, it could be related to component device <DISC>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000095 type=kevent subtype=system pri=warning user=system
  ui=system action=none status=none msg= event on chroot-64-dev:<DEV>, it could be
  related to component device <DISC>
```

0802000096 LDAP_SYNC_START

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000096	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	Ldap sync from <FROM> start	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000096 type=kevent subtype=system pri=information
  user=system ui=system action=none status=none msg=Ldap sync from <FROM> start
```

0802000097 LDAP_SYNC

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000097	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	Ldap sync from <FROM> end: Total records: 1, Record imported: 2	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000097 type=kevent subtype=system pri=information
user=system ui=system action=none status=none msg=Ldap sync from <FROM> end: Total
records: 1, Record imported: 2
```

0802000098 LDAP_SYNC_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000098	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	Ldap sync failed: <MMSG>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000098 type=kevent subtype=system pri=warning user=system
  ui=system action=none status=none msg=Ldap sync failed: <MMSG>
```

0802000099 LDAP_SYNC_USAGE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000099	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	Ldap sync failed: problem with usage	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000099 type=kevent subtype=system pri=warning user=system
  ui=system action=none status=none msg=Ldap sync failed: problem with usage
```

0802000100 SEARCH_DONE_STATS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000100	string	10
type	kevent	string	16

Field	Value	Data Type	Length
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	Finished search (id 1), started on <START>, time taken: <TAKEN>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000100 type=kevent subtype=system pri=information
  user=system ui=system action=none status=none msg=Finished search (id 1), started on
  <START>, time taken: <TAKEN>
```

0802000101 NASD_STARTING

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000101	string	10
type	kevent	string	16
subtype	system	string	20
pri	notice	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	starting	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000101 type=kevent subtype=system pri=notice user=nasd
  ui=nasd action=none status=success msg=starting
```

0802000102 NASD_START_RUNNING

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000102	string	10
type	kevent	string	16
subtype	system	string	20
pri	debug	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	starting	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000102 type=kevent subtype=system pri=debug user=nasd
  ui=nasd action=none status=success msg=starting
```

0802000103 NASD_SHUTTING_DOWN

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000103	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	nasd	string	32
ui	nasd	string	32

Field	Value	Data Type	Length
action	none	string	16
status	success	string	10
msg	shutting down	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000103 type=kevent subtype=system pri=information
user=nasd ui=nasd action=none status=success msg=shutting down
```

0802000104 NASD_STOPPED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000104	string	10
type	kevent	string	16
subtype	system	string	20
pri	notice	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	stopped	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000104 type=kevent subtype=system pri=notice user=nasd
ui=nasd action=none status=success msg=stopped
```

0802000105 NASD_OPTIONS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000105	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	nas options are='<OPTIONS>'	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000105 type=kevent subtype=system pri=information
user=nasd ui=nasd action=none status=success msg=nas options are='<OPTIONS>'
```

0802000106 NASD_STOPPING

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000106	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	stopping NASD	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000106 type=kevent subtype=system pri=information
user=nasd ui=nasd action=none status=success msg=stopping NASD
```

0802000107 NASD_TEMPORARILY_STOPPED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000107	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	temporarily stopped NAS daemon	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000107 type=kevent subtype=system pri=information
user=nasd ui=nasd action=none status=success msg=temporarily stopped NAS daemon
```

0802000108 NASD_STARTING2

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000108	string	10
type	kevent	string	16

Field	Value	Data Type	Length
subtype	system	string	20
pri	information	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	starting NASD	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000108 type=kevent subtype=system pri=information
user=nasd ui=nasd action=none status=success msg=starting NASD
```

0802000109 NASD_FORMAT_CHECK_RUNNING

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000109	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	format/check already running	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000109 type=kevent subtype=system pri=error user=nasd
ui=nasd action=none status=success msg=format/check already running
```

0802000110 NASD_FORMAT_FOR_BLOCK_DEVS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000110	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	format only available for block devices	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000110 type=kevent subtype=system pri=error user=nasd
  ui=nasd action=none status=success msg=format only available for block devices
```

0802000111 NASD_FORMATTING_STORAGE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000111	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	nasd	string	32
ui	nasd	string	32

Field	Value	Data Type	Length
action	none	string	16
status	success	string	10
msg	formatting storage	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000111 type=kevent subtype=system pri=information
user=nasd ui=nasd action=none status=success msg=formatting storage
```

0802000112 NASD_UNABLE_TO_PARTITION

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000112	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	unable to partition device	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000112 type=kevent subtype=system pri=error user=nasd
ui=nasd action=none status=success msg=unable to partition device
```

0802000113 NASD_CHECK_FOR_BLOCK_DEVS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000113	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	check only available for block devices	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000113 type=kevent subtype=system pri=error user=nasd
  ui=nasd action=none status=success msg=check only available for block devices
```

0802000114 NASD_CHECKING

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000114	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	checking NASD	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000114 type=kevent subtype=system pri=information
user=nasd ui=nasd action=none status=success msg=checking NASD
```

0802000115 NASD_UNABLE_TO_MOUNT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000115	string	10
type	kevent	string	16
subtype	system	string	20
pri	notice	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	unable to mount NAS device	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000115 type=kevent subtype=system pri=notice user=nasd
ui=nasd action=none status=success msg=unable to mount NAS device
```

0802000116 NASD_MOUNTED_DEVICE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000116	string	10
type	kevent	string	16

Field	Value	Data Type	Length
subtype	system	string	20
pri	notice	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	mounted NAS device	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000116 type=kevent subtype=system pri=notice user=nasd
  ui=nasd action=none status=success msg=mounted NAS device
```

0802000117 NASD_MOVED_HOME

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000117	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	moved /var/spool/home to <DST>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000117 type=kevent subtype=system pri=warning user=nasd
  ui=nasd action=none status=success msg=moved /var/spool/home to <DST>
```

0802000118 NASD_MOUNT_FAILED_FOR_BUILD

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000118	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	failed to mount NAS for build	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000118 type=kevent subtype=system pri=error user=nasd  
ui=nasd action=none status=success msg=failed to mount NAS for build
```

0802000119 NASD_BUILT_BASE_DIRS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000119	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	nasd	string	32
ui	nasd	string	32

Field	Value	Data Type	Length
action	none	string	16
status	success	string	10
msg	built base directories on NAS device	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000119 type=kevent subtype=system pri=information
user=nasd ui=nasd action=none status=success msg=built base directories on NAS device
```

0802000120 NASD_MOUNT_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000120	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	failed to mount <MOUNTPT>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000120 type=kevent subtype=system pri=error user=nasd
ui=nasd action=none status=success msg=failed to mount <MOUNTPT>
```

0802000121 NASD_MOUNTED_DEVICES

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000121	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	mounted NAS devices	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000121 type=kevent subtype=system pri=information
user=nasd ui=nasd action=none status=success msg=mounted NAS devices
```

0802000122 NASD_NOT_MOUNTED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000122	string	10
type	kevent	string	16
subtype	system	string	20
pri	debug	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	<MOUNTPT> not mounted	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000122 type=kevent subtype=system pri=debug user=nasd
  ui=nasd action=none status=success msg=<MOUNTPT> not mounted
```

0802000123 NASD_UNMOUNTED_DEVS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000123	string	10
type	kevent	string	16
subtype	system	string	20
pri	debug	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	unmounted NAS devices	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000123 type=kevent subtype=system pri=debug user=nasd
  ui=nasd action=none status=success msg=unmounted NAS devices
```

0802000124 NASD_NAS_STARTED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000124	string	10
type	kevent	string	16

Field	Value	Data Type	Length
subtype	system	string	20
pri	information	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	NAS started	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000124 type=kevent subtype=system pri=information
user=nasd ui=nasd action=none status=success msg=NAS started
```

0802000125 NASD_STARTED_STATE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000125	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	start in <STATE> state	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000125 type=kevent subtype=system pri=error user=nasd
ui=nasd action=none status=success msg=start in <STATE> state
```

0802000126 NASD_NAS_STOPPED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000126	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	NAS stopped	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000126 type=kevent subtype=system pri=information  
user=nasd ui=nasd action=none status=success msg=NAS stopped
```

0802000127 NASD_STOPPED_STATE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000127	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	nasd	string	32
ui	nasd	string	32

Field	Value	Data Type	Length
action	none	string	16
status	success	string	10
msg	stop in <STATE> state	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000127 type=kevent subtype=system pri=error user=nasd
  ui=nasd action=none status=success msg=stop in <STATE> state
```

0802000128 NASD_NAS_RECOVERED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000128	string	10
type	kevent	string	16
subtype	system	string	20
pri	notice	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	NAS has recovered	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000128 type=kevent subtype=system pri=notice user=nasd
  ui=nasd action=none status=success msg=NAS has recovered
```

0802000129 NASD_NAS_MOVING_FROM_HOLDOFF

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000129	string	10
type	kevent	string	16
subtype	system	string	20
pri	notice	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	NAS is moving from holdoff	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000129 type=kevent subtype=system pri=notice user=nasd
  ui=nasd action=none status=success msg=NAS is moving from holdoff
```

0802000130 NASD_NAS_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000130	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	nasd	string	32
ui	nasd	string	32
action	none	string	16
status	success	string	10
msg	NAS has failed	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000130 type=kevent subtype=system pri=error user=nasd
  ui=nasd action=none status=success msg=NAS has failed
```

0802000145 CMDB_CREATE_CMDB_SOCKET_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000145	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	cmdb	string	32
ui	cmdb	string	32
action	none	string	16
status	success	string	10
msg	failed to create cmdb socket (<WHAT>)	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000145 type=kevent subtype=system pri=error user=cmdb
  ui=cmdb action=none status=success msg=failed to create cmdb socket (<WHAT>)
```

0802000171 DHCPD_CLIENT_BROADCASTS_DHCPDISCOVER

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000171	string	10
type	kevent	string	16

Field	Value	Data Type	Length
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	A client broadcasts a DHCPDISCOVER message	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000171 type=kevent subtype=system pri=information
user=system ui=system action=none status=none msg=A client broadcasts a DHCPDISCOVER
message
```

0802000172 DHCPD_SERVER_RESPONDS_WITH_CONFIG

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000172	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	Server responds with offer of configuration parameters	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000172 type=kevent subtype=system pri=information
user=system ui=system action=none status=none msg=Server responds with offer of
configuration parameters
```

0802000173 DHCPD_CLIENT_REQUESTS_CONFIG

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000173	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	Client requests IP address/configuration parameters	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000173 type=kevent subtype=system pri=information
user=system ui=system action=none status=none msg=Client requests IP
address/configuration parameters
```

0802000174 DHCPD_CLIENT_DETECTS_CONFLICT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000174	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32

Field	Value	Data Type	Length
ui	system	string	32
action	none	string	16
status	none	string	10
msg	Client detects an IP conflict and declines the address	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000174 type=kevent subtype=system pri=information
user=system ui=system action=none status=none msg=Client detects an IP conflict and
declines the address
```

0802000175 DHCPD_CONFIG_ASSIGNED_TO_CLIENT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000175	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	Assigns IP address/configuration parameters to the client	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000175 type=kevent subtype=system pri=information
user=system ui=system action=none status=none msg=Assigns IP address/configuration
parameters to the client
```

0802000176 DHCPD_SERVER_UNABLE_TO_SATISFY_REQ

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000176	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	Server is unable to satisfy the client's request	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000176 type=kevent subtype=system pri=information
user=system ui=system action=none status=none msg=Server is unable to satisfy the
client's request
```

0802000177 DHCPD_CLIENT_RELEASES_IP

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000177	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32

Field	Value	Data Type	Length
ui	system	string	32
action	none	string	16
status	none	string	10
msg	Client relinquishes the IP address and cancelling remaining lease	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000177 type=kevent subtype=system pri=information
user=system ui=system action=none status=none msg=Client relinquishes the IP address
and cancelling remaining lease
```

0802000178 DHCPD_CLIENT_REQ_LOCAL_CONFIG

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000178	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	Client asks only for local configuration parameters	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000178 type=kevent subtype=system pri=information
user=system ui=system action=none status=none msg=Client asks only for local
configuration parameters
```

0802000179 DHCPD_FORWARD_CLIENT_REQ

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000179	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	Forward a client's request to server	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000179 type=kevent subtype=system pri=information  
user=system ui=system action=none status=none msg=Forward a client's request to server
```

0802000180 DHCPD_FORWARD_SERVER_REPLY

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000180	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32

Field	Value	Data Type	Length
action	none	string	16
status	none	string	10
msg	Forward server's reply to a client	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000180 type=kevent subtype=system pri=information
user=system ui=system action=none status=none msg=Forward server's reply to a client
```

0802000181 DHCPD_NO_SHARED_NETWORK

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000181	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	No shared network for network <IP> (<MASK>)	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000181 type=kevent subtype=system pri=error user=system
ui=system action=none status=none msg=No shared network for network <IP> (<MASK>)
```

0802000182 DHCPD_ADDR_RANGE_SPANS_MULTIPLE_SUBNETS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000182	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	Address range <LOW> to <HIGH>, netmask <MASK> spans multiple subnets!	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000182 type=kevent subtype=system pri=error user=system
  ui=system action=none status=none msg=Address range <LOW> to <HIGH>, netmask <MASK>
  spans multiple subnets!
```

0802000183 DHCPD_ADDR_RANGE_NOT_ON_NET

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000183	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	Address range <LOW> to <HIGH> not on net <NET>/<MASK>!	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000183 type=kevent subtype=system pri=error user=system
  ui=system action=none status=none msg=Address range <LOW> to <HIGH> not on net
  <NET>/<MASK>!
```

0802000191 MAILLIST_RESTORED_BW_LIST

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000191	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	none	string	16
status	none	string	10
msg	Restore <NAME> b/w list by user <USER> via <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000191 type=kevent subtype=system pri=warning user=<USER>
  ui=<UI> action=none status=none msg=Restore <NAME> b/w list by user <USER> via <UI>
```

0802000192 DIRECTORY_DOES_NOT_EXIST

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000192	string	10

Field	Value	Data Type	Length
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	none	string	16
status	none	string	10
msg	<FUNC>: directory <DIR> does not exist	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000192 type=kevent subtype=system pri=warning user=<USER>
  ui=<UI> action=none status=none msg=<FUNC>: directory <DIR> does not exist
```

0802000193 LOWENC_CERT_KEY_ABOVE_512

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000193	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	system	string	32
ui	system	string	32
action	low_encryption	string	16
status	failure	string	10
msg	Low encryption: Maximum certificate key length of 512 bits is required	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000193 type=kevent subtype=system pri=warning user=system
  ui=system action=low_encryption status=failure msg=Low encryption: Maximum certificate
  key length of 512 bits is required
```

0802000194 SMIT_TEST

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000194	string	10
type	kevent	string	16
subtype	system	string	20
pri	debug	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	<MSG>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000194 type=kevent subtype=system pri=debug user=system  
ui=system action=none status=none msg=<MSG>
```

0802000218 FDS_LOADED_WRONG_IMAGE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000218	string	10
type	kevent	string	16
subtype	system	string	20
pri	critical	uint8	1
user	system	string	32
ui	system	string	32

Field	Value	Data Type	Length
action	none	string	16
status	none	string	10
msg	System loaded a wrong image from FortiGuard Management.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000218 type=kevent subtype=system pri=critical
  user=system ui=system action=none status=none msg=System loaded a wrong image from
  FortiGuard Management.
```

0802000219 FDS_RESTORE_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000219	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	System failed to restore <TYPE> file <REV> from management station	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000219 type=kevent subtype=system pri=warning user=system
  ui=system action=none status=none msg=System failed to restore <TYPE> file <REV> from
  management station
```

0802000220 FDS_CONFIG_BACKUP

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000220	string	10
type	kevent	string	16
subtype	system	string	20
pri	notice	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	none	string	10
msg	System backed up configuration to Management Station per service portal request.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000220 type=kevent subtype=system pri=notice user=system
  ui=system action=none status=none msg=System backed up configuration to Management
  Station per service portal request.
```

0802000221 OFTPCD_CONNECTED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000221	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	OFTP	string	32

Field	Value	Data Type	Length
ui	OFTP	string	32
action	none	string	16
status	none	string	10
msg	Oftp client successfully connected to remote server over SSL, local port (2)!	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000221 type=kevent subtype=system pri=information
  user=OFTP ui=OFTP action=none status=none msg=Oftp client successfully connected to
  remote server over SSL, local port (2)!
```

0802000222 OFTPCD_START_THREAD

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000222	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	OFTP	string	32
ui	OFTP	string	32
action	none	string	16
status	none	string	10
msg	Start oftp thread for path: <PATH>, server: <SERVER>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000222 type=kevent subtype=system pri=information
  user=OFTP ui=OFTP action=none status=none msg=Start oftp thread for path: <PATH>,
  server: <SERVER>
```

0802000223 OFTP_CD_CONNECTION_BROKEN

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000223	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	OFTP	string	32
ui	OFTP	string	32
action	none	string	16
status	none	string	10
msg	Oftp client connection to remote server is broken, trying reconnecting!	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000223 type=kevent subtype=system pri=warning user=OFTP
  ui=OFTP action=none status=none msg=Oftp client connection to remote server is broken,
  trying reconnecting!
```

0802000224 OFTP_SD_CONNECTION_REFUSED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000224	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	OFTP	string	32

Field	Value	Data Type	Length
ui	OFTP	string	32
action	none	string	16
status	none	string	10
msg	Oftp has maximum clients connected, request from <CLIENT> is rejected.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000224 type=kevent subtype=system pri=information
  user=OFTP ui=OFTP action=none status=none msg=Oftp has maximum clients connected,
  request from <CLIENT> is rejected.
```

0802000225 OFTPSD_REQUEST_REFUSED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000225	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	OFTP	string	32
ui	OFTP	string	32
action	none	string	16
status	none	string	10
msg	Oftp rejected unauthorized request from <CLIENT>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000225 type=kevent subtype=system pri=warning user=OFTP
  ui=OFTP action=none status=none msg=Oftp rejected unauthorized request from <CLIENT>.
```

0802000226 OFTPSD_CONNECTION_ACCEPTED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000226	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	OFTP	string	32
ui	OFTP	string	32
action	none	string	16
status	none	string	10
msg	Oftp server successfully accepted connection over SSL from <CLIENT>:2.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000226 type=kevent subtype=system pri=information
user=OFTP ui=OFTP action=none status=none msg=Oftp server successfully accepted
connection over SSL from <CLIENT>:2.
```

0802000227 OFTPSD_NO_KEEPALIVE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000227	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	OFTP	string	32

Field	Value	Data Type	Length
ui	OFTP	string	32
action	none	string	16
status	none	string	10
msg	Oftp server has not received <CLIENT> keepalive for 1 seconds, dropping connection.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000227 type=kevent subtype=system pri=warning user=OFTP
  ui=OFTP action=none status=none msg=Oftp server has not received <CLIENT> keepalive
  for 1 seconds, dropping connection.
```

0802000228 OFTPSD_RECEIVED_CLIENT_EVENT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000228	string	10
type	kevent	string	16
subtype	system	string	20
pri	notice	uint8	1
user	OFTP	string	32
ui	OFTP	string	32
action	none	string	16
status	none	string	10
msg	Oftp server received client event:(<ERR>).	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000228 type=kevent subtype=system pri=notice user=OFTP
  ui=OFTP action=none status=none msg=Oftp server received client event:(<ERR>).
```

0802000231 NTPD_CLOCK_UPDATED_ERRORS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000231	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	ntpd	string	32
ui	ntpd	string	32
action	none	string	16
status	none	string	10
msg	ntpd: system clock updated with errors: <ERR>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000231 type=kevent subtype=system pri=error user=ntpd
  ui=ntpd action=none status=none msg=ntpd: system clock updated with errors: <ERR>
```

0802000232 NTPD_CLOCK_UPDATED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000232	string	10
type	kevent	string	16
subtype	system	string	20
pri	debug	uint8	1
user	ntpd	string	32
ui	ntpd	string	32

Field	Value	Data Type	Length
action	none	string	16
status	none	string	10
msg	ntpd: system clock updated	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000232 type=kevent subtype=system pri=debug user=ntpd
  ui=ntpd action=none status=none msg=ntpd: system clock updated
```

0802000233 NTPD_CANT_UPDATE_CLOCK

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000233	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	ntpd	string	32
ui	ntpd	string	32
action	none	string	16
status	none	string	10
msg	ntpd: Unable to update the system clock	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000233 type=kevent subtype=system pri=error user=ntpd
  ui=ntpd action=none status=none msg=ntpd: Unable to update the system clock
```

0802000234 NTPD_UPDATE_CLOCK_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000234	string	10
type	kevent	string	16
subtype	system	string	20
pri	debug	uint8	1
user	ntpd	string	32
ui	ntpd	string	32
action	none	string	16
status	none	string	10
msg	ntpd: <ERR>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000234 type=kevent subtype=system pri=debug user=ntpd
  ui=ntpd action=none status=none msg=ntpd: <ERR>
```

0802000235 NTPD_NTPDATE_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000235	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	ntpd	string	32
ui	ntpd	string	32
action	none	string	16
status	none	string	10
msg	ntpd: Failed to run ntpdate command	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000235 type=kevent subtype=system pri=error user=ntpd
  ui=ntpd action=none status=none msg=ntpd: Failed to run ntpdate command
```

0802000236 NTPD_NTPDATE_CMD

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000236	string	10
type	kevent	string	16
subtype	system	string	20
pri	debug	uint8	1
user	ntpd	string	32
ui	ntpd	string	32
action	none	string	16
status	none	string	10
msg	ntpd: Command was: <CMD>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000236 type=kevent subtype=system pri=debug user=ntpd
  ui=ntpd action=none status=none msg=ntpd: Command was: <CMD>
```

0802000280 SCHED_BACKUP_SUCCEED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000280	string	10
type	kevent	string	16

Field	Value	Data Type	Length
subtype	system	string	20
pri	information	uint8	1
user	none	string	32
ui	none	string	32
action	none	string	16
status	success	string	10
msg	<MSG>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000280 type=kevent subtype=system pri=information user=
  ui= action=none status=success msg=<MSG>
```

0802000281 LDAPBED_STARTING

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000281	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	ldapbed	string	32
ui	ldapbed	string	32
action	none	string	16
status	success	string	10
msg	starting	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000281 type=kevent subtype=system pri=information
  user=ldapbed ui=ldapbed action=none status=success msg=starting
```

0802000282 LDAPBED_START_RUNNING

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000282	string	10
type	kevent	string	16
subtype	system	string	20
pri	debug	uint8	1
user	ldapbed	string	32
ui	ldapbed	string	32
action	none	string	16
status	success	string	10
msg	starting	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000282 type=kevent subtype=system pri=debug user=ldapbed  
ui=ldapbed action=none status=success msg=starting
```

0802000283 LDAPBED_SHUTTING_DOWN

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000283	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	ldapbed	string	32
ui	ldapbed	string	32

Field	Value	Data Type	Length
action	none	string	16
status	success	string	10
msg	shutting down	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000283 type=kevent subtype=system pri=information
user=ldapbed ui=ldapbed action=none status=success msg=shutting down
```

0802000284 LDAPBED_STOPPED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000284	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	ldapbed	string	32
ui	ldapbed	string	32
action	none	string	16
status	success	string	10
msg	stopped	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000284 type=kevent subtype=system pri=information
user=ldapbed ui=ldapbed action=none status=success msg=stopped
```

0802000286 OFTPSD_LOGIN_REJECTED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000286	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	OFTP	string	32
ui	OFTP	string	32
action	none	string	16
status	none	string	10
msg	Oftp rejected login request from <CLIENT>, because <CAUSE>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000286 type=kevent subtype=system pri=information
user=OFTP ui=OFTP action=none status=none msg=Oftp rejected login request from
<CLIENT>, because <CAUSE>.
```

0802000287 CONFIG_RESTORE_FAILED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000287	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	restore	string	16
status	none	string	10
msg	System configuration restoration by user <USER> via <UI> failed.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000287 type=kevent subtype=system pri=warning user=<USER>
  ui=<UI> action=restore status=none msg=System configuration restoration by user <USER>
  via <UI> failed.
```

0802000290 LDAPCACHED_CAUGHT_EXCEPTION

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000290	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	success	string	10
msg	ldapcached: type=<TYPE>, file=<FILE>, line=1, exception=<EXCEPTION>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000290 type=kevent subtype=system pri=information
  user=system ui=system action=none status=success msg=ldapcached: type=<TYPE>,
  file=<FILE>, line=1, exception=<EXCEPTION>
```

0802000292 LDAPCACHED_GENERIC_DEBUG

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000292	string	10
type	kevent	string	16
subtype	system	string	20
pri	debug	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	success	string	10
msg	ldapcached: profile=<PROFILE>, type=<TYPE>, msg=<MSG>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000292 type=kevent subtype=system pri=debug user=system
  ui=system action=none status=success msg=ldapcached: profile=<PROFILE>, type=<TYPE>,
  msg=<MSG>
```

0802000293 LDAPCACHED_GENERIC_INFO

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000293	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	system	string	32
action	none	string	16
status	success	string	10
msg	ldapcached: profile=<PROFILE>, type=<TYPE>, msg=<MSG>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000293 type=kevent subtype=system pri=information
  user=system ui=system action=none status=success msg=ldapcached: profile=<PROFILE>,
  type=<TYPE>, msg=<MSG>
```

0802000295 REMOTE_ARCHIVE_EVENT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000295	string	10
type	kevent	string	16
subtype	system	string	20
pri	alert	uint8	1
user	archived	string	32
ui	archived	string	32
action	none	string	16
status	none	string	10
msg	<MSG>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000295 type=kevent subtype=system pri=alert user=archived
  ui=archived action=none status=none msg=<MSG>
```

0802000296 TIME_CHANGED

Meaning

An administrator changed the system time using the CLI.

Fields

Field	Value	Data Type	Length
log_id	0802000296	string	10

Field	Value	Data Type	Length
type	kevent	string	16
subtype	system	string	20
pri	notice	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	none	string	16
status	success	string	10
msg	System time changed to <NEWTIME> at <OLDTIME> by user <USER> via <UI>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000296 type=kevent subtype=system pri=notice user=<USER>
  ui=<UI> action=none status=success msg=System time changed to <NEWTIME> at <OLDTIME>
  by user <USER> via <UI>
```

0802000320 DBDAEMON_DKIMDB_INIT_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000320	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	dbdaemon	string	32
ui	dbdaemon	string	32
action	none	string	16
status	success	string	10
msg	Error initializing DKIM signing keys databases.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000320 type=kevent subtype=system pri=information
  user=dbdaemon ui=dbdaemon action=none status=success msg=Error initializing DKIM
```

signing keys databases.

0802000336 CAPTURE_STATUS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000336	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	none	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Capture packet <DETAILS>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000336 type=kevent subtype=system pri=information user=ui= action=none status=none msg=Capture packet <DETAILS>
```

0802000337 LICENSE_UPDATED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000337	string	10
type	kevent	string	16
subtype	system	string	20
pri	alert	uint8	1

Field	Value	Data Type	Length
user	<USER>	string	32
ui	<UI>	string	32
action	none	string	16
status	none	string	10
msg	<MSG>, user=<USER>, ui=<UI>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000337 type=kevent subtype=system pri=alert user=<USER>
  ui=<UI> action=none status=none msg=<MSG>, user=<USER>, ui=<UI>.
```

0802000338 DLP_FP_SOURCE_START

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000338	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	dlpsmbd	string	32
ui	dlpsmbd	string	32
action	none	string	16
status	success	string	10
msg	DLP: fingerprint source (<SOURCENAME>) start.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000338 type=kevent subtype=system pri=information
  user=dlpsmbd ui=dlpsmbd action=none status=success msg=DLP: fingerprint source
  (<SOURCENAME>) start.
```

0802000503 RSD_PARTITION_FAIL

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000503	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	rsd	string	32
ui	rsd	string	32
action	none	string	16
status	failure	string	10
msg	rsd: partition of remote storage device failed	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000503 type=kevent subtype=system pri=error user=rsd  
ui=rsd action=none status=failure msg=rsd: partition of remote storage device failed
```

0802000504 RSD_FORMAT_FAIL

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000504	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	rsd	string	32
ui	rsd	string	32

Field	Value	Data Type	Length
action	none	string	16
status	failure	string	10
msg	rsd: format of remote storage device failed	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000504 type=kevent subtype=system pri=error user=rsd
  ui=rsd action=none status=failure msg=rsd: format of remote storage device failed
```

0802000505 RSD_FORMAT_SUCCESS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000505	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	rsd	string	32
ui	rsd	string	32
action	none	string	16
status	success	string	10
msg	rsd: format of remote storage device succeeded	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000505 type=kevent subtype=system pri=information
  user=rsd ui=rsd action=none status=success msg=rsd: format of remote storage device
  succeeded
```

0802000506 RSD_CHECK_FAIL

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000506	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	rsd	string	32
ui	rsd	string	32
action	none	string	16
status	failure	string	10
msg	rsd: check of remote storage file system failed	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000506 type=kevent subtype=system pri=error user=rsd
  ui=rsd action=none status=failure msg=rsd: check of remote storage file system failed
```

0802000507 RSD_CHECK_SUCCESS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000507	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	rsd	string	32
ui	rsd	string	32
action	none	string	16
status	success	string	10
msg	rsd: check of remote storage file system succeeded	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000507 type=kevent subtype=system pri=information
user=rsd ui=rsd action=none status=success msg=rsd: check of remote storage file
system succeeded
```

0802000508 RSD_MOUNT_FAIL

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000508	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	rsd	string	32
ui	rsd	string	32
action	none	string	16
status	failure	string	10
msg	rsd: mount of remote storage device failed	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000508 type=kevent subtype=system pri=error user=rsd
ui=rsd action=none status=failure msg=rsd: mount of remote storage device failed
```

0802000509 RSD_MOUNT_SUCCESS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000509	string	10

Field	Value	Data Type	Length
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	rsd	string	32
ui	rsd	string	32
action	none	string	16
status	success	string	10
msg	rsd: mount of remote storage device succeeded	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000509 type=kevent subtype=system pri=information
  user=rsd ui=rsd action=none status=success msg=rsd: mount of remote storage device
  succeeded
```

0802000510 RSD_UNMOUNT_FAIL

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000510	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	rsd	string	32
ui	rsd	string	32
action	none	string	16
status	failure	string	10
msg	rsd: unmount of remote storage device failed	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000510 type=kevent subtype=system pri=error user=rsd
  ui=rsd action=none status=failure msg=rsd: unmount of remote storage device failed
```

0802000511 RSD_UNMOUNT_SUCCESS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000511	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	rsd	string	32
ui	rsd	string	32
action	none	string	16
status	success	string	10
msg	rsd: unmount of remote storage device succeeded	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000511 type=kevent subtype=system pri=information
user=rsd ui=rsd action=none status=success msg=rsd: unmount of remote storage device
succeeded
```

0802000513 SYSTEM_STARTED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000513	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	none	string	32

Field	Value	Data Type	Length
ui	none	string	32
action	bootup	string	16
status	none	string	10
msg	System started	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000513 type=kevent subtype=system pri=information user=
  ui= action=bootup status=none msg=System started
```

0802000514 CAM_LICENSE_UPDATED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000514	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	none	string	16
status	none	string	10
msg	<CAMTYPE> camera license: <MSG> by user <USER> via <UI>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000514 type=kevent subtype=system pri=information
  user=<USER> ui=<UI> action=none status=none msg=<CAMTYPE> camera license: <MSG> by
  user <USER> via <UI>.
```

0802000515 CAM_LICENSE_REMOVED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000515	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	<USER>	string	32
ui	<UI>	string	32
action	none	string	16
status	none	string	10
msg	<CAMTYPE> camera license has been removed by user <USER> via <UI>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000515 type=kevent subtype=system pri=information
user=<USER> ui=<UI> action=none status=none msg=<CAMTYPE> camera license has been
removed by user <USER> via <UI>.
```

0802000516 SERVICE_VIDEO_IMAGE_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000516	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	none	string	32
ui	none	string	32
action	none	string	16
status	failure	string	10
msg	'service video-image' Failed to get image snapshot for cameras: <CAMERAS>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000516 type=kevent subtype=system pri=error user= ui=
  action=none status=failure msg='service video-image' Failed to get image snapshot for
  cameras: <CAMERAS>.
```

0802000517 SERVICE_VIDEO_IMAGE_UPLOAD_ERROR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000517	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	none	string	32
ui	none	string	32
action	none	string	16
status	failure	string	10
msg	'service video-image' Failed to upload image snapshots for cameras: <CAMERAS>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000517 type=kevent subtype=system pri=error user= ui=
  action=none status=failure msg='service video-image' Failed to upload image snapshots
  for cameras: <CAMERAS>.
```

0802000518 RSD_NOT_MOUNTED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000518	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	rsd	string	32
ui	rsd	string	32
action	none	string	16
status	failure	string	10
msg	rsd: remote storage device is not mounted ('<STATTXT>')	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000518 type=kevent subtype=system pri=error user=rsd
  ui=rsd action=none status=failure msg=rsd: remote storage device is not mounted
  ('<STATTXT>')
```

0802000519 HWMON_HIGH_CPU_TEMP

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000519	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	hwmon	string	32
ui	hwmon	string	32
action	none	string	16
status	success	string	10
msg	High CPU temperature reached 1 C.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000519 type=kevent subtype=system pri=warning user=hwmon
  ui=hwmon action=none status=success msg=High CPU temperature reached 1 C.
```

0802000520 HWMON_CRITICAL_CPU_TEMP

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000520	string	10
type	kevent	string	16
subtype	system	string	20
pri	critical	uint8	1
user	hwmon	string	32
ui	hwmon	string	32
action	none	string	16
status	success	string	10
msg	Critical CPU temperature reached 1 C.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000520 type=kevent subtype=system pri=critical user=hwmon
  ui=hwmon action=none status=success msg=Critical CPU temperature reached 1 C.
```

0802000523 CAMERA_MAXIMUM_EXCEEDED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000523	string	10
type	kevent	string	16

Field	Value	Data Type	Length
subtype	system	string	20
pri	warning	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Cameras are disabled due to limit exceeded (<CTEXT>). Re-enable desired cameras.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000523 type=kevent subtype=system pri=warning user=system
  ui= action=none status=none msg=Cameras are disabled due to limit exceeded (<CTEXT>).
  Re-enable desired cameras.
```

0802000524 CAMERA_ACTION

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000524	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	<CTYPE> camera <CNAME> <CTEXT>.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000524 type=kevent subtype=system pri=information
  user=system ui= action=none status=none msg=<CTYPE> camera <CNAME> <CTEXT>.
```

0802000525 CAMERA_COUNT

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000525	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	<CTYPE> cameras: 1 active, 2 inactive	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000525 type=kevent subtype=system pri=information
user=system ui= action=none status=none msg=<CTYPE> cameras: 1 active, 2 inactive
```

0802000526 SMARTD_MESSAGE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000526	string	10
type	kevent	string	16
subtype	system	string	20
pri	critical	uint8	1
user	smartd	string	32
ui	smartd	string	32

Field	Value	Data Type	Length
action	none	string	16
status	failure	string	10
msg	SMART failure on disk <DISK> detected: <MESSAGE>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000526 type=kevent subtype=system pri=critical
  user=smartd ui=smartd action=none status=failure msg=SMART failure on disk <DISK>
  detected: <MESSAGE>
```

0802000530 AUTOINSTALL_IMAGE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000530	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Installing image <IMAGE> from USB.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000530 type=kevent subtype=system pri=information
  user=system ui= action=none status=none msg=Installing image <IMAGE> from USB.
```

0802000531 AUTOINSTALL_CONFIG

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000531	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Installing configuration <CONFIG> from USB.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000531 type=kevent subtype=system pri=information
user=system ui= action=none status=none msg=Installing configuration <CONFIG> from
USB.
```

0802000532 AUTOINSTALL_CAMERA_CONFIG

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000532	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Configuring cameras using configuration file <CONFIG> from USB.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000532 type=kevent subtype=system pri=information
  user=system ui= action=none status=none msg=Configuring cameras using configuration
  file <CONFIG> from USB.
```

0802000533 AUTOINSTALL_CAMERA_NOT_FOUND

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000533	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Camera <NAME> not found.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000533 type=kevent subtype=system pri=warning user=system
  ui= action=none status=none msg=Camera <NAME> not found.
```

0802000534 AUTOINSTALL_CAMERA_OK

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000534	string	10

Field	Value	Data Type	Length
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Camera <NAME> added.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000534 type=kevent subtype=system pri=information
user=system ui= action=none status=none msg=Camera <NAME> added.
```

0802000535 AUTOINSTALL_CAMERA_FAIL

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000535	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Camera <NAME> add failed: '<MSG>'	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000535 type=kevent subtype=system pri=warning user=system
ui= action=none status=none msg=Camera <NAME> add failed: '<MSG>'
```

0802000536 AUTOINSTALL_CAMERA_COMPLETE

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000536	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Camera autoinstall complete, 1 added, 2 failed.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000536 type=kevent subtype=system pri=information
user=system ui= action=none status=none msg=Camera autoinstall complete, 1 added, 2
failed.
```

0802000537 AUTOINSTALL_LOCAL_CONFIG

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000537	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32

Field	Value	Data Type	Length
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Applying local config using configuration file <CONFIG> from USB.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000537 type=kevent subtype=system pri=information
user=system ui= action=none status=none msg=Applying local config using configuration
file <CONFIG> from USB.
```

0802000538 AUTOINSTALL_LOCAL_OK

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000538	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Local config update successful.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000538 type=kevent subtype=system pri=information
user=system ui= action=none status=none msg=Local config update successful.
```

0802000539 AUTOINSTALL_LOCAL_FAIL

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000539	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Local config update failed.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000539 type=kevent subtype=system pri=warning user=system
  ui= action=none status=none msg=Local config update failed.
```

0802000540 AUTOINSTALL_LICENSE_INSTALL

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000540	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Installing camera license(s) using license file <LICFILE> from USB.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000540 type=kevent subtype=system pri=information
  user=system ui= action=none status=none msg=Installing camera license(s) using license
  file <LICFILE> from USB.
```

0802000541 AUTOINSTALL_LICENSE_OK

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000541	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	<LICTYPE> camera license install successful.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000541 type=kevent subtype=system pri=information
  user=system ui= action=none status=none msg=<LICTYPE> camera license install
  successful.
```

0802000542 AUTOINSTALL_LICENSE_FAIL

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000542	string	10

Field	Value	Data Type	Length
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	<LICTYPE> camera license install failed: '<MSG>'	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000542 type=kevent subtype=system pri=warning user=system
  ui= action=none status=none msg=<LICTYPE> camera license install failed: '<MSG>'
```

0802000543 SYSTEM_DISK_READONLY_FS

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000543	string	10
type	kevent	string	16
subtype	system	string	20
pri	critical	uint8	1
user	none	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	One or more partitions of file system are now read-only.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000543 type=kevent subtype=system pri=critical user= ui=
  action=none status=none msg=One or more partitions of file system are now read-only.
```

0802000544 AUTOINSTALL_CAMFW_INSTALL

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000544	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Installing camera firmware files from USB.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000544 type=kevent subtype=system pri=information  
user=system ui= action=none status=none msg=Installing camera firmware files from USB.
```

0802000545 AUTOINSTALL_CAMFW_OK

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000545	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	system	string	32
ui	none	string	32

Field	Value	Data Type	Length
action	none	string	16
status	none	string	10
msg	Camera firmware <FILE> install successful.	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000545 type=kevent subtype=system pri=information
user=system ui= action=none status=none msg=Camera firmware <FILE> install successful.
```

0802000546 AUTOINSTALL_CAMFW_FAIL

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000546	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	system	string	32
ui	none	string	32
action	none	string	16
status	none	string	10
msg	Camera firmware <FILE> install failed: '<MSG>'	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000546 type=kevent subtype=system pri=warning user=system
ui= action=none status=none msg=Camera firmware <FILE> install failed: '<MSG>'
```

0802000700 NTPMOND_SYNC_LOST

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000700	string	10
type	kevent	string	16
subtype	system	string	20
pri	warning	uint8	1
user	ntpmond	string	32
ui	ntpmond	string	32
action	none	string	16
status	none	string	10
msg	ntpmond: ntp synchronization lost	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000700 type=kevent subtype=system pri=warning
user=ntpmond ui=ntpmond action=none status=none msg=ntpmond: ntp synchronization lost
```

0802000701 NTPMOND_SYNC_ESTABLISHED

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000701	string	10
type	kevent	string	16
subtype	system	string	20
pri	information	uint8	1
user	ntpmond	string	32
ui	ntpmond	string	32
action	none	string	16
status	none	string	10
msg	ntpmond: ntp synchronization established	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000701 type=kevent subtype=system pri=information
user=ntpmondd ui=ntpmondd action=none status=none msg=ntpmondd: ntp synchronization
established
```

0802000702 NTPMOND_ERR

Meaning

Fields

Field	Value	Data Type	Length
log_id	0802000702	string	10
type	kevent	string	16
subtype	system	string	20
pri	error	uint8	1
user	ntpmondd	string	32
ui	ntpmondd	string	32
action	none	string	16
status	none	string	10
msg	ntpmondd: <MSG>	string	512

Example

```
2023-10-24 11:53:02.041 log_id=0802000702 type=kevent subtype=system pri=error user=ntpmondd
ui=ntpmondd action=none status=none msg=ntpmondd: <MSG>
```



www.fortinet.com

Copyright© 2025 Fortinet, Inc. All rights reserved. Fortinet®, FortiGate®, FortiCare® and FortiGuard®, and certain other marks are registered trademarks of Fortinet, Inc., and other Fortinet names herein may also be registered and/or common law trademarks of Fortinet. All other product or company names may be trademarks of their respective owners. Performance and other metrics contained herein were attained in internal lab tests under ideal conditions, and actual performance and other results may vary. Network variables, different network environments and other conditions may affect performance results. Nothing herein represents any binding commitment by Fortinet, and Fortinet disclaims all warranties, whether express or implied, except to the extent Fortinet enters a binding written contract, signed by Fortinet's Chief Legal Officer, with a purchaser that expressly warrants that the identified product will perform according to certain expressly-identified performance metrics and, in such event, only the specific performance metrics expressly identified in such binding written contract shall be binding on Fortinet. For absolute clarity, any such warranty will be limited to performance in the same ideal conditions as in Fortinet's internal lab tests. Fortinet disclaims in full any covenants, representations, and guarantees pursuant hereto, whether express or implied. Fortinet reserves the right to change, modify, transfer, or otherwise revise this publication without notice, and the most current version of the publication shall be applicable.